


THANK YOU FOR PURCHASING A WHIRLPOOL PRODUCT

To receive more comprehensive assistance, please register the appliance at www.whirlpool.eu/register

Before using the appliance, please carefully read the Safety Instructions.
Before using the machine, it is imperative that the transport bracket is removed.
For more detailed instructions on how to remove it, please see Installation Guide.

CONTROL PANEL

- 1 WASH CYCLE SELECTOR knob
- 2 START/PAUSE button >||
- 3 RESTART/DRAIN button
- 4 DELAY START button
- 5 FAVOURITE button
- 6 CHILD LOCK function =O sec
- 7 SPIN SPEED button
- 8 Time
- 9 Wash cycle phase

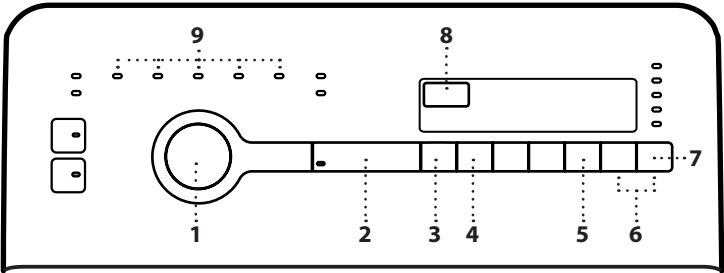

INDICATOR LIGHTS
Door open
Anomaly: Service
Anomaly: Clean the pump
Anomaly: Water tap closed
In the event of any failure, please refer to the TROUBLESHOOTING section

WASH CYCLE TABLE

Maximum load 6 kg Power input in off mode 0.11 W/in left-on mode 0.11 W						Detergents and Additives			Recommended detergent		Residual dampness %	Energy consumption kWh	Total water l
Wash cycles	Temperature		Maximum spin (r.p.m.)	Maximum load (kg)	Duration (minutes)	Pre-washing	Main washing cycle	Fabric softener	Powder	Liquid			
	Default	Range				I	II	🌸					
Mixed	40°C	40°C	1,000	3.0	**	—	●	○	✓	✓	—	—	—
Cotton	60°C	60°C	1,000	6.0	3:30	—	●	○	✓	✓	46	0,78	53
		40°C	1,000	3.0	2:45	—	●	○	✓	✓	32	0,71	53
		40°C	1,000	1.5	2:00	—	●	○	✓	✓	32	0,53	53
Colours	40°C	40°C	1,000	4.0	**	○	●	○	✓	—	—	—	—
Wool	20°C	Cold	1,000	1.0	**	—	●	○	—	✓	—	—	—
Spin	—	—	1,000	6.0	**	—	—	—	—	—	—	—	—
Rinse & Spin	—	—	1,000	6.0	**	—	—	○	—	—	—	—	—
Delicates	30°C	30°C	1,000	1.5	**	○	●	○	—	✓	—	—	—
Synthetics	40°C	40°C - 60°C	1,000	3.0	1:50	○	●	○	✓	✓	50	0,56	40
Cotton	40°C	30°C - 95°C	1,000	6.0	3:00	○	●	○	✓	✓	61	0,97	57

● Required dosage ○ Optional dosage

☼ **Cotton** - Test wash cycles are in compliance with Regulation 1061/2010. These are reference cycles for energy labelling. They should be used at 40°C or at 60°C. These cycles are designed for normally soiled cotton loads and are the most efficient in terms of both electricity and water consumption. The actual water temperature may differ from the indicated value.

For all testing institutes
Long cotton cycle: set wash cycle Cotton at a temperature of 40°C.
Long synthetics cycle: set wash cycle Synthetics at a temperature of 40°C.


These data may vary for each household in relation to the possibility of different temperatures, different pressure of the incoming water etc. Approximate cycle duration values refer to the default settings of the cycles, without options.

* After the cycle ends and after spinning with the maximum selectable spin speed, in default cycle settings.

**** The duration of the wash cycles can be checked on the display.**
The sensor technology adapts the water, energy and cycle duration to your wash load.

PRODUCT DESCRIPTION

- 1. Door handle
- 2. Door
- 3. Control panel
- 4. Detergent dispenser
- 5. Drum
- 6. Water filter — behind the lid
- 7. Movement lever (depending on model)
- 8. Adjustable feet (2 pcs)

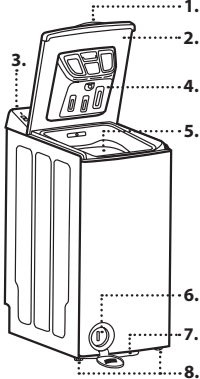


DETERGENT DISPENSER

Compartment for the main wash cycle detergent II
Detergent for the main wash cycle, stain removers or water softener.

Compartment for pre-wash detergent I
Pre-soaking agent.

Compartment for softener 🌸
Fabric softener. Liquid starch. Bleach.
Fabric softener, starch or bleach must not exceed the “MAX” level in the compartment.

Release button
Press to remove the tray to clean it.

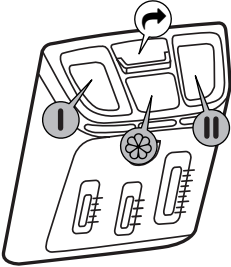

WASH CYCLES

Always follow the instructions on the labels to choose the right cycle for your type of garment. The value indicated inside the basin symbol is the maximum recommended temperature for washing the garment.



Mixed

For washing lightly to moderately soiled garments made of cotton, linen, synthetic fibres and a mixture of fibres.

Cotton

For washing moderately soiled garments made of cotton. This is a standard cycle for washing cotton garments at 40°C and 60°C with an optimal consumption of water and electricity.

Colours

Linen of delicate fabrics, white or of pastel colours.

Delicate washing cycle to prevent greying or yellowing of linen. Use a strong detergent and also stain removers or oxygen-based bleaches, if necessary. Do not use liquid detergent.

Wool

Wool cycle can be used for all wool garments, even labelled as “hand wash”. For best results, use special detergents and **do not exceed the maximum load (kg)**.

Spin

This mode involves centrifuging the loaded garments and then draining water. For robust textiles.

Rinse & Spin

A separate rinse cycle and intensive spin cycle. For robust textiles.

Delicates

For washing very delicate garments. It is advisable to turn the garments inside out before washing them.

Synthetics

For washing soiled garments made from synthetic fibres (such as polyester, polyacrylic, viscose etc.) or their blends with cotton.

Cotton

For normally to heavily soiled garments made from cotton.

FIRST TIME USE

To remove industrial dirt, select the SYNTHETICS cycle at 60°C. Add a small amount of powder detergent (maximum 1/3 of the quantity recommended by the detergent manufacturer for lightly soiled garments)  to the main wash cycle compartment of the detergent dispenser. Start the cycle **without adding any laundry**.

DAILY USE

Prepare your laundry according to the recommendations in the HINTS AND TIPS section. Load the laundry, close the drum door and make sure it is closed properly. Pour in the detergent and any additives. Observe the dosing recommendations on the detergent pack. Close the lid. Turn the WASH CYCLE SELECTOR knob to the desired cycle and select any options, if necessary. The display will show the duration of the selected cycle (in hours and minutes) and the START/PAUSE  button indicator will flash. The spin speed can be changed by pressing the SPIN SPEED button. The indicator of the selected spin speed lights up. Open the water tap and press the START/PAUSE  button to start the wash cycle. The START/PAUSE  indicator lights up and the door locks. As the load and temperature of the incoming water may differ, the remaining time is recalculated in certain phases of the cycle. In such cases, an animation appears on the display where the time should be indicated,  .

PAUSING OR CHANGING A RUNNING CYCLE

To pause the wash cycle, press the START/PAUSE  button, and the indicator will begin to flash. Select any new cycle, option or spin speed if you want to change this setting. Press the START/PAUSE  button again to run the wash cycle from the moment it was stopped. Do not add detergent for this cycle.

DOOR OPEN INDICATOR

Before starting the cycle and after its end, the DOOR OPEN indicator will light up, indicating that the lid can be opened. While the wash cycle is running, the lid remains locked and should never be forcibly opened. If there is an urgent need to open it during the cycle, e.g. to add more laundry or remove laundry that was loaded incorrectly, press the START/PAUSE  button. If the temperature is not too high, the DOOR OPEN indicator lights up. There may be a situation where the door can only be opened after a while. Press the START/PAUSE  button to continue the cycle.

CYCLE END

DOOR OPEN indicator lights up and **End** appears on the display. Turn the WASH CYCLE SELECTOR knob to the “O” position and close the water tap. Open the machine door, open the drum and unload the laundry from the machine. Leave the machine door open for a while to allow the machine to dry inside. After about a quarter of an hour, the washing machine will turn off completely to save energy.

To cancel the cycle that is currently running, press and hold the RESTART/DRAIN button for at least 3 seconds. The water will be drained. There may be a situation where the door can only be opened after a while.

OPTIONS

! If a combination of the cycle and one or more additional options is not possible, the indicator lights turn off automatically.

! Unacceptable combinations of options are automatically deactivated.

Colours 15°

The energy needed to heat water is saved, and the washing results remain good. Colour retention is ensured when washing coloured laundry. Recommended only for lightly soiled garments without stains. The detergent must be adapted to low washing temperatures.

FreshCare

Select this option if you cannot remove the laundry immediately after the end of the cycle, or if you often forget the laundry in the washing machine. This mode will maintain the freshness of the laundry. The washing machine will periodically rotate the laundry in the drum after the cycle end. When this function is active, the FRESHCARE button light flashes and an animation appears on the display. Periodic rotation lasts up to about 6 hours after the end of the selected washing cycle. You can stop it at any time by pressing the FRESHCARE button. The door can only be opened after a while. When the FreshCare cycle is finished, the display shows **End**.

Delay start

To start the selected cycle automatically later, press the DELAY START button and set the desired delay. The lamp corresponding to the DELAY START button will light up and go out when the cycle starts. After pressing the START/PAUSE  button, the countdown of the delay will begin. You can reduce the preset number of hours by pressing the DELAY START button again. **Do not use liquid detergent for this option.** To cancel the DELAY START mode, turn the WASH CYCLE SELECTOR knob to another position.

Rapid

Faster washing by reducing the duration of the cycle. Only recommended for a small amount of lightly soiled laundry.

Pre-washing

Only for heavily soiled laundry (for example, with sand or soil). The cycle time increases by about 15 minutes. If the pre-washing option is activated, please do not use liquid detergent.

Intensive rinse

Allows for removing detergent residues from the laundry by prolonging the rinse cycle. Partly suitable for washing clothes for children and highly allergic individuals and in areas with soft water.

Spin speed

The corresponding spin speed is set for each cycle. To modify the spin speed, press the SPIN SPEED button. If you select the spin speed “0”, the final spin will be cancelled, but the intermediate spin peaks during the rinse cycle will remain. Only the water will be drained.

FAVOURITE

If you have a cycle setting you use frequently, the device offers to save one setting for each cycle so that it can be used again with one touch of a button.

To configure:

Select the desired cycle, spin speed and options, press and hold FAVOURITE button for at least 3 seconds. The lamp of FAVOURITE button flashes briefly and then starts to glow — the cycle settings are saved.

The next time you want to use your individual cycle settings, select the cycle, press FAVOURITE button and start the cycle by pressing START/PAUSE  button.

To change settings:

Select the desired spin speed programme and options, press and hold FAVOURITE button for at least 3 seconds. The previously saved cycle settings will be replaced with the new ones.

CHILD LOCK 3 sec

You can lock the buttons on the control panel to prevent them from being misused (for example, to prevent them from being pressed by children). Press both CHILD LOCK buttons at the same time and keep them pressed for at least 3 seconds. The key symbol  will appear on the display. To unlock the buttons, perform the above steps again.

BLEACHING

Wash the laundry in the selected COTTON or SYNTHETICS cycle adding the appropriate amount of chlorine bleach to the SOFTENER compartment (carefully close the dispenser door). Immediately after the cycle, turn the WASH CYCLE SELECTOR knob and run the desired cycle again to get rid of the residual smell of bleach; softener can be added, if desired. **It is forbidden to load chlorine bleach and softener at the same time in the SOFTENER compartment.**

HINTS AND TIPS

Divide the laundry as follows:

Type of fabric (cotton, mixed fibres, synthetics, wool, garments to be hand-washed)/care instructions indicated on the label. Colour (separate coloured garments from whites, wash new coloured garments separately). Delicates (wash small garments, such as nylon tights, and items with hooks, such as bras, in a cloth bag or pillowcase with a zip).

Empty all pockets

Objects such as coins or a lighter can damage the laundry and the drum of the washing machine.

Inner surface of the machine

If you never or only rarely wash laundry at 95°C, we recommend you run the 95°C cycle without laundry from time to time, with the addition of a small amount of detergent to keep the inside of the washing machine clean.

CLEANING AND MAINTENANCE

Before cleaning and maintenance, switch off the washing machine and unplug it. Check the inlet hose regularly for brittleness and cracks.

Cleaning the outer surface of the washing machine

Use a soft damp cloth to clean the outer surface of the washing machine. Do not clean the control panel with glass or all-purpose cleaners, abrasive powders and the like, as they may damage the printed marks.

Detergent dispenser

Regularly clean the detergent dispenser, at least 3-4 times a year, to prevent the accumulation of detergent.

To unlock the detergent dispenser, press the RELEASE button and remove the dispenser. A small amount of water may remain in the dispenser, so keep it upright. Wash the dispenser under running water. You can also remove the siphon cap at the back of the dispenser for cleaning. Install the siphon cap in the dispenser (if removed). Put the dispenser in place. To do this, insert the tabs on its bottom into the corresponding recesses of the window and push the dispenser into the window until the dispenser locks in place. **Make sure the dispenser is installed correctly.**

Checking the water inlet hose

Check the inlet hose regularly for brittleness and cracks. If the hose is damaged, replace it with a new one, which can be purchased from an after-sales service centre or our specialised dealer. Depending on the type of hose, please follow these steps: If the inlet hose has a transparent coating, periodically check it for areas of more intense colour. If so, the hose may be leaking and must be replaced. For shut-off hoses (if available): check the small safety valve the inspection window (see arrow). If it is red, the function of water shut-off has triggered. The hose must be replaced with a new one. To unscrew this hose, press the release button (if available) and unscrew the hose at the same time.

Cleaning mesh filters in the water supply hose

Check and clean regularly (at least two or three times a year).

Close the water tap and release the inlet hose from the tap. Clean the internal mesh filter and reattach the water supply hose to the tap. Now, disconnect the inlet hose that is connected to the back panel of the washing machine. Remove the mesh filter from the connection to the washing machine with universal pliers and clean it. Install the mesh filter and tighten the inlet hose in place. Open the water tap and make sure the connections are completely tight.

Cleaning the water filter/draining residual water

The washing machine is equipped with a self-cleaning pump. The filter holds items such as pins, coins, hairpins, etc. that remain in the washing machine. If you used a hot wash cycle, wait until the water has cooled down before draining. Clean the water filter regularly to avoid clogging, which makes it impossible to drain the water. If the water does not drain, the indicator will show that the water filter may be clogged.

Open the filter cover using a coin. Place a wide flat container under the water filter to collect the water that will drain. Slowly turn the filter counter-clockwise until the water drains out. Allow the water to flow out without removing the filter. Once the container is full, close the water filter by turning it clockwise. Empty the container. Repeat the procedure until all the water has been drained. This washing machine is equipped with a variety of automatic safety functions and feedback functions.

Then, remove the water filter by turning it anticlockwise. Clean the water filter (remove deposits in the filter and clean it under running water) and the filter chamber. Make sure that the pump impeller (in the housing behind the filter) does not interfere. Insert the water filter and close the filter cover. Install the water filter again by turning it clockwise. Turn it until you feel resistance. To check the tightness of the water filter, you can pour about 1 litre of water into the drum and see if water leaks from the filter. Then, close the filter cover.


Door seal

Periodically check the condition of the door seal and from time to time clean the seal with a damp cloth.

Removing an object trapped between the drum and the tank

If an object accidentally gets stuck in the gap between the drum and the tank, it can be found there thanks to one of the removable blades of the drum.

Unplug the washing machine. Unload the laundry from the machine. Close the drum door and turn the drum half a turn (Figure a). Press the plastic tip with a screwdriver, at the same time as manually moving the blade from left to right (Figures b, c), it will fall into the drum. Open the drum. The object can be pulled out through the hole in the drum. Put the blade in place inside the drum. Insert the plastic tip over the hole on the right side of the drum (Figure d). Then, slide the plastic blade from right to left until it locks into place. Close the drum door again, turn the drum half a turn and check that the blade is locked at all the mounting points. Plug the washing machine into an electrical outlet.

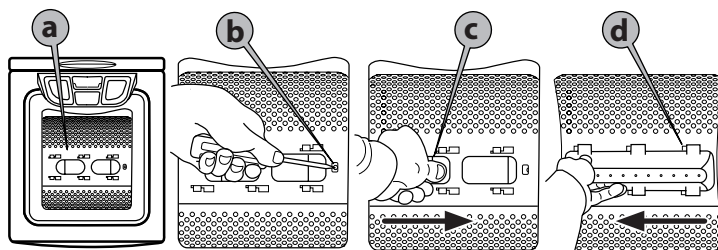

TRANSPORT AND HANDLING

Unplug the appliance and close the water tap. Disconnect the inlet hose from the water tap and remove it from the drain point. Remove all the remaining water from the hoses and the washing machine and secure the hoses so that they are not damaged during transport. To facilitate the movement of the machine, manually pull the movement lever located on the bottom panel (if provided for your model). Pull the washing machine all the way out. Then, push the lever back to the original stable position. Reinstall the transport bracket. Follow the reverse instructions for removing the transport bracket in the INSTALLATION MANUAL.

TROUBLESHOOTING

The washing machine may sometimes not work properly for certain reasons. Before contacting the After sales centre, we recommend trying to resolve the issue using the following list.

Anomalies	Possible causes/Solution
The drum of the washing machine does not spin and/or the cycle does not start.	• The appliance is not plugged into the socket fully. • There is a fault in the electrical system. • The door is not shut properly. • CHILD LOCK $\Rightarrow$ 3 sec function is activated (if available).
The wash cycle does not start.	• THE START/PAUSE $\triangleright$ button has not been pressed. • The water tap is not open. • DELAY START function is activated.
The washing machine stops during the cycle and the START/PAUSE $\triangleright$ button flashes	• RINSE DELAY function is activated (if available). • The cycle is changed - select the desired cycle once again and press the START/PAUSE $\triangleright$ button.
The device vibrates	• The washing machine is not level. • The transport bracket is not removed; it must be removed before using the washing machine.
Unsatisfactory results of the final spin. The laundry remains very damp. After the end of the cycle, depending on the model, the SPIN/DRAIN indicator, SPIN SPEED on the display or SPIN SPEED indicator flashes.	• An unbalanced amount of laundry during rotation caused a change in the rotation phase to avoid damaging the washing machine. Therefore, the laundry remains very damp. The reason for the imbalance may be a small amount of loaded laundry (the load consists of only a few large enough garments or garments that absorb water well, such as towels) or large/heavy garments. • If possible, avoid loading small portions of laundry. • A low spin speed is selected with the SPIN SPEED button.
The machine indicates an error code (for example F-02, F-..) and/or SERVICE indicator lights up. 	• Turn off the machine, unplug it and wait about 1 minute before turning it on again. • If the problem persists, please call the after-sales service centre.
CLEAR PUMP indicator lights up	• Used water does not drain. • Clean the water filter.
WATER TAP CLOSED indicator lights up	• No or insufficient water supply to the washing machine.



Company policy, regulatory documentation, spare parts ordering information and additional product information are available


- on our website docs.whirlpool.eu i parts-selfservice.whirlpool.com
- Use a QR code

Alternatively, **contact our after-sales service centre** (see phone number in the warranty booklet). When contacting the after-sales service centre, report the codes on your product's identification plate.

Additional information on repairs and maintenance can be found on the website

www.whirlpool.eu

Information on the model can be obtained by the QR code available on the energy consumption data plate. This plate contains, among other things, the model number by which you can check the information on the registry portal <https://eprel.ec.europa.eu>.

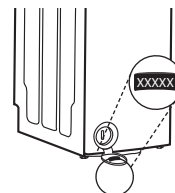

Whirlpool

400011616947