


Read the Instructions for Use carefully before using the appliance.

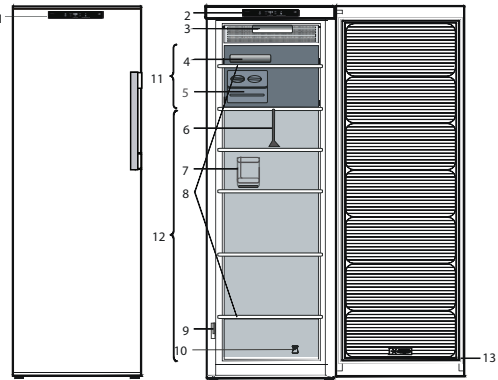

- 1. External Indicators of Power On and alarms
- 2. Control panel
- 3. LED's lighting*
- 4. Ice packs*
- 5. Ice Mate* or Ice tray*
- 6. Drawer divider*
- 7. Bottle rack*
- 8. Glass shelves
- 9. Rating plate with commercial name
- 10. Door reversibility kit
- 11. Area for freezing fresh food or to store frozen food
- 12. Area for storing frozen foods
- 13. Door seal

* Available on selected models

HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the appliance. When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the freezer compartment settings light-up.

HOW TO REVERSE THE DOOR SWING

- see enclosed Instructions for Use (Version_2)
Is recommended to reverse door swing by two persons. There is not foreseen door reversibility for:
- models with integrated handle
- models with glass panel on the door.

Specifications, technical data and images may vary from model to model

POWER ON (EXTERNAL LED) indicator

An external green LED showing that the appliance is switched ON. It automatically turns off when opening the door.

PARTY MODE indicator

FAST FREEZE indicator

ON/STANDBY button

To put the product in Stand-by, press and hold for 3 seconds. All the icons turn off except On/Standby indicator. To reactivate the appliance press once (briefly) this button.

FREEZE CONTROL indicator

PARTY MODE / FREEZE CONTROL button

Party Mode

Press to activate/deactivate the Party Mode function. Use this function to chill drinks inside the freezer compartment.


Important: do not leave the bottle inside the freezer compartment longer than the function is active (30 minutes).

Freeze Control

Freeze Control is an advanced technology that reduces temperature fluctuations in the whole freezer compartment to minimum. To activate/deactivate the Freeze Control function simply press FREEZE CONTROL button. If the function is engaged and the user modify the freezer temperature out of the working range, the function is automatically switched off. In case of Fast freezing is engaged, the function "Freeze control" is inhibited until the Fast Freezing function switched off (see the Instructions for Use).

6TH SENSE FREEZE CONTROL

6th Sense Freeze Control is an advanced technology that reduces freeze burns and food preserves its original quality and color.

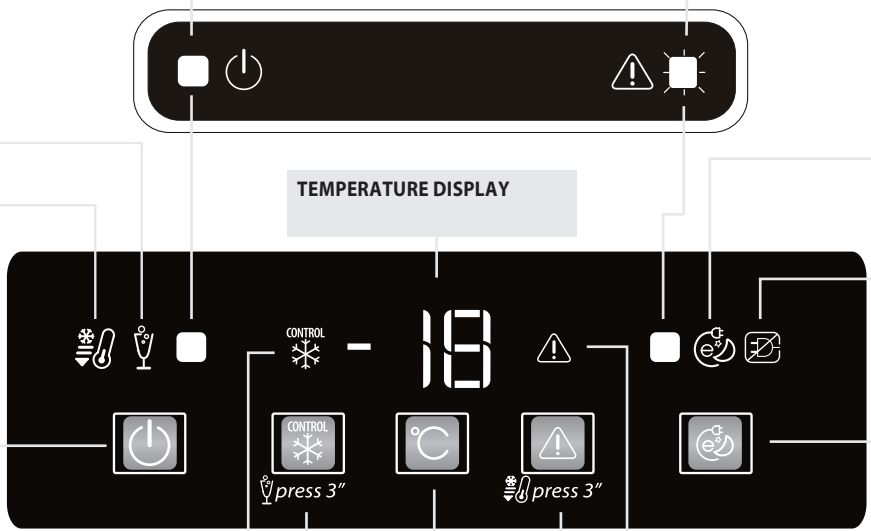

TEMPERATURE button

Temperature Setting

The appliance is normally factory-set for operation at the recommended temperature of -18°C. The internal temperature can be adjusted between -16°C and -24°C, proceeding as follows:

- Press the temperature setting button (°C). The storage temperature can be changed by -1°C with each pressure of the button: the value changes cyclically between -16°C and -24°C.

ALARM (EXTERNAL LED)

This red LED can blink to show the occurrence of an alarm or a failure even when the door is closed. Please open the door and check on the internal Control Panel which alarm/failure is occurring.

ECO NIGHT indicator

BLACK OUT ALARM

Long Black-out Alarm indicator. (see the Instructions for Use)

ECO NIGHT (NIGHT TIME RATE) button

Press to activate/deactivate the Eco Night function. The Eco Night function enables appliance energy consumption to be concentrated in the reduced rate hours, generally at night (see the Instructions for Use).

ALARM indicator (see the below Alarms Table)

STOP ALARM/FAST FREEZE button

Stop Alarm

Press in case of alarm.

Fast Freeze

Press for 3 seconds to activate the Fast Freeze function (see the Instructions for Use). The function switches off automatically after about 50 hours.

ALARMS TABLE

ALARM TYPE	Signal	Cause	Cure
Door open alarm	The acoustical alarm is activated and the Alarm Indicator blinks.	The door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
Temperature alarm	The Temperature display blinks (°C) and the Alarm Indicator remains on.	The inside temperature is not adequate.	Press the Stop Alarm button ; the acoustical alarm stops, the Temperature Display (°C) blinks and the Alarm Indicator remains on until a temperature < -10°C is reached.
Party Mode alarm	The Party Mode Indicator blinks and the acoustical alarm is activated.	30 min. elapsed since Party Mode function has been activated. It is time to take out the bottle from the freezer (see Instructions for Use for more details).	Press the Party Mode button or alternatively Stop Alarm button to deactivate the Party Mode alarm - and remove the bottle from the freezer.
Long black-out alarm	The Black Out Alarm icon remains on, the Alarm indicator blinks and the Temperature display (°C) blinks, showing the maximum temperature reached during blackout.	Prolonged power failure, able to cause the inside temperature to increase to 0°C.	Press the Stop Alarm button ; the acoustical alarm stops, the Temperature Display (°C) blinks and the Alarm Indicator remains on until a temperature < -10°C is reached.
Malfunction	The letter "F" blinks on the display (°C).	Product malfunction.	Contact the After-sales Service.



www.whirlpool.eu/myfridge

00800-400 88 400
free-gratuit

GB FR NL ES PT BG ET EL LV LT PL AR

400005800200