



**THANK YOU FOR BUYING AN INDESIT PRODUCT**  
In order to receive a more complete assistance, please register your product on [www.indesit.com/register](http://www.indesit.com/register)



**Before using the appliance carefully read the Safety Instruction.**

## PRODUCT DESCRIPTION


### FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply.  
Connect the appliance to the power supply and turn the thermostat knob to switch on the appliance.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available).

### CONTROL PANEL

#### B. Thermostat Knob

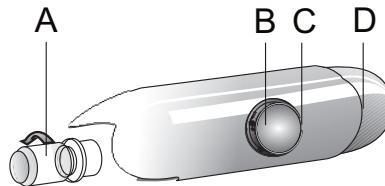

1. Light bulb
2. Thermostat knob
3. Thermostat setting indicator
4. Light button

#### FREEZING FRESH FOOD

Place fresh food to be frozen on the shelf in the freezer compartment, avoiding direct contact with food that is already frozen.  
The quantity of fresh food that can be frozen in 24 hours is written on the rating plate.  
To freeze fresh food, place the freezer compartment shelf in the bottom position.

#### FREEZER AND REFRIGERATOR COMPARTMENT TEMPERATURE


This Fridge/Freezer is switched on by means of the thermostat located inside the refrigerator compartment.

The temperature of both compartments is adjusted by turning the thermostat knob.



 


Thermostat set to **MIN**: low cooling intensity  
Thermostat set between **MIN** and **MAX**: cooling intensity can be adjusted according to the preferences.  
Thermostat set to **MAX**: maximum refrigeration intensity.  
*For the best food conservation MED position is recommended.*  
*Thermostat set to ● : cooling and lighting off.*

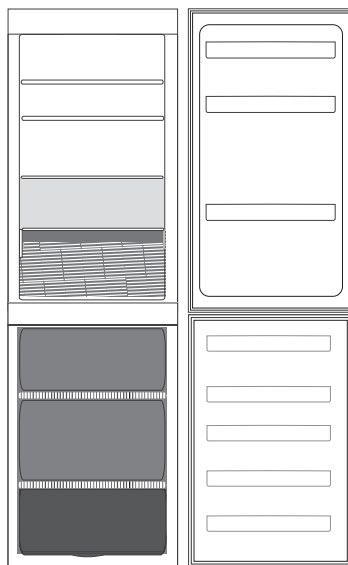Note: Displayed set points correspond to the average temperature throughout the whole refrigerator.

### HOW TO STORE FOOD AND BEVERAGE



#### Legend

-  **TEMPERATE ZONE**  
Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam
-  **COOL ZONE**  
Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt
-  **FRUIT & VEGETABLE DRAWER**
-  **FREEZING ZONE DRAWER (MAX COOL ZONE)** Suggested to freeze fresh/cooked food.
-  **FREEZER DRAWER**

# TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The appliance is not working.	There may be an appliance power supply problem.	<ul style="list-style-type: none"> <li>Check if power cable plugged into a live socket with the proper voltage.</li> <li>Check if the protection devices and fuses of the electrical system in your home</li> </ul>
There is water in the defrost pan.	This is normal in hot, damp weather. The pan can even be half full.	<ul style="list-style-type: none"> <li>Make sure the appliance is level so that the water does not overflow.</li> </ul>
The edges of the appliance cabinet, which come in contact with the door seal, are warm to the touch.	This is not a defect. This is normal in hot weather and when the compressor is running.	
The light does not work.	<p>The light may need replacing.</p> <p>The appliance may be in On/Stand-by model.</p>	<ul style="list-style-type: none"> <li>Make sure if the protection devices and fuses of the electrical system in your home work well.</li> <li>Check if the power cable is plugged into a live socket with the proper voltage</li> <li>In case the LEDs are broken the user must call the Service for exchange of the same type available only at our After-sales Service Centers or authorized dealers.</li> </ul>
The motor seems to run too much.	Motor running time depends on different things: number of door openings, amount of food stored, temperature of the room, setting of the temperature controls.	<ul style="list-style-type: none"> <li>Make sure that the appliance controls are correctly set.</li> <li>Check if there is not a large amount of food been added to the appliance.</li> <li>Check that the door is not opened too often.</li> <li>Check that the door close properly.</li> </ul>
The appliance temperature is too high.	There could be various causes (see "Solutions").	<ul style="list-style-type: none"> <li>Make sure that the condenser (back the appliance) is free of dust and fluff.</li> <li>Make sure that the door properly closed.</li> <li>Make sure that the door seals properly fitted.</li> <li>On hot days or if the room is warm, the motor naturally runs longer.</li> <li>If the appliance door has been left open for a while or if large amounts of food have been stored, the motor will run longer in order to cool down the interior of the appliance.</li> </ul>
The doors do not open and close properly.	There could be various causes (see "Solutions").	<ul style="list-style-type: none"> <li>Check that food packages are not blocking the door.</li> <li>Check that the internal parts or automatic ice maker are not out of position.</li> <li>Check that the door seals are not dirty or sticky.</li> <li>Ensure the appliance is level.</li> </ul>



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website [docs.indesit.eu](https://docs.indesit.eu)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

