

# KitchenAid

## SHAVE ICE ATTACHMENT

5KSMSIA


PRODUCT GUIDE



---

W11499128A

# PARTS AND FEATURES

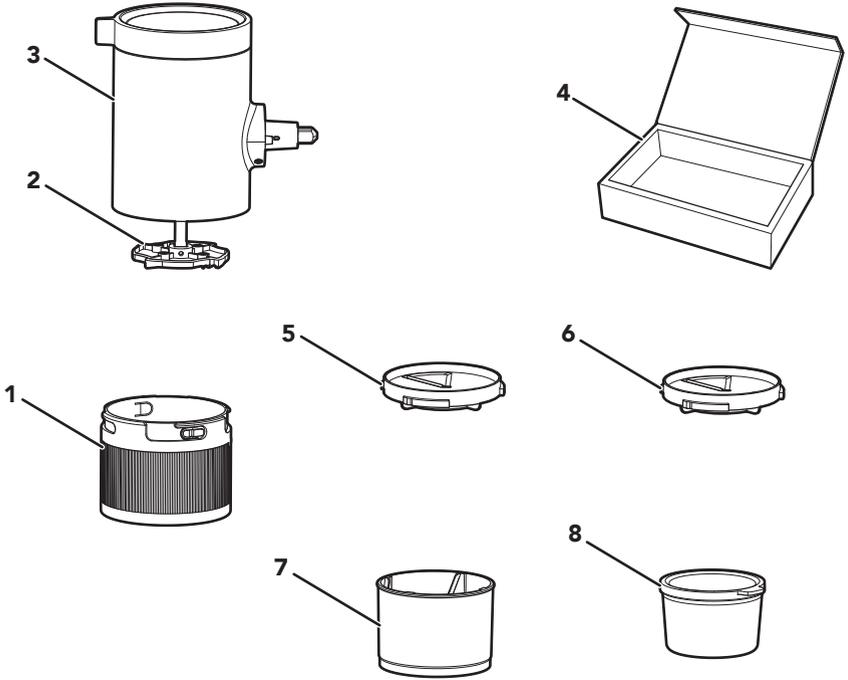

- 1. Detachable Ice Cup
- 2. Ice Cup Pusher
- 3. Main Upper Housing
- 4. Convenient Storage Box

- 5. Fine Shave Blade
- 6. Coarse Shave Blade
- 7. Ice Cup Sleeve
- 8. Plastic Ice Mold with Lid (x4)

# PRODUCT SAFETY

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

 **DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

 **WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions. Misuse of appliance may result in personal injury.
2. European Union Only: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
3. European Union Only: This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
4. This appliance is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- 5.** This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge if they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- 6.** Children should be supervised to ensure that they do not play with the appliance.
- 7.** Never leave the appliance unattended while it is in operation.
- 8.** Turn the appliance off (OFF/0), unplug from outlet, and detach the Shave Ice Attachment from appliance before cleaning and when not in use. Turn the appliance off and make sure the motor stops completely before putting on or taking off parts.
- 9.** The use of accessories/attachments not recommended by the appliance manufacturer may result in fire, electric shock or injury to persons.
- 10.** Do not use the appliance outdoors.
- 11.** Avoid contacting moving parts. Keep fingers out of discharge opening.
- 12.** Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
- 13.** Also see the Important Safeguards section included in the Stand Mixer “Owner’s Manual”.
- 14.** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
- 15.** Blades are sharp. Handle Carefully.
- 16.** Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.

17. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farmhouses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

## SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit [www.KitchenAid.co.uk](http://www.KitchenAid.co.uk) or [www.KitchenAid.eu](http://www.KitchenAid.eu). This may save you the cost of a service call. To receive a free printed copy of the information online, call **00 800 381 040 26**.

## GETTING STARTED

The Shave Ice Attachment is compatible with all household KitchenAid Stand Mixers. Set the Blades to Shave Ice as per requirement.

NAME	PART	ICON	INTENDED USE	SPEED
Coarse Shave Blade			For coarser ice shaving / ice chips.	10
Fine Shave Blade			For a fine, fluffy, snow-like ice shaving texture.	

**NOTE:** For detailed instructions on swapping blades, please see “CHANGING THE BLADE” section.

## TEMPERING THE ICE PUCKS

Tempering Ice means allowing the ice to adjust at room temperature until it develops a glossy, wet look and is clear from all sides. Tempering is an important step for producing the lightest and fluffiest shave ice. Many factors determine the amount of time it takes to temper. In most cases, your ice puck should be ready to use in 10 minutes or less.



**NOTE:** Ice pucks made with plain water require tempering. For mixed base recipes, refer to the recipe details for tempering instructions.

The Ice Molds are used for best performance for both coarse and fine shaving. It's easy to get shave ice from tempered ice out of the molds.


**TIP:** For the fluffiest shave ice, we recommend tempering the ice puck for 10 minutes, and then using the Fine Shaving Blade.

# PRODUCT USAGE

## ICE PUCK PREPARATION


1. Fill the ice mold with water or flavored ice base mixture of your choice.

**NOTE:** To keep the mold from overflowing while freezing, be sure not to fill past the fill line visible just below the rim of the mold.

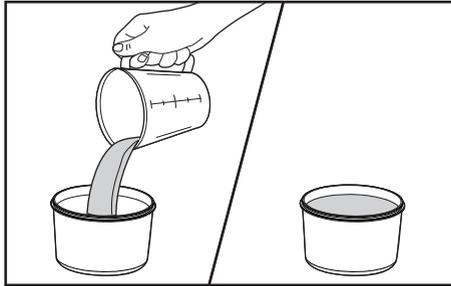

2. Affix the lid to the top of the mold and place it in the freezer for 12 to 24 hours.

**NOTE:** Freezing time may vary and will depend both on the temperature of your freezer as well as the sugar or alcohol content of your mixture.

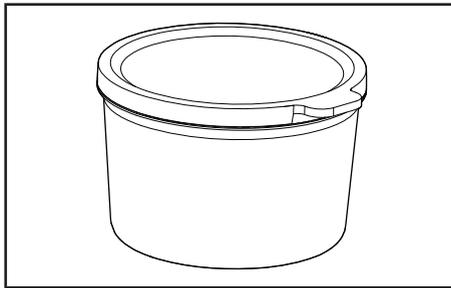


**NOTE:** See “Tips for Great Results” section below for more details on Ice Puck Preparation.


## SET UP & ASSEMBLY - PREPARING TO MAKE SHAVE ICE

Before using your Shave Ice Attachment, clean it by following the detailed instructions in “CARE & CLEANING” section.


1. After removing the ice molds from the freezer, press firmly on the bottom and sides to help release the puck from the mold.

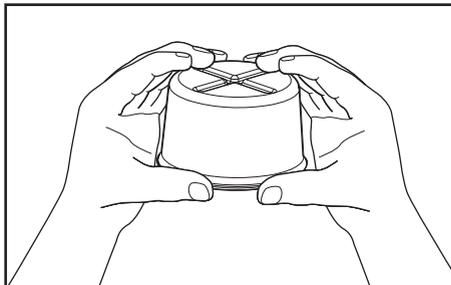

2. For Plain Ice recipes, allow ice to rest for up to 10 minutes - this is called “Tempering” and is recommended to achieve ideal Shave Ice results.

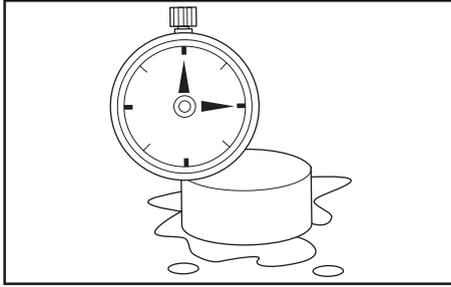


3. Turn the Stand Mixer off (OFF/0) and then unplug.

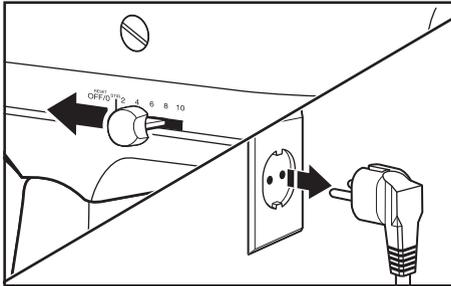


4. For Stand Mixer with a hinged attachment hub cover: Flip up to open.


For Stand Mixer with a removable attachment hub cover: Turn the attachment knob counterclockwise to remove the attachment hub cover.

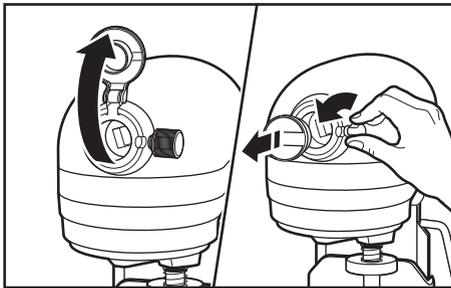


5. Insert the Main Housing into the attachment hub, make sure the power shaft fits into the square hub socket. If necessary, rotate the attachment back and forth for proper fitment. The pin on the attachment housing will fit into the notch of the hub rim when in the proper position.

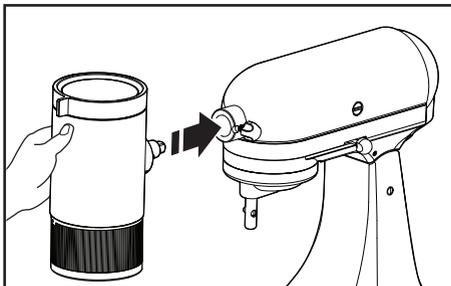


6. Tighten the Stand Mixer attachment hub knob clockwise until the attachment is completely secured into the Stand Mixer.

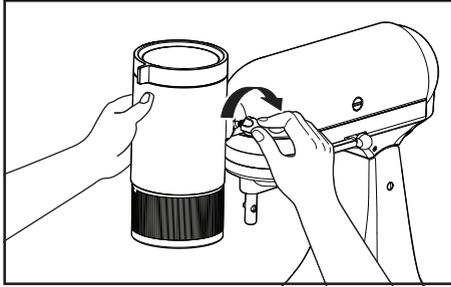


7. Ensure that the upper lever of the housing is rotated all the way to the left. If not, rotate it to the left until it clicks into place. This will ready the attachment for use and must be completed before loading the Ice Puck into the Ice Cup and attaching it to the housing.

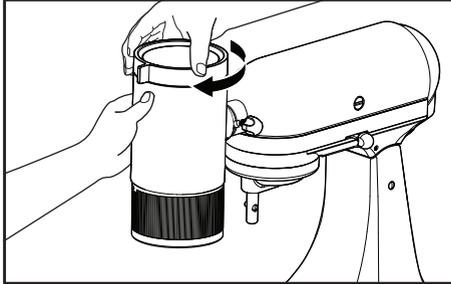

8. Remove the Ice Cup from the housing by rotating it to the right and pulling downward. Take note of the small indicator arrow which must line up with the Lock and Unlock symbols on the housing.

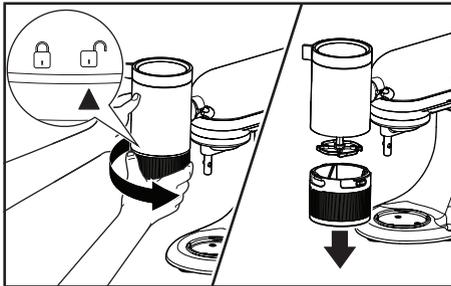


**OPTIONAL:** If you wish to change the blade, grip the blade from the bottom and rotate it to right to unlock and remove.

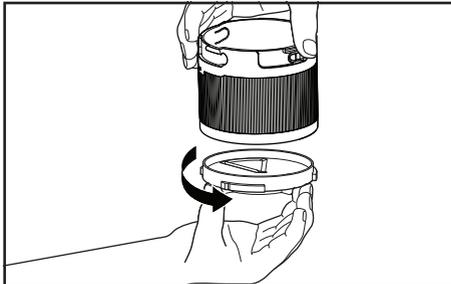


## ASSEMBLY

1. Grip the blade from the bottom and slowly insert it into the bottom of the Ice Cup by aligning the interlocking tabs. Once inserted, rotate the blade to the left until you hear a "Click", to properly lock the blade in place.

**NOTE:** Each of the interlocking tabs is a unique size, ensuring the blade can only be installed in the correct position.

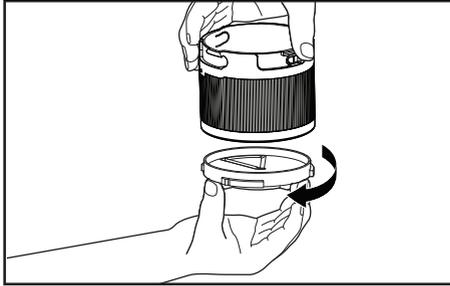


2. Insert the Ice Cup Sleeve into the Detachable Ice Cup, then insert a prepared Ice Puck. Be sure to insert the ice puck with the cross hatches facing upward.

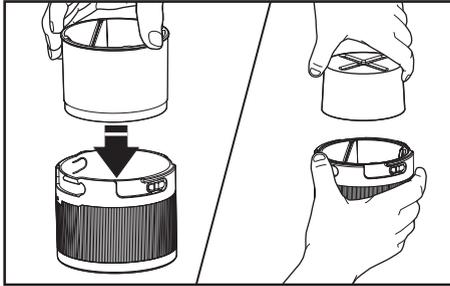


3. Attach the Detachable Ice Cup to the bottom side of the main housing, rotating it to the left to lock it in place.

**NOTE:** The small indicator arrow on the Detachable Ice Cup should line up with the Lock and Unlock symbols on the main housing.

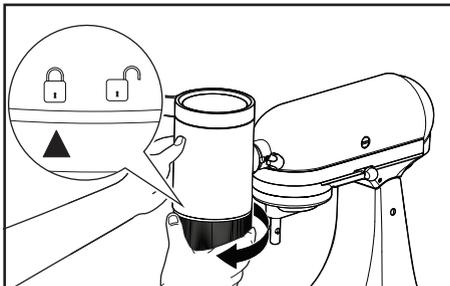


4. Release the top lever by gently rotating it to the right. The spring will engage as the Ice Pusher clamps down on the ice puck. The Shave Ice Attachment is properly loaded and ready to use.

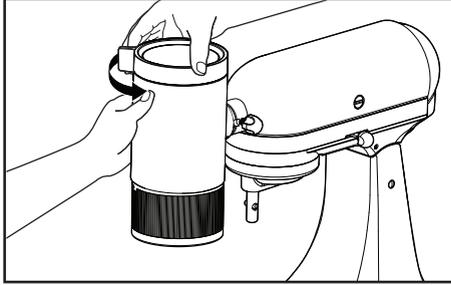

## SHAVING ICE

1. Place a serving dish of your choice beneath the Shave Ice Attachment. Do this before starting the mixer.

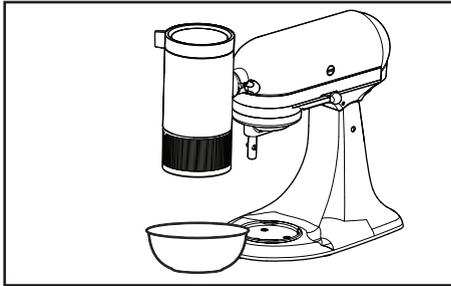

# ⚠ WARNING

## Electrical Shock Hazard



**Plug into an earthed outlet.**

**Do not remove earth prong.**


**Do not use an adapter.**

**Do not use an extension cord.**


**Failure to follow these instructions can result in death, fire, or electrical shock.**

2. Plug the Stand Mixer into an earthed outlet. Set the mixer to the highest speed to begin shaving.


**NOTE:** For best results, consider rotating the dish as the ice shaves to create a more even, cone-shaped mound of ice.

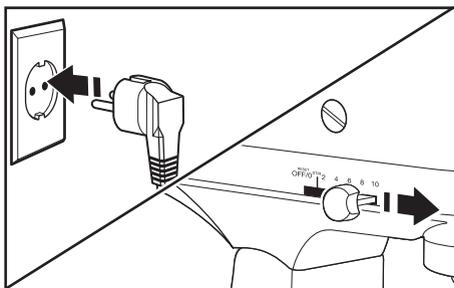


3. Once shaving is complete, turn off the mixer and return the upper lever to the leftmost locked position.

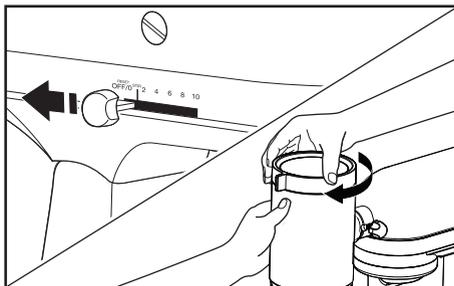

4. Remove the Ice Cup from the housing by rotating it to the right and pulling downward. Discard any remaining ice.

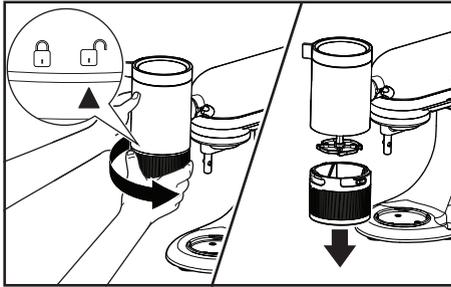

5. Finish your Shave Ice dessert with a variety of flavorings or toppings of your choice.

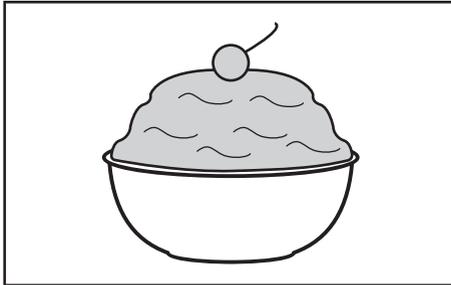


See below for additional tips, tricks and recipes to help make the most of your Shave Ice experience.


For even more recipes and inspiration, visit [www.KitchenAid.com](http://www.KitchenAid.com)

## CHANGING THE BLADE

1. Grip the blade from the bottom and rotate to the right to remove, or to the left to install. Once inserted, rotate the blade to the left until you hear a “Click”, to properly lock the blade in place.

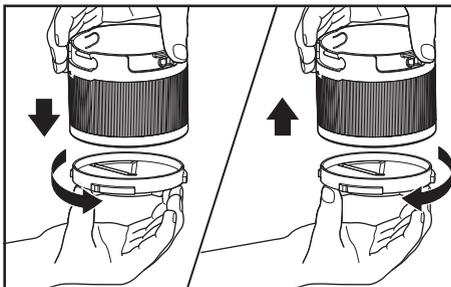

- Each of the interlocking tabs is a unique size, ensuring the blade can only be installed in the correct position.

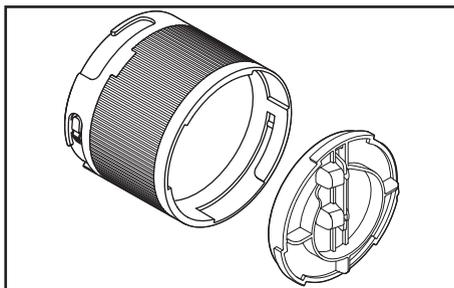


## CARE AND CLEANING


**IMPORTANT:** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

**NOTE:** Disassemble the unit properly before cleaning. For instructions, refer to the Set Up & Assembly section steps 7, 8, and optional.

- The following parts are dishwasher-safe, top rack only:** Detachable Ice Cup, fine and coarse blades, Plastic Ice Molds, Ice Cup Pusher, Ice Cup Sleeve and Lids.

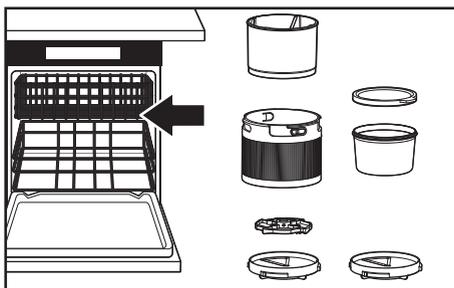

- Do not immerse Housing in water or other liquid. Wipe clean with a warm, damp cloth, and dry thoroughly with a soft cloth before re-use or storing. Or, clean them thoroughly in warm sudsy water and rinse completely before drying.

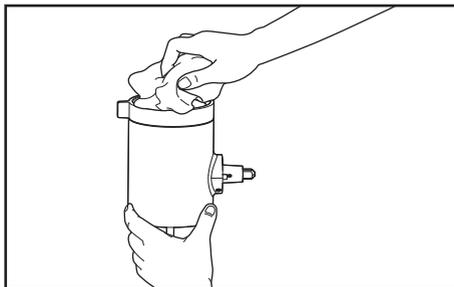

# TIPS FOR GREAT RESULTS

## Setting Up Your Shave Ice Attachment

- It is recommended that you install your Shave Ice Attachment on the Stand Mixer first, before completing any other set up step.
- To more easily install the clear plastic Ice Cup into the Upper Housing, look for the small black indicator arrow. This arrow must line up with the Lock/Unlock icons on the Upper Housing.
- When switching blades, please note that the blades feature 3 uniquely sized tabs that must line up with their corresponding slots in the bottom of the ice cup. If the tabs are lined up incorrectly, the blade will not install.

## Preparing Your Ice Molds

- It is important to note the subtle fill line just below the top rim of the Ice Molds. Please do not fill the molds beyond this line as it may negatively affect freezing.
- Allow ice molds to freeze for a minimum of 12 hours. Note that some mixed base recipes may require more time to freeze due to a variety of ingredients.
- For recipes with sugar, there is a delicate balance between a mixture that is sweet to the taste but still capable of freezing hard enough to shave. Please follow recipes as closely as possible to ensure great results.
- For recipes with Alcohol, you should not exceed above 8% within the mixture. This will help ensure the mixture freezes hard enough to shave.
- Consider removing frozen ice pucks from the molds and storing them in another container inside your freezer. This is referred to as “Ice Harvesting” and will help ensure you always have ice on hand when the occasion calls for Shave Ice.

## Making Shave Ice

- Tempering is an important part of making great Shave Ice since an ice puck straight out of the freezer is actually too cold to shave. Tempering means allowing your ice puck(s) to warm slightly at room temperature, until the outside of the puck has a nice glossy sheen to it. This typically takes about 10 minutes.  
**NOTE:** Ice pucks made with plain water require tempering. For mixed base recipes, refer to the recipe details for tempering instructions.
- Some Shave Ice recipes, particularly those with ingredients frozen into the ice puck, may shave better with either the Fine or Coarse blade. It is recommended that you try out recipes with each blade to see which produces your desired result.

## Shave Ice Troubleshooting Tips

- Fine Blade Creates Coarse Ice - This can occur if the ice is still too cold. Consider extending the tempering time. Alternatively, check the blade for any possible damage as this can affect shave performance.
- Puck Does Not Shave - This can occur when a recipe mixture is too soft or too hard. If the mixture is too soft, it may contain too much sugar or alcohol to freeze properly. Consider revisiting the recipe. If the mixture is too hard, the puck may need to temper for longer. See “Making Shave Ice”.
- If issues persist, please contact KitchenAid customer service. Visit [www.KitchenAid.com](http://www.KitchenAid.com) for contact information specific to your region.

## FOR DETAILED INFORMATION ON USING THE SHAVE ICE ATTACHMENT

Visit [www.KitchenAid.com](http://www.KitchenAid.com) or additional instructions, videos, inspiring recipes, and tips on how to use your Shave Ice Attachment.

# SHAVE ICE RECIPES

## Make it Your Own!

### EVERYDAY SHAVE ICE

Make the pucks. Pour water into the Plastic Ice Molds and freeze for 12-24 hours.

#### Ingredients:

- 1 frozen ice puck
- Shave ice syrup of choice

Allow the ice puck to rest at room temperature (temper) until the outside of the puck has a nice glossy sheen. Place the ice puck into KitchenAid Shave Ice Attachment. Place a bowl under the attachment, turn speed to 10, and shave the ice. Pack the ice into a small bowl or cup (a 4" x 2" tall bowl is ideal) as firm as possible, then drizzle with desired amount of syrups. Enjoy.

#### For a creamier shave ice version:

Place a small scoop of vanilla ice cream in your bowl (a 4" x 2" tall bowl is ideal) and then pack the shave ice around and on top of it. Top with syrups of choice, and then top with a drizzle of sweetened condensed milk.

**CREATIVE NOTE:** Add additional toppings like a sprinkle of matcha, fresh diced fruit, caramel sauce, gummy candies, whipped cream.

---

## Customise it More!

### SHAVE ICE COFFEE 'N CREAM

#### Ingredients:

- 1 puck of frozen coffee
- 1 cup of milk of choice, cold
- 1 scoop of vanilla ice cream

#### Instructions:

Make the ice pucks. Pour leftover coffee into the plastic ice molds and freeze for 12-24 hours. This recipe does not require tempering.

Place the coffee puck into KitchenAid Shave Ice Attachment. Place a bowl under the attachment, turn speed to 10, and shave the coffee.

Evenly distribute the shave coffee between two cups. Add 1 cup of milk to each cup and whisk briskly with a fork. Add a scoop of vanilla ice cream and serve with a spoon.

**CREATIVE NOTE:** You can also make this with no milk for more of a traditional shave ice treat. Just place your scoop of ice cream into the bowl first. Shave the coffee then pack the shave coffee around and over the ice cream. Top with a drizzle of heavy cream or sweetened condensed milk. (1 puck = 1 Coffee Shave Ice)

---

## Get Creative!

### JUICY SLUSHEES

1 frozen puck = 1-10 oz slushee

#### Ingredients:

- 1 puck of frozen juice (apple, orange, cranberry - no pulp)
- Sparkling water, chilled

#### Instructions:

Make the ice pucks. Pour juice into the Plastic Ice Molds and freeze for 12-24 hours. This recipe does not require tempering.

Place the frozen juice puck into KitchenAid Shave Ice Attachment. Align the arrow on the canister with the unlocked symbol then twist counter clockwise to lock in place. Place a bowl under the attachment, turn speed to 10, and shave the juice.

Place the shave juice into a glass, add  $\frac{3}{4}$  cup of sparkling water, and whisk briskly with a fork. Enjoy.

---

### Try Something New!

#### FRUITY LEMONADE FREEZE

Frozen fruit pucks (Makes 2):

- 8 Ozs Fruit of choice (frozen or fresh)
- 1 cup of water
- 1 tablespoon honey

#### Instructions:

For Frozen Pucks: Blend 8 ounces of fruit of choice with 1 cup of water and 1 tablespoon of honey. Pour the mixture through a fine mesh sieve to remove any pulp or seeds. Then, pour into the plastic ice molds and freeze for 12-24 hours. This recipe does not require tempering.

#### For Lemonade:

1 frozen fruit puck

Lemonade of choice, cold

Place the fruit puck into KitchenAid Shave Ice Attachment. Align the arrow on the canister with the unlocked symbol then twist counter clockwise to lock in place. Place a bowl under the attachment, turn speed to 10, and shave the fruit puree.

Add the shave puree into a glass of choice. Add  $\frac{3}{4}$  cup of lemonade and whisk briskly with a fork. Enjoy!

**CREATIVE NOTE:** You can replace the lemonade with your favorite iced tea.

## ELECTRICAL EQUIPMENT WASTE DISPOSAL

### DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### RECYCLING THE PRODUCT

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

# DECLARATION OF CONFORMITY

## FOR UNITED KINGDOM

This appliance has been designed, constructed and distributed in compliance with the safety requirements of UK Legislation: Electrical Equipment (Safety) Regulations 2016, The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019. The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

## FOR EUROPEAN UNION

This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: 2014/35/EU, 2014/30/EU and 2011/65/EU (RoHS Directive) and following amendments.

# TERMS OF KITCHENAID GUARANTEE ("GUARANTEE")

### Covering U.K. - Ireland - UAE

KitchenAid Europa Inc., Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium ("Guarantor") grants the end-customer, who is a consumer, a Guarantee pursuant to the following terms.

#### FOR U.K.:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Rights Act 2015 says products must be as described, fit for purpose and of satisfactory quality. During the expected lifespan of your product your legal rights entitle you to the following:

- Up to 30 days: if your product is faulty, then you can get an immediate refund.
- Up to six months: if your product can't be repaired or replaced, then you're entitled to a full refund, in most cases.
- Up to six years: if your product does not last a reasonable length of time you may be entitled to some money back.

These rights are subject to certain exceptions. For detailed information please visit the Citizens Advice website [www.adviceguide.org.uk](http://www.adviceguide.org.uk) or call **03454 04 05 06**.

#### FOR IRELAND:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product under the European Communities (Certain Aspects of the Sale of Consumer Goods and Associated Guarantees) Regulations 2003 (S.I. No. 11/2003) and other enactments governing the sale of consumer goods.

#### FOR UAE:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product.

### 1. SCOPE AND TERMS OF THE GUARANTEE

- a) The Guarantor grants the Guarantee for the products mentioned under Section 1.b) which a consumer has purchased from a seller or a company of the KitchenAid-Group within the following countries: U.K., Ireland, or the United Arab Emirates (UAE).
- b) The Guarantee period depends on the purchased product and is as follows:

#### **Two Year full guarantee from date of purchase.**

- c) The Guarantee period commences on the date of purchase, i.e. the date on which a consumer purchased the product from a dealer or a company of the KitchenAid-Group.
- d) The Guarantee covers the defect-free nature of the product.
- e) The Guarantor shall provide the consumer with the following services under this Guarantee, at the choice of the Guarantor, if a defect occurs during the Guarantee period:
  - Repair of the defective product or product part, or
  - Replacement of the defective product or product part. If a product is no longer available, the Guarantor is entitled to exchange the product for a product of equal or higher value.

- f) If the consumer wishes to make a claim under the Guarantee, the consumer has to contact the country specific KitchenAid service centres or the Guarantor directly at KitchenAid Europa, Inc. Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium;

Email-Address U.K.: [CONSUMERCARE.UK@kitchenaid.eu](mailto:CONSUMERCARE.UK@kitchenaid.eu)

Email-Address IRELAND: [CONSUMERCARE.IE@kitchenaid.eu](mailto:CONSUMERCARE.IE@kitchenaid.eu)

Toll Free Number U.K. & IRELAND: **00 800 381 040 26**

**FOR UAE:**

**AL GHANDI ELECTRONICS.**

POST BOX NO. 9098,

DUBAI, UNITED ARAB EMIRATES

Toll free number: +971 4 2570007

- g) The costs of repair, including spare parts, and any postage costs (if applicable) for the delivery of a defect-free product or product part shall be borne by the Guarantor. The Guarantor shall also bear the postage costs for returning the defective product or product part if the Guarantor or the country specific KitchenAid customer service centre requested the return of the defective product or product part. However, the consumer shall bear the costs of appropriate packaging for the return of the defective product or product part.
- h) To be able to make a claim under the Guarantee, the consumer must present the receipt or invoice of the purchase of the product.

**2. LIMITATIONS OF THE GUARANTEE**

- a) The Guarantee applies only to products used for private purposes and not for professional or commercial purposes.
- b) The Guarantee does not apply in the case of normal wear and tear, improper or abusive use, failure to follow the instructions for use, use of the product at the wrong electrical voltage, installation and operation in violation of the applicable electrical regulations, and use of force (e.g. blows).
- c) The Guarantee does not apply if the product has been modified or converted, e.g. conversions from 120 V products to 220-240 V products.
- d) The provision of Guarantee services does not extend the Guarantee period, nor does it initiate the commencement of a new Guarantee period. The Guarantee period for installed spare parts ends with the Guarantee period for the entire product.
- e) **FOR UAE ONLY:**

Further or other claims, in particular claims for damages, are excluded unless liability is mandatory by law.

After expiry of the Guarantee period or for products for which the Guarantee does not apply, the KitchenAid customer service centres are still available to the end-customer for questions and information.

Further information is also available on our website:

- For U.K. & Ireland [www.kitchenaid.eu](http://www.kitchenaid.eu)
- For UAE: [www.KitchenAid-MEA.com](http://www.KitchenAid-MEA.com)

# PRODUCT REGISTRATION

Register your new KitchenAid appliance now: <http://www.kitchenaid.eu/register>