


KitchenAid

FLEX EDGE BEATER

5KFE5T, 5KFE7T
PRODUCT GUIDE

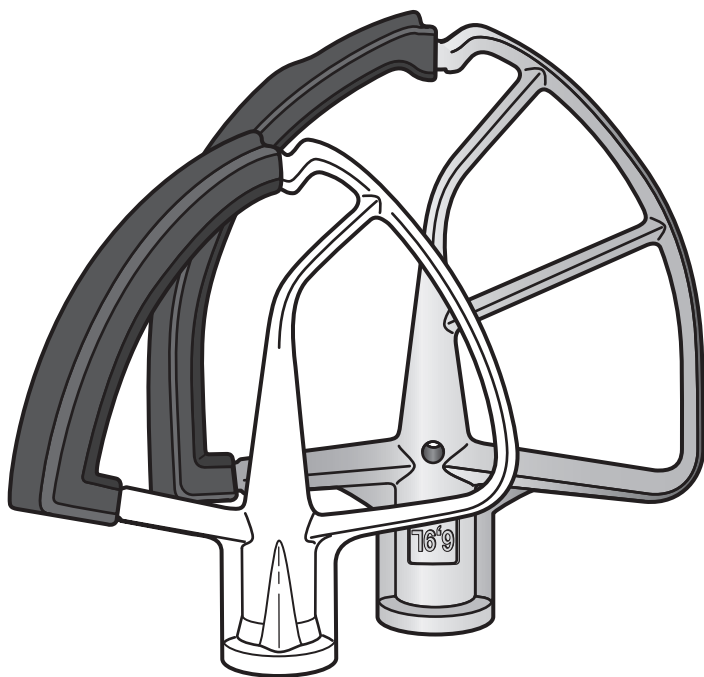

The Flex Edge Beater model **5KFE5T** is designed exclusively for use with all KitchenAid Tilt-Head Stand Mixers (models 5K45, 5KSM45, 5KSM100 and 5KSM200 series).

The Flex Edge Beater model **5KFE7T** is designed exclusively for use with KitchenAid 6.9 L Bowl-Lift Stand Mixers (models 5KSM7580X, 5KSM7591X, and 5KSM7990X).

For complete information on the installation of the beater, please refer to the Owner's Manual and/or the online Product Guide of your Stand Mixer. There you will also find information regarding the adjustment for the Beater to Bowl Clearance and Stand Mixer Safety.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. Please refer to the basic Important Safeguards as outlined in the Owner's Manual provided with your Stand Mixer and/or the online Product Guide of your Stand Mixer on www.KitchenAid.eu.

SAVE THESE INSTRUCTIONS

PRODUCT USAGE


Flat Flex Edge Beater incorporates baking ingredients during mixing without having to stop the motor and use a spatula.

Flat Flex Edge Beater is used for normal to heavy mixtures:

Cakes	Biscuits	Creamed Frostings
Quick Breads	Candies	Meat Loaf
Cookies	Mashed Potatoes	Pie Pastries

This Flex Edge Beater folds/pulls in the mixture better and makes scraping unnecessary.

DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.