

KitchenAid

CORDLESS PERSONAL BLENDER

5KSBR200, 5KSBR256
OWNER'S MANUAL

EN	Owner's Manual	2
DE	Bedienungsanleitung	10
FR	Le manuel d'utilisation	19
IT	Manuale del proprietario	29
NL	Gebruikershandleiding	37
ES	El manual del propietario	45
PT	Manual do proprietário	53
EL	Εγχειρίδιο Κατοχού	61
SV	Användarhandbok	69
NO	Brukerhåndbok	76
FI	Omistajan Opas	83
DA	Brugervejledning	90
IS	Notandahandbók	97
PL	Instrukcja Obsługi	104
CS	Uživatelská Příručka	112
TR	Kullanıcı Kilavuzu	119
UA	Посібник з експлуатації	126
AR	دليل المالك	1

PRODUCT SAFETY

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- 1.** Read all instructions. Misuse of appliance may result in personal injury.
- 2.** To protect against risk of electrical shock, do not put Personal Blender Base, USB Adapter, USB Cable, or Battery in water or other liquid.
- 3.** European Union only: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 4.** European Union only: This appliance shall not be used by children. Keep the appliance out of reach of children. Cleaning and user maintenance shall not be made by children without supervision.
- 5.** Turn the appliance off, remove the Battery when not in use, before assembling or disassembling parts and before cleaning.
- 6.** Avoid contacting moving parts. Do not attempt to override the safety interlock mechanisms.
- 7.** Do not operate any appliance with a damaged Battery or charger or plug, or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Centre for examination, repair, or electrical or mechanical adjustment.
- 8.** Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the Blender. A scraper may be used but must be used only when the Blender is not running.
- 9.** Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the Jar and during cleaning.
- 10.** Always operate Blender with cover in place.
- 11.** Never leave the appliance unattended while it is in operation.
- 12.** Risk of thermal burn injury due to excessive pressure in the Blender Jar. Do not blend hot liquids.

- 13.** The use of accessories/attachments, including canning Jars, not recommended or sold by KitchenAid may cause a risk of fire or injury to persons.
- 14.** Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
- 15.** Disconnect the Battery from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
- 16.** Prevent unintentional starting. Ensure the switch is in the off-position before connecting to Battery, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch on invites accidents.
- 17.** Recharge only with the charger specified by KitchenAid. A charger that is suitable for one type of Battery may create a risk of fire when used with another Battery.
- 18.** Use appliances only with KitchenAid 12 V Battery. Use of any other Batteries may create a risk of injury and fire.
- 19.** When the Battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the Battery terminals together may cause burns or a fire.
- 20.** Under abusive conditions, liquid may be ejected from the Battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the Battery may cause irritation or burns.
- 21.** Do not use a Battery or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
- 22.** Do not expose a Battery or appliance to fire or excessive temperature. Exposure to fire or temperature above 129°C may cause explosion.
- 23.** Follow all charging instructions and do not charge the Battery or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the Battery and increase the risk of fire.

24. Never service damaged Battery. Service of Battery should only be performed by the manufacturer or authorised service providers.
25. Do not place the appliance on or near a hot gas or electric burner or in a heated oven.
26. Do not use the appliance for other than intended use.
27. Do not use Personal Blender in rain or wet conditions. Do not expose to rain—store indoors.
28. Do not modify or attempt to repair the appliance or the Battery (as applicable) except as indicated in the instructions for use and care.
29. Do not operate Personal Blender continuously for more than 1 minute.
30. When emptying the Bowl or during cleaning, be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to sudden steaming.
31. Remove empty Batteries from the appliance and safely dispose.
32. Remove the Battery if the appliance is stored unused for a long period.
33. If the Battery leaks, remove the Battery from the appliance and do not use the Battery again.
34. Remove rechargeable Batteries from the appliance before charging.
35. **IMPORTANT:** Use only with approved USB Adapter by market.
36. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.

SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit

www.kitchenaid.co.uk/product-tips,
www.kitchenaid.ie/product-tips, or www.KitchenAid.eu.

ELECTRICAL REQUIREMENTS

USB Adapter:

Input: 100–240 V~, 50–60 Hz, 0.5 A

USB Output: 5 VDC, 2 A

Recommended ambient charging temperature: 5–40°C

External Battery (Lithium-ion): 5KRB12

Nominal Voltage: 10.8 VDC

Maximum Voltage: 12 VDC

NOTE: If the USB Adapter does not fit fully in the power source, contact a qualified electrician. Do not modify the USB Adapter in any way.

NOTE: Do not use or store batteries or products in locations where the temperature is less than 10°C or more than 40°C.

LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL

Always dispose the Battery operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

GETTING STARTED

BEFORE FIRST USE

1. Charge the Battery until it is fully charged.
2. Clean all the parts and accessories (see “Care and Cleaning” section).
3. Remove all packaging materials, if present.

NOTE: Some dust may be on the product. This is due to the recycled materials used in packaging. This can be cleaned with a soft towel.

BATTERY CHARGING

USING THE USB CABLE

1. Attach the USB Cable to the adapter. Connect the other end of the USB Cable to the Battery.
2. Plug the USB Adapter into a power source.

BLENDER FUNCTION GUIDE

The Blender features 2 push buttons: ON/OFF (▷|⊗) and Pulse (P), allowing you to customize your blend.

ACCESSORIES	SIZE	BUTTONS	SUGGESTED ITEMS TO BLEND
Blender Jar	16 oz (473 ml)	ON/OFF (▷ ⊗) and Pulse (P)	Smoothies, icy drinks, shakes/malts, dips, spreads and more

NOTE: The ON/OFF (▷|⊗) button is a pre-programmed function. The unit will run for one minute before turning off automatically.

PRODUCT USAGE

PREPARING THE BLENDER FOR USE

Before using your Blender for the first time, wipe clean Blender Base with a warm damp cloth. Dry with a soft cloth. Wash Blender Jar, Lid, in warm, sudsy water (see “Care and Cleaning” section). Rinse parts and wipe dry. Be sure the countertop beneath the Blender and surrounding areas are dry and clean.

NOTE: When moving your Blender, always support/lift from the Blender Base. The Base might disengage from Jar if carried by the Jar only.

USING THE BLENDER

1. Ensure that the Battery is installed on the Base.
2. Place ingredients into the Blending Jar. Be careful not to exceed the maximum fill line. For best results, always put the hardest ingredients into the Jar first (frozen fruit) and finish with softer ingredients and liquids.

IMPORTANT: Do not run the Blender when the Jar is empty.

3. Install the Blade Assembly with the Blade facing downwards into the Jar. Twist the Blade Assembly clockwise (right) until tightened.

NOTE: Make sure the seal between the Blade Assembly and the Jar is in place. Do not operate without a seal.

4. Ensure that the motor base is sitting on a clean, dry surface. Place the Blending Jar onto the motor base with the Blade Assembly at the bottom and turn to lock into place. The Jar is securely in place when a click sound is heard. Always ensure it is locked into place before using the Blender. If the Blade Assembly and Jar are not properly attached, the Blender will not operate.
5. To operate, press the ON/OFF ($\triangleright| \otimes$) button once. The LED light will display and the motor will start. Press the ON/OFF ($\triangleright| \otimes$) button again to turn the unit off.

NOTE: The ON/OFF ($\triangleright| \otimes$) button is a pre-programmed function. The unit will run for one minute before turning off automatically.

6. To pulse the Blender, press the Pulse (P) button, the LED light will display and the motor will start. Release the button again to turn the unit off.
7. Once the ingredients are blended, remove the Blending Jar from the Base by twisting the Blending Jar counterclockwise (left) to unlock.

IMPORTANT: Do not try to remove the Blending Jar while the motor is still running. Do not press down the Jar during removal from base.

8. Place the Blending Jar upright on the surface with the black Blade Assembly at the top. Twist the black Blade Assembly counterclockwise (left) to remove.
9. To attach the Travel Lid, twist clockwise (right) until the Lid is secure. Ensure the drinking cap is closed before placing in any bag.

IMPORTANT: Do not press down on the Jar when removing the Jar assembly from the Blender Base.

NOTE: The Personal Blender is not intended to crush ice. See icy drink recipes for correct use.

10. Press and hold the Battery Unlock Button to remove the Battery.

CARE AND CLEANING

CLEANING THE BLENDER AND ACCESSORIES

Clean the Blender and accessories thoroughly after every use.

IMPORTANT: Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

NOTE: To avoid damaging the Blender, do not immerse the Blender Base or Battery in water. To avoid scratching the Blender, do not use abrasive cleansers or scouring pads.

1. To clean the Blender Base and Battery: Unplug the Battery from the Blender before cleaning. Wipe clean the Base with a warm, damp cloth and dry with a soft cloth.
2. The Blender Jar can be cleaned in the bottom rack of a dishwasher. The Blade Assembly and the Travel Lid can be cleaned in the top rack of a dishwasher.

NOTE: Immediately remove parts from the dishwasher and dry with a soft cloth.

FOR DETAILED INFORMATION ON CLEANING THE CORDLESS PERSONAL BLENDER:

Visit www.kitchenaid.com/quickstart for additional instructions with videos, inspiring recipes, and tips on how to use and clean your Cordless Personal Blender.

ELECTRICAL EQUIPMENT WASTE DISPOSAL

DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol ♻️. The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

RECYCLING THE PRODUCT

- This appliance is marked in compliance with law in the EU and UK covering, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol ♻️ on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

DECLARATION OF CONFORMITY

FOR UNITED KINGDOM

This appliance has been designed, constructed and distributed in compliance with the safety requirements of UK Legislation: Electrical Equipment (Safety) Regulations 2016, Electromagnetic Compatibility Regulations 2016. The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019. The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

FOR EUROPEAN UNION

This appliance has been designed, constructed, and distributed in compliance with the safety requirements of EC Directives: Low Voltage Directive 2014/35/EU, Electromagnetic Compatibility Directive 2014/30/EU, Ecodesign Directive 2009/125/EC, RoHS Directive 2011/65/EU and following amendments.

TERMS OF KITCHENAID GUARANTEE ("GUARANTEE")

Covering U.K. - Ireland - UAE

KitchenAid Europa, Inc., Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium ("Guarantor") grants the end-customer, who is a consumer, a Guarantee pursuant to the following terms.

FOR U.K.:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Rights Act 2015 says products must be as described, fit for purpose and of satisfactory quality. During the expected lifespan of your product your legal rights entitle you to the following:

- Up to 30 days: if your product is faulty, then you can get an immediate refund.
- Up to six months: if your product can't be repaired or replaced, then you're entitled to a full refund, in most cases.
- Up to six years: if your product does not last a reasonable length of time you may be entitled to some money back.

These rights are subject to certain exceptions. For detailed information please visit the Citizens Advice website www.adviceguide.org.uk or call **03454 04 05 06**.

FOR IRELAND:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product under the European Communities (Certain Aspects of the Sale of Consumer Goods and Associated Guarantees Regulations 2003 (S.I. No. 11/2003)) and other enactments governing the sale of consumer goods.

FOR UAE:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product.

1. SCOPE AND TERMS OF THE GUARANTEE

- a) The Guarantor grants the Guarantee for the products mentioned under Section 1.b) which a consumer has purchased from a seller or a company of the KitchenAid-Group within the following countries: U.K., Ireland, or the United Arab Emirates (UAE).
- b) The Guarantee period depends on the purchased product and is as follows:

One Year full guarantee from date of purchase.

- c) The Guarantee period commences on the date of purchase, i.e. the date on which a consumer purchased the product from a dealer or a company of the KitchenAid-Group.
- d) The Guarantee covers the defect-free nature of the product.
- e) The Guarantor shall provide the consumer with the following services under this Guarantee, at the choice of the Guarantor, if a defect occurs during the Guarantee period:
 - Repair of the defective product or product part, or
 - Replacement of the defective product or product part. If a product is no longer available, the Guarantor is entitled to exchange the product for a product of equal or higher value.
- f) If the consumer wishes to make a claim under the Guarantee, the consumer has to contact the country specific KitchenAid service centres or the Guarantor directly at KitchenAid Europa, Inc. Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium;

Email-Address U.K.: CONSUMERCARE.UK@kitchenaid.eu

Email-Address IRELAND: CONSUMERCARE.IE@kitchenaid.eu

Toll Free Number U.K. & IRELAND: **00 800 381 040 26**

FOR UAE:

AL GHANDI ELECTRONICS.

POST BOX NO. 9098,

DUBAI, UNITED ARAB EMIRATES

Toll free number: +971 4 2570007

- g) The costs of repair, including spare parts, and any postage costs (if applicable) for the delivery of a defect-free product or product part shall be borne by the Guarantor. The Guarantor shall also bear the postage costs for returning the defective product or product part if the Guarantor or the country specific KitchenAid customer service centre requested the return of the defective product or product part. However, the consumer shall bear the costs of appropriate packaging for the return of the defective product or product part.
- h) To be able to make a claim under the Guarantee, the consumer must present the receipt or invoice of the purchase of the product.

2. LIMITATIONS OF THE GUARANTEE

- a) The Guarantee applies only to products used for private purposes and not for professional or commercial purposes.
- b) The Guarantee does not apply in the case of normal wear and tear, improper or abusive use, failure to follow the instructions for use, use of the product at the wrong electrical voltage, installation and operation in violation of the applicable electrical regulations, and use of force (e.g. blows).
- c) The Guarantee does not apply if the product has been modified or converted, e.g. conversions from 120 V products to 220-240 V products.
- d) The provision of Guarantee services does not extend the Guarantee period, nor does it initiate the commencement of a new Guarantee period. The Guarantee period for installed spare parts ends with the Guarantee period for the entire product.
- e) **FOR UAE ONLY:**
Further or other claims, in particular claims for damages, are excluded unless liability is mandatory by law.

After expiry of the Guarantee period or for products for which the Guarantee does not apply, the KitchenAid customer service centres are still available to the end-customer for questions and information.

Further information is also available on our website:

- For U.K. & Ireland www.kitchenaid.eu
- For UAE: www.KitchenAid-MEA.com

PRODUCT REGISTRATION

Register your new KitchenAid appliance now: <http://www.kitchenaid.eu/register>