

# KitchenAid

## FOOD PROCESSOR ATTACHMENT 5KSM2FPA OWNER'S MANUAL

EN	Owner's Manual	2
DE	Bedienungsanleitung	12
FR	Le manuel d'utilisation	23
IT	Manuale del proprietario	35
NL	Gebruikershandleiding	44
ES	El manual del propietario	53
PT	Manual do proprietário	62
EL	Εγχειρίδιο Κατοχού	72
SV	Användarhandbok	82
NO	Brukerhåndbok	90
FI	Omistajan Opas	98
DA	Brugervejledning	106
IS	Notandahandbók	115
RU	Руководство Пользователя	124
PL	Instrukcja Obsługi	140
CS	Uživatelská Příručka	150
TR	Kullanıcı Kilavuzu	159
UA	Посібник з експлуатації	168
AR	دليل المالك	1

# PRODUCT SAFETY

## Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

**⚠ DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

**⚠ WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions. Misuse of appliance may result in personal injury.
2. Always make sure Interlock Lid is securely closed before the Stand Mixer motor is turned on. Do not remove the Lid while the Food Processor Attachment is in operation.
3. Turn the appliance OFF(0), then unplug from the outlet and detach the Attachment when not in use, before assembling or disassembling parts and before cleaning. Make sure the motor stops completely before disassembling.
4. European Union Only: Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.

## PRODUCT SAFETY (CONTINUED)

5. European Union Only: This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
6. Children should be supervised to ensure that they do not play with the appliance
7. This appliance is not intended for use by persons, including children, with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instructions concerning use of the appliance in a safe way and understand the hazards involved.
8. Never feed by hand and always use the Food Pusher.
9. Do not put your fingers or other objects into the Food Processor Attachment opening or discharge chute while it is in operation. If food becomes lodged in opening or discharge chute, use pusher or another piece of fruit or vegetable to push it down or remove. When this method is not possible, turn the motor off and disassemble the Food Processor Attachment to remove the remaining food.
10. Avoid contacting moving parts.
11. The use of attachments/accessories not recommended or sold by KitchenAid may cause fire, electric shock, or injury.
12. Do not use outdoors.
13. Do not use the appliance if the driver mechanism or rotating parts are damaged. Return appliance to the nearest Authorised Service Facility for examination, repair, or electrical or mechanical adjustment.
14. Do not let the Stand Mixer cord hang over the edge of table or counter.
15. Never leave the appliance unattended while it is in operation.
16. Keep hands and utensils away from moving Blades or Discs while processing food to reduce the risk of severe injury to persons or damage to the Food Processor Attachment.
17. Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the bowl, and during cleaning.
18. Do not remove the Lid until Discs or Blades stop.
19. Do not attempt to defeat the cover interlock mechanism.
20. To avoid damaging the gear assembly, do not immerse Food Processor Attachment Assembly in water or other liquids.

## PRODUCT SAFETY (CONTINUED)

21. Be careful if hot liquid is poured into the Food Processor Attachment as it can be ejected out of the appliance due to sudden steaming.
22. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
23. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
24. Also, see the Important Safeguards section included in the Owner's Manual provided with your Stand Mixer.
25. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farmhouses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

## SAVE THESE INSTRUCTIONS

For complete details on product information, instructions and videos, including Guarantee information, visit [www.KitchenAid.co.uk](http://www.KitchenAid.co.uk) or [www.KitchenAid.eu](http://www.KitchenAid.eu). This may save you the cost of a service call. To receive a free printed copy of the information online, call **00 800 381 040 26**.

## SPEED SELECTION GUIDE

Different foods require varying degrees of pressure and speed for optimised results:

- In general, use light pressure and low speeds for soft, delicate foods — soft fruits and vegetables like kiwi or ripened tomatoes, as well as soft cheeses like mozzarella.
- Use firmer pressure with high speed for harder foods — hard vegetables like potatoes and carrots, meats like pepperoni, and hard cheeses like Pecorino Romano.
- Use the table provided to determine the appropriate speed for your recipe.

FUNCTION	ACCESSORY	STAND MIXER SPEED
Slicing	Adjustable Slicing Disc	2
		10
Shredding	Reversible Shredding Disc	2
		10
Julienne	Julienne Disc	4

# SPEED SELECTION GUIDE (CONTINUED)

FUNCTION	ACCESSORY	STAND MIXER SPEED
Dicing	Dicing Disc and Dicing Blade	4
		10

## PRODUCT ASSEMBLY

### Before first use

Before using your Food Processor Attachment for the first time, wash all parts and accessories either by hand or in the dishwasher (see the “Care and Cleaning” section).

 
**IMPORTANT:** To avoid damaging the Food Processor Attachment, do not immerse the Attachment Assembly in water or other liquids. All other parts are top rack dishwasher-safe.

**NOTE:** This product is designed for household use only.

1. Grasp the Feed Tube on the Interlock Lid and turn it clockwise to remove it from the Food Processor Attachment Assembly.

### INSTALLING THE REVERSIBLE SHREDDING DISC

1. Insert the Liner into the Attachment Assembly so that the Feed Tubes line up and the Liner lies flat.
2. Slide the Disc Adapter onto the Drive Pin.

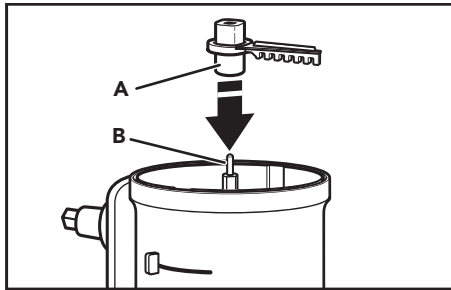

A. Disc Adapter  
B. Drive Pin


3. Hold the Reversible Shredding Disc by the two finger grips with the desired shredding side facing up. Install the Disc on the Disc Adapter by fitting the Adapter through the hole in the bottom of the Disc until it is seated against the Liner.
4. Install the Lid by turning counterclockwise, being sure it locks into place.

# PRODUCT ASSEMBLY (CONTINUED)
 
## INSTALLING THE JULIENNE DISC

---

1. Insert the Liner into the Attachment Assembly so that the Feed Tubes line up and the Liner lies flat.
2. Slide the Disc Adapter onto the Drive Pin.

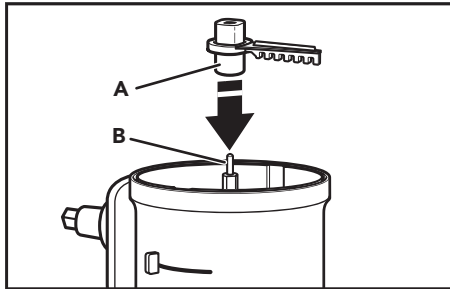

A. Disc Adapter  
B. Drive Pin

3. Hold the Julienne Disc by the two finger grips, with the smaller side of the middle hole facing up. Install the Disc on the Disc Adapter by fitting the Adapter through the hole in the bottom of the Disc until it is seated against the Liner.
4. Install the Lid by turning counterclockwise, being sure it locks into place.

## INSTALLING THE ADJUSTABLE SLICING DISC

---

1. Insert the Liner into the Attachment Assembly so that the Feed Tubes line up and the Liner lies flat.
2. Hold the Slicing Disc by the finger grips and lower it onto the Drive Pin. You may need to turn the Disc/Drive Adapter until it drops down into place.
3. Set the desired slicing thickness by moving the External Control Lever to the left for thinner slices or to the right for thicker slices.  
**NOTE:** If the sliced food is not to the desired thickness, the External Control Lever can be adjusted during operation.
4. Install the Lid by turning counterclockwise, being sure it locks into place.

 
## INSTALLING THE DICING DISC AND BLADE

---

1. Insert the Liner into the Attachment Assembly so that the Feed Tubes line up and the Liner lies flat.
2. Hold the Dicing Disc by the middle hole and Disc edge, chute lip side facing down. Place the Disc on top of the Liner so that the dicing grate aligns with the Liner's Feed Tube.

# PRODUCT ASSEMBLY (CONTINUED)

3. Install the Blade on top of the Dicing Disc by sliding it onto the Drive Pin.

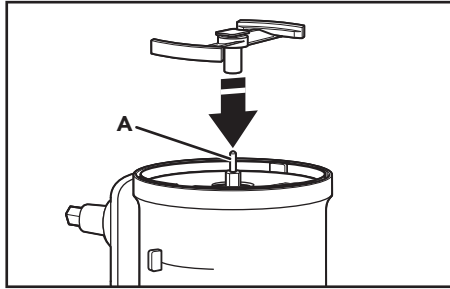

A. Drive Pin

4. Install the Lid by turning counterclockwise, being sure it locks into place.

## ATTACHING THE FOOD PROCESSOR ATTACHMENT TO THE STAND MIXER

1. Turn Stand Mixer OFF(0) and unplug.
2. **For Stand Mixers with a hinged attachment hub cover:** Flip up to open.  
**For Stand Mixers with a removable attachment hub cover:** Turn the attachment knob counterclockwise to remove attachment hub cover.
3. Insert the Attachment into the attachment hub. Rotate the Attachment back and forth if necessary. The pin on the attachment housing will fit into the notch of the hub rim when in its proper position.
4. Tighten attachment knob until the Food Processor Attachment is completely secured to the Stand Mixer.
5. Place a bowl or container under the food exit chute.

## **!WARNING**

### Electrical Shock Hazard



**Plug into an earthed outlet.**

**Do not remove earth prong.**

**Do not use an adapter.**

**Do not use an extension cord.**

**Failure to follow these instructions can result in death, fire, or electrical shock.**

6. Plug the Stand Mixer into an earthed outlet.

# PRODUCT USAGE

## PROCESSING WITH THE FOOD PROCESSOR ATTACHMENT

---

### **WARNING**

#### Rotating Blade Hazard



**Always use food pusher.**

**Keep fingers out of openings.**

**Keep away from children.**

**Failure to do so can result in amputation or cuts.**

**NOTE:** Before operating the Food Processor Attachment, be sure the Attachment Assembly and Discs are properly assembled and attached to the Stand Mixer (see the “Product Assembly” section). Place a bowl or container underneath the Feed Tube to catch all processed food.

1. Place the Interlock Lid on the Attachment Assembly, making sure to click the lock into place. Turn the Stand Mixer on to the appropriate speed. See the “Speed Selection Guide” for more information.
2. Use the Food Pusher to slowly feed items into the Attachment Assembly.

## CARE AND CLEANING

**IMPORTANT:** To avoid damaging the Food Processor Attachment, do not wash or immerse the Attachment Assembly in water or other liquids. All other parts are top rack dishwasher-safe.

1. Turn Stand Mixer OFF(0) and unplug from outlet.


**IMPORTANT:** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

2. Remove and disassemble Food Processor Attachment.
3. Wipe the Attachment Assembly with a warm, damp cloth. Avoid using abrasive cleaners or scouring pads, as they may scratch the Attachment Assembly casing. Thoroughly dry with a soft cloth.
4. All other parts may be washed in warm, sudsy water or placed in the top rack of the dishwasher for cleaning.

## ELECTRICAL EQUIPMENT WASTE DISPOSAL

### DISPOSAL OF PACKING MATERIAL

---

The packing material is recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### RECYCLING THE PRODUCT

---

- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.



# ELECTRICAL EQUIPMENT WASTE DISPOSAL (CONTINUED)

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## DECLARATION OF CONFORMITY

### FOR UNITED KINGDOM

---

This appliance has been designed, constructed and distributed in compliance with the safety requirements of UK Legislation: Electrical Equipment (Safety) Regulations 2016, The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019. The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

### FOR EUROPEAN UNION

---

This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives: 2014/35/EU, 2014/30/EU and 2011/65/EU (RoHS Directive) and following amendments.

## TERMS OF KITCHENAID GUARANTEE ("GUARANTEE")

### Covering U.K. - Ireland - South Africa - UAE

KitchenAid Europa, Inc., Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium ("Guarantor") grants the end-customer, who is a consumer, a Guarantee pursuant to the following terms.

#### FOR U.K.:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Rights Act 2015 says products must be as described, fit for purpose and of satisfactory quality. During the expected lifespan of your product your legal rights entitle you to the following:

- Up to 30 days: if your product is faulty, then you can get an immediate refund.
- Up to six months: if your product can't be repaired or replaced, then you're entitled to a full refund, in most cases.
- Up to six years: if your product does not last a reasonable length of time you may be entitled to some money back.

These rights are subject to certain exceptions. For detailed information please visit the Citizens Advice website [www.adviceguide.org.uk](http://www.adviceguide.org.uk) or call **03454 04 05 06**.

#### FOR IRELAND:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product under the European Communities (Certain Aspects of the Sale of Consumer Goods and Associated Guarantees) Regulations 2003 (S.I. No. 11/2003) and other enactments governing the sale of consumer goods.

#### FOR SOUTH AFRICA:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Protection Act, 2008 says that products must be: (i) reasonably suitable for the purpose for which they are intended; (ii) in good working order, of good quality and free of any defects; (iii) useable and durable for a reasonable period of time, having regard to the use to which they would normally be put and to all the surrounding circumstances; and (iv) in compliance with any applicable standards or any other public regulations.

During the expected lifespan of your product and where the products are not purchased online, your legal rights will entitle you to the following:

- You will be entitled to a full refund, if you did not have the opportunity to examine the product before delivery and if you rejected delivery of the product on the basis that the type and quality of the product was not as reasonably expected or did not reasonably conform to the material specifications.
- Within 5 business days after delivery: you may rescind your purchase and request a refund, if your purchase resulted from direct marketing.
- Within 10 business days after delivery: you will be entitled to a full refund, if it is found that the product was unsuitable for a particular purpose specifically communicated to you by the Guarantor.

# TERMS OF KITCHENAID GUARANTEE ("GUARANTEE") (CONTINUED)

- Within 15 business days after delivery: you will be entitled to a refund if: (i) the product was not delivered to you; or (ii) if you returned the product to the Guarantor.
- Within 6 months after delivery: you will be entitled to a refund or a replacement product, if the product is defective or fails to operate in terms of its specifications.

Where you have purchased a product online your legal rights will be governed by the Electronic Communications and Transactions Act, 2002 and you will be entitled to the following:

- Within 7 days after conclusion of the transaction or after delivery: you may cancel your purchase without reason and without penalty.
- Within 30 days of the date of cancellation of the transaction: you will be entitled to receive a refund, if you have already made payment.
- You will only be liable for the direct costs of returning the product to the Guarantor.

## FOR UAE:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product.

## 1. SCOPE AND TERMS OF THE GUARANTEE

- The Guarantor grants the Guarantee for the products mentioned under Section 1.b) which a consumer has purchased from a seller or a company of the KitchenAid-Group within the following countries: U.K., Ireland, or South Africa, or the United Arab Emirates (UAE).
- The Guarantee period depends on the purchased product and is as follows:  
**Two Year full guarantee from date of purchase.**
- The Guarantee period commences on the date of purchase, i.e. the date on which a consumer purchased the product from a dealer or a company of the KitchenAid-Group.
- The Guarantee covers the defect-free nature of the product.
- The Guarantor shall provide the consumer with the following services under this Guarantee, at the choice of the Guarantor, if a defect occurs during the Guarantee period:
  - Repair of the defective product or product part, or
  - Replacement of the defective product or product part. If a product is no longer available, the Guarantor is entitled to exchange the product for a product of equal or higher value.
- If the consumer wishes to make a claim under the Guarantee, the consumer has to contact the country specific KitchenAid service centres or the Guarantor directly at KitchenAid Europa, Inc. Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium;

Email-Address U.K.: [CONSUMERCARE.UK@kitchenaid.eu](mailto:CONSUMERCARE.UK@kitchenaid.eu)

Email-Address IRELAND: [CONSUMERCARE.IE@kitchenaid.eu](mailto:CONSUMERCARE.IE@kitchenaid.eu)

Toll Free Number U.K. & IRELAND: **00 800 381 040 26**

## FOR SOUTH-AFRICA:

### Our local KitchenAid Distributor:

KitchenAid Africa  
PO Box 52102  
V&A Waterfront  
Cape Town  
8002

### Contact our distributor:

Telephone: +27 21 555 0700

You can contact our Customer Service Centre for Small Domestic Appliances from 8.30 am to 1.00 pm and from 1.30 pm to 5.00 pm or write to us at the following address: [hello@kitchenaidafrica.com](mailto:hello@kitchenaidafrica.com)

## FOR UAE:

### AL GHANDI ELECTRONICS.

POST BOX NO. 9098,  
DUBAI, UNITED ARAB EMIRATES  
Toll free number: +971 4 2570007

- The costs of repair, including spare parts, and any postage costs (if applicable) for the delivery of a defect-free product or product part shall be borne by the Guarantor. The Guarantor shall also bear the postage costs for returning the defective product or product part if the Guarantor or the country specific KitchenAid customer service centre requested the return of the defective product or product part. However, the consumer shall bear the costs of appropriate packaging for the return of the defective product or product part.
- To be able to make a claim under the Guarantee, the consumer must present the receipt or invoice of the purchase of the product.

# TERMS OF KITCHENAID GUARANTEE ("GUARANTEE") (CONTINUED)

## 2. LIMITATIONS OF THE GUARANTEE

- a) The Guarantee applies only to products used for private purposes and not for professional or commercial purposes.
- b) The Guarantee does not apply in the case of normal wear and tear, improper or abusive use, failure to follow the instructions for use, use of the product at the wrong electrical voltage, installation and operation in violation of the applicable electrical regulations, and use of force (e.g. blows).
- c) The Guarantee does not apply if the product has been modified or converted, e.g. conversions from 120 V products to 220-240 V products.
- d) The provision of Guarantee services does not extend the Guarantee period, nor does it initiate the commencement of a new Guarantee period. The Guarantee period for installed spare parts ends with the Guarantee period for the entire product.
- e) **FOR SOUTH-AFRICA & UAE ONLY:**  
Further or other claims, in particular claims for damages, are excluded unless liability is mandatory by law.

 
After expiry of the Guarantee period or for products for which the Guarantee does not apply, the KitchenAid customer service centres are still available to the end-customer for questions and information.

Further information is also available on our website:

- For U.K. & Ireland [www.kitchenaid.eu](http://www.kitchenaid.eu)
- For South-Africa: [www.kitchenaidafrica.com](http://www.kitchenaidafrica.com)
- For UAE: [www.KitchenAid-MEA.com](http://www.KitchenAid-MEA.com)

## PRODUCT REGISTRATION

Register your new KitchenAid appliance now: <http://www.kitchenaid.eu/register>

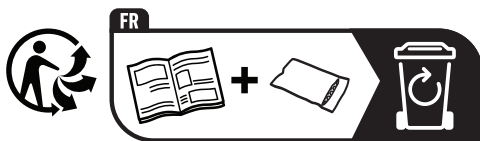

# KitchenAid

©2022 All rights reserved.

KITCHENAID and the design of the stand mixer are trademarks in the U.S. and elsewhere.