

# **KitchenAid**

## **7 SPEED CORDLESS HAND MIXER**

5KHMR700, 5KHMR762  
OWNER'S MANUAL

EN	Owner's Manual	2
DE	Bedienungsanleitung	9
FR	Le manuel d'utilisation	17
IT	Manuale del proprietario	26
NL	Gebruikershandleiding	33
ES	El manual del propietario	40
PT	Manual do proprietário	47
EL	Εγχειρίδιο Κατοχού	54
SV	Användarhandbok	61
NO	Brukerhåndbok	67
FI	Omistajan Opas	73
DA	Brugervejledning	79
IS	Notandahandbók	85
PL	Instrukcja Obsługi	91
CS	Uživatelská Příručka	98
TR	Kullanıcı Kilavuzu	105
UA	Посібник з експлуатації	112
AR	دليل المالك	1

# PRODUCT SAFETY

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

- 1.** Read all instructions. Misuse of appliance may result in personal injury.
- 2.** To protect against risk of electrical shock, do not put the Motor Body of Cordless Hand Mixer, USB adapter, Battery, or USB Cable in water or other liquid.
- 3.** European Union only: Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- 4.** European Union only: This appliance shall not be used by children. Keep the appliance out of reach of children. Cleaning and user maintenance shall not be made by children without supervision.
- 5.** Turn the appliance off, before assembling or disassembling parts and before cleaning. To unplug the adapter, grasp the adapter and pull from the power source. Never pull from the power cord.
- 6.** Do not use an extension cord. Plug adapter directly into an electric outlet.
- 7.** Do not modify or attempt to repair the appliance or the Battery.
- 8.** Do not incinerate this appliance even if it is severely damaged. The batteries can explode in a fire.
- 9.** Avoid contacting moving parts. Keep hands, hair clothing, as well as spatulas and other utensils away from beaters and accessories during operation to reduce the risk of injury to persons or damage to the Cordless Hand Mixer.
- 10.** Do not operate any appliance or USB adapter with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorised Service Centre for examination, repair or adjustment.
- 11.** The use of accessories/attachments not recommended or sold by KitchenAid may cause fire, electric shock, or injury to persons.

12. Do not let cord hang over edge of table or counter.
13. Never leave the appliance unattended while it is in operation.
14. Do not let cord contact hot surface, including the stove.
15. Remove beaters or accessories from the Cordless Hand Mixer before washing.
16. Refer to the “Care and Cleaning” section for instructions on cleaning the surfaces in contact with food.
17. Disconnect the Battery from the appliance before making any adjustments, changing accessories, or storing appliance. Such preventive safety measures reduce the risk of starting the appliance accidentally.
18. Prevent unintentional starting. Ensure the switch is in the off-position before connecting to the Battery, picking up or carrying the appliance. Carrying the appliance with your finger on the switch or energizing appliance that have the switch ON invites accidents.
19. Recharge only with the adapter specified by the manufacturer. The adapter that is suitable for one type of Battery may create a risk of fire when used with another Battery.
20. Use appliances only with KitchenAid 12 V Battery. Use of any other Batteries may create a risk of injury and fire.
21. When the Battery is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another. Shorting the Battery terminals together may cause burns or a fire.
22. Under abusive conditions, liquid may be ejected from the Battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help. Liquid ejected from the Battery may cause irritation or burns.
23. Do not use a Battery or appliance that is damaged or modified. Damaged or modified batteries may exhibit unpredictable behaviour resulting in fire, explosion or risk of injury.
24. Do not expose a Battery or appliance to fire or excessive temperature. Exposure to fire or temperature above 129°C may cause explosion.

25. Follow all charging instructions and do not charge the Battery or appliance outside of the temperature range specified in the instructions. Charging improperly or at temperatures outside of the specified range may damage the Battery and increase the risk of fire.
26. Never service damaged Battery. Service of Battery should only be performed by the manufacturer or authorised service providers.
27. Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.
28. Do not use Cordless Hand Mixer in rain or wet conditions. Do not expose to rain —store indoors.
29. Do not use the appliance for other than intended use.
30. Do not operate Hand Mixer continuously for more than 5 minutes.
31. Empty batteries should be removed from the appliance and safely disposed.
32. If the appliance is stored for a long period, the batteries should be removed.
33. If the Battery leaks, remove the Battery from the appliance and do not use the Battery again.
34. Rechargeable batteries are to be removed from the appliance before being charged.
35. **IMPORTANT:** Use only with approved USB adapter by market.
36. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farmhouses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

## **SAVE THESE INSTRUCTIONS**

For complete details on product information, instructions and videos, including Guarantee information, visit

**[www.kitchenaid.co.uk/product-tips](http://www.kitchenaid.co.uk/product-tips),  
[www.kitchenaid.ie/product-tips](http://www.kitchenaid.ie/product-tips), or [www.KitchenAid.eu](http://www.KitchenAid.eu).**

## ELECTRICAL REQUIREMENT

### USB Adapter:

**Input:** 100–240 V~, 50–60 Hz, 0.5 A

**USB Output:** 5 VDC, 2 A

**Recommended ambient charging temperature:** 5-40°C

**External Battery (Lithium-ion):** 5KRB12

**Nominal Voltage:** 10.8 VDC

**Maximum Voltage:** 12 VDC

**NOTE:** If the adapter does not fit in the power source, contact a qualified electrician. Do not modify the adapter in any way.

Do not use, store, or charge Battery or products in locations where the temperature is less than 10°C or more than 40°C.

## LITHIUM-ION BATTERY OPERATED PRODUCT DISPOSAL

Always dispose the Battery operated products according to federal, state, and local regulations. Contact a recycling agency in your area for recycling locations.

## GETTING STARTED

### BEFORE FIRST USE

1. Charge the Battery until it is fully charged.
2. Clean all the parts and accessories (see “Care and Cleaning” section).
3. Remove all packaging materials, if present.

**NOTE:** Some dust may be on the product. This is due to the recycled materials used in packaging. This can be cleaned with a soft towel.

## BATTERY CHARGING

### USING THE USB CABLE

1. Attach the USB Cable to the adapter. Connect the other end of the USB Cable to the Battery.
2. Plug the adapter into a power source.

## PRODUCT ASSEMBLY

1. **IMPORTANT:** Make sure that the Speed Controller is at “O” position before attaching and removing Stainless Steel Turbo Beater II accessories.
2. There are two Stainless Steel Turbo Beater II accessories. One is without a collar and another with a collar.
3. Insert the Stainless Steel Turbo Beater II accessories without a collar into the smaller opening and Stainless Steel Turbo Beater II accessories with a collar into the larger opening. Align and push to lock into place. Both the Stainless Steel Turbo Beater II accessories will click in.

## PRODUCT USAGE

**NOTE:** Make sure the Battery is fully charged before use.

1. Insert the Battery into the Battery slot located at the back of the appliance.
2. The LED will light and display the Battery level for five seconds, then turn off.

3. Always start mixing at the lowest speed, and by sliding the Speed Controller, increase the speed according to the recipes.
4. To increase the speed, slide the Speed Controller forward (↑). To decrease the speed, slide the Speed Controller backward (↓).
5. When finished, slide the Speed controller to “O” position.
6. Press and hold the Battery Unlock Button to remove the Battery.

## CARE AND CLEANING

**IMPORTANT:** Make sure the Speed Controller is at “O” position before attaching or removing Stainless Steel Turbo Beater II accessories. Remove the Battery before cleaning.

**IMPORTANT:** Allow the appliance to cool completely before putting on or taking off parts, and before cleaning the appliance.

1. Press the Eject Button to release the Stainless Steel Turbo Beater II accessories from the Cordless Hand Mixer.
2. Always remove the Stainless Steel Turbo Beater II accessories from the Cordless Hand Mixer before cleaning. The beaters can be washed in the dishwasher or by hand in warm, soapy water. Rinse and wipe dry.
3. Wipe the Cordless Hand Mixer with a damp cloth. Dry with a soft cloth.


**NOTE:** To avoid damage to the Cordless Hand Mixer, do not immerse in water.

### FOR DETAILED INFORMATION ABOUT THE CORDLESS HAND MIXER:


Visit [www.kitchenaid.com/quickstart](http://www.kitchenaid.com/quickstart) for additional instructions with videos, inspiring recipes, and tips on how to use and clean your Cordless Hand Mixer.

## ELECTRICAL EQUIPMENT WASTE DISPOSAL

### DISPOSAL OF PACKING MATERIAL

The packing material is recyclable and is marked with the recycle symbol . The various parts of the packing must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

### RECYCLING THE PRODUCT

- This appliance is marked in compliance with law in the EU and UK covering, Waste Electrical and Electronic Equipment (WEEE).
- By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.
- The symbol  on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

## DECLARATION OF CONFORMITY

### FOR UNITED KINGDOM

This appliance has been designed, constructed and distributed in compliance with the safety requirements of UK Legislation: Electrical Equipment (Safety) Regulations 2016, Electromagnetic Compatibility Regulations 2016. The Ecodesign for Energy-Related Products and Energy Information (Amendment) (EU Exit) Regulations 2019. The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.

## FOR EUROPEAN UNION

This appliance has been designed, constructed, and distributed in compliance with the safety requirements of EC Directives: Low Voltage Directive 2014/35/EU, Electromagnetic Compatibility Directive 2014/30/EU, Ecodesign Directive 2009/125/EC, RoHS Directive 2011/65/EU and following amendments.

# TERMS OF KITCHENAID GUARANTEE ("GUARANTEE")

## Covering U.K. - Ireland - UAE

KitchenAid Europa, Inc., Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium ("Guarantor") grants the end-customer, who is a consumer, a Guarantee pursuant to the following terms.

### FOR U.K.:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product. In summary, the Consumer Rights Act 2015 says products must be as described, fit for purpose and of satisfactory quality. During the expected lifespan of your product your legal rights entitle you to the following:

- Up to 30 days: if your product is faulty, then you can get an immediate refund.
- Up to six months: if your product can't be repaired or replaced, then you're entitled to a full refund, in most cases.
- Up to six years: if your product does not last a reasonable length of time you may be entitled to some money back.

These rights are subject to certain exceptions. For detailed information please visit the Citizens Advice website [www.adviceguide.org.uk](http://www.adviceguide.org.uk) or call **03454 04 05 06**.

### FOR IRELAND:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product under the European Communities (Certain Aspects of the Sale of Consumer Goods and Associated Guarantees Regulations 2003 (S.I. No. 11/2003)) and other enactments governing the sale of consumer goods.

### FOR UAE:

The Guarantee applies in addition to and does not limit or affect the statutory warranty rights of the end-customer against the seller of the product.

## 1. SCOPE AND TERMS OF THE GUARANTEE

- a) The Guarantor grants the Guarantee for the products mentioned under Section 1.b) which a consumer has purchased from a seller or a company of the KitchenAid-Group within the following countries: U.K., Ireland, or the United Arab Emirates (UAE).
- b) The Guarantee period depends on the purchased product and is as follows:  
**One Year full guarantee from date of purchase.**
- c) The Guarantee period commences on the date of purchase, i.e. the date on which a consumer purchased the product from a dealer or a company of the KitchenAid-Group.
- d) The Guarantee covers the defect-free nature of the product.
- e) The Guarantor shall provide the consumer with the following services under this Guarantee, at the choice of the Guarantor, if a defect occurs during the Guarantee period:
  - Repair of the defective product or product part, or
  - Replacement of the defective product or product part. If a product is no longer available, the Guarantor is entitled to exchange the product for a product of equal or higher value.
- f) If the consumer wishes to make a claim under the Guarantee, the consumer has to contact the country specific KitchenAid service centres or the Guarantor directly at KitchenAid Europa, Inc. Nijverheidslaan 3, Box 5, 1853 Strombeek-Bever, Belgium;

Email-Address U.K.: [CONSUMERCARE.UK@kitchenaid.eu](mailto:CONSUMERCARE.UK@kitchenaid.eu)

Email-Address IRELAND: [CONSUMERCARE.IE@kitchenaid.eu](mailto:CONSUMERCARE.IE@kitchenaid.eu)

Toll Free Number U.K. & IRELAND: **00 800 381 040 26**

### FOR UAE:

**AL GHANDI ELECTRONICS.**

POST BOX NO. 9098,

DUBAI, UNITED ARAB EMIRATES

Toll free number: +971 4 2570007

- g) The costs of repair, including spare parts, and any postage costs (if applicable) for the delivery of a defect-free product or product part shall be borne by the Guarantor. The Guarantor shall also bear the postage costs for returning the defective product or product part if the Guarantor or the country specific KitchenAid customer service centre requested the return of the defective product or product part. However, the consumer shall bear the costs of appropriate packaging for the return of the defective product or product part.

h) To be able to make a claim under the Guarantee, the consumer must present the receipt or invoice of the purchase of the product.

## 2. LIMITATIONS OF THE GUARANTEE

- a) The Guarantee applies only to products used for private purposes and not for professional or commercial purposes.
- b) The Guarantee does not apply in the case of normal wear and tear, improper or abusive use, failure to follow the instructions for use, use of the product at the wrong electrical voltage, installation and operation in violation of the applicable electrical regulations, and use of force (e.g. blows).
- c) The Guarantee does not apply if the product has been modified or converted, e.g. conversions from 120 V products to 220-240 V products.
- d) The provision of Guarantee services does not extend the Guarantee period, nor does it initiate the commencement of a new Guarantee period. The Guarantee period for installed spare parts ends with the Guarantee period for the entire product.
- e) **FOR UAE ONLY:**  
Further or other claims, in particular claims for damages, are excluded unless liability is mandatory by law.

After expiry of the Guarantee period or for products for which the Guarantee does not apply, the KitchenAid customer service centres are still available to the end-customer for questions and information.

Further information is also available on our website:

- For U.K. & Ireland [www.kitchenaid.eu](http://www.kitchenaid.eu)
- For UAE: [www.KitchenAid-MEA.com](http://www.KitchenAid-MEA.com)

# PRODUCT REGISTRATION

Register your new KitchenAid appliance now: <http://www.kitchenaid.eu/register>