



THANK YOU FOR BUYING A WHIRLPOOL PRODUCT
In order to receive a more complete assistance, please register your product on www.whirlpool.eu/register



Before using the appliance carefully read the Safety Instruction.

 
PRODUCT DESCRIPTION

FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

CONTROL PANEL

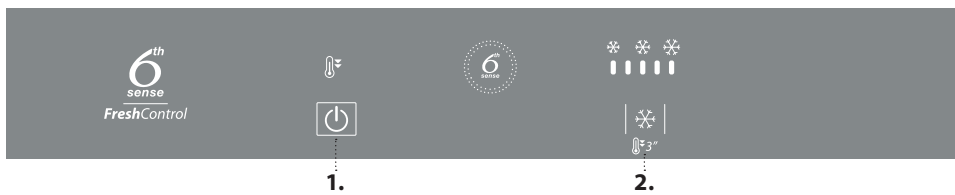
 


1. On/stand-by
2. Refrigerator temperature - Fast cool

6TH SENSE FRESH CONTROL

The appliance is automatically able to quickly reach the optimal internal preservation temperature. The function enables to control also the humidity of the appliance. In order for it to function correctly, the fan must also be turned on. It is possible to turn the function on/off (see Fan description).

FAN*

The Fan improves temperature distribution inside the product, allowing better preservation of stored food and reduction of excess humidity. The fan is switched on by default and can be activate/deactivate manually. The fan operating mode is adjusted based on product condition. You can turn the fan on/off by pressing the  and "On/Stand-by"  buttons at the same time for 3 seconds. The lit 6th Sense FreshControl symbol indicates that the fan is on and therefore the 6th Sense FreshControl function is on. If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised.

Note: the fan restarts automatically after a power cut or after turning off the appliance. Do not obstruct the air intake area with food items.

ANTIBACTERIAL FILTER*

Remove it from the box placed in the Fruit and vegetable drawer and insert into the cover of fan. The replacement procedure is included in the filter box.




 

ON/STAND-BY

Press the button for 3 seconds to turn the appliance off. In Stand-by mode the light in the refrigerator compartment does not turn on. Press the button again briefly to reactivate the appliance.

Note: this does not disconnect the appliance from the power supply.

 

REFRIGERATOR COMPARTMENT TEMPERATURE


It is possible to set a different temperature with the  button. There are five possible controls.

- From a less cold temperature  (left)
- to a colder temperature  (right).



FAST COOL

 Press the button  for 3 seconds to quickly cool the refrigerator compartment or 6 hours before putting large quantities of food to be frozen in the freezing zone. When the function is turned on the icon  lights up.

The function automatically turns off after 30 hours, or manually by pressing the button  again for 3 seconds.

 
Note: avoid a direct contact between the fresh food and the food that is already frozen. To optimise the freezing speed, drawers can be removed and the food can be placed directly on the bottom of the compartment.

* Available only on certain models

"0° ZONE" COMPARTMENT*

The "0° ZONE" compartment is specifically designed to maintain a low temperature and the correct humidity to preserve fresh food for longer (for example, meat, fish, fruits and winter vegetables).


Humidity control technology coupled with Active0 provides the best food preservation when the food is not completely packed.

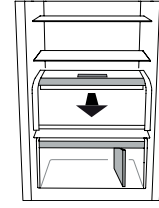

TURNING ON AND TURNING OFF THE COMPARTMENT

The internal temperature of the compartment is approximately 0° when the compartment is turned on.

 To turn on the compartment, press the button (1) for more than one second until the symbol (2) lights up. The lit symbol (2) means that the compartment is working. Press the button (1) again for more than one second to turn off the compartment. The temperature inside depends on the general temperature of the refrigerator.

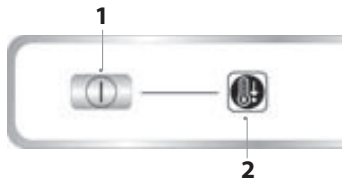

For the correct functioning of the "0° ZONE" compartment, it is necessary that:

- the appliance is turned on;
- the fridge temperature is between +2°C and +6°C;
- the "0° ZONE" compartment is turned on
- Vacation Mode and Stand by are not selected

Note:

- if the symbol does not light up when you turn on the compartment, check that the drawer is properly inserted; if the problem persists contact the authorised Technical Assistance Service;
- when the "0° ZONE" compartment is inserted in the appliance you may hear a faint noise, which you should consider as normal;

Important: be careful when positioning food and containers that are small in size on the upper shelf of the "0° ZONE" compartment in order to prevent them accidentally falling between the shelf and the back wall of the refrigerator compartment.

REMOVING THE "0° ZONE" COMPARTMENT

Carry out the following steps:

1. To make it easier to remove the compartment, we recommend that you empty (and possibly remove) the lower door shelves.
2. Remove the compartment by rotating it upwards.
3. Remove the white plastic shelf under the compartment.

Note: it is not possible to remove the upper shelf and side supports.

To use the "0° ZONE" compartment again, carefully reposition the white plastic shelf under the compartment before inserting the drawer and turning the function back on.

To have a larger refrigerator volume and to reduce energy consumption, it is recommended to remove the "0° ZONE" compartment.

Clean the compartment and its components occasionally using a cloth and a solution of warm water (taking care not to submerge the white plastic shelf under the drawer) and neutral cleaning agents specifically for cleaning the inside of the refrigerator. Do not use abrasive cleaning agents.

 
Before cleaning the compartment (also externally) it is necessary to remove the drawer to disconnect the electrical supply.

STOP FROST SYSTEM*

The STOP FROST SYSTEM facilitates the defrost procedure for the freezer compartment.


The STOP FROST accessory is designed to collect some of the frost that forms in the freezer compartment and it is easy to remove and clean, therefore reducing the time needed to defrost the freezer compartment.

To remove the frost on the STOP FROST accessory follow the cleaning procedure demonstrated below.




PROCEDURE TO CLEAN THE STOP FROST ACCESSORY

 1. Open the freezer compartment door and remove the upper drawer.

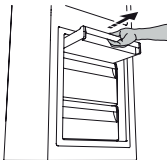

2. Unfasten the STOP FROST accessory and remove it, taking care not to drop it on the glass shelf below.

 
Note: if the accessory is jammed or difficult to remove, do not keep trying to remove it, but proceed with the complete defrost of the freezer compartment.

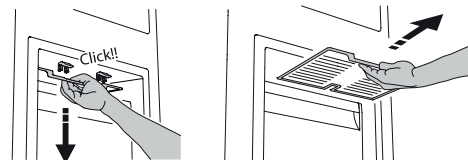


3. Close the door of the freezer compartment.

* Available only on certain models

 
4. Remove the frost on the accessory by rinsing it under running (not hot) water.

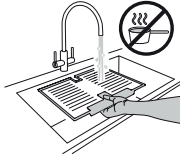

 5. Let the accessory drip dry and dry the plastic parts with a soft cloth.

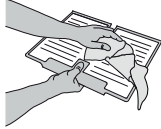

 6. Reinsert the accessory by placing the back part on the projections shown in figure, then refasten the handle of the accessory to the clasps above.

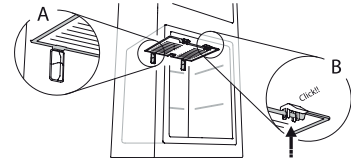


 7. Reinsert the upper drawer and close the door of the freezer compartment.




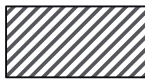

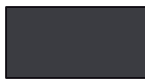
It is possible to clean the STOP FROST accessory on its own without completely defrosting the freezer compartment. Cleaning the STOP FROST accessory regularly helps to reduce the need to completely defrost the freezer compartment.

Note: the product specifications, including volume and energy, are calculated without the STOP FROST accessory.

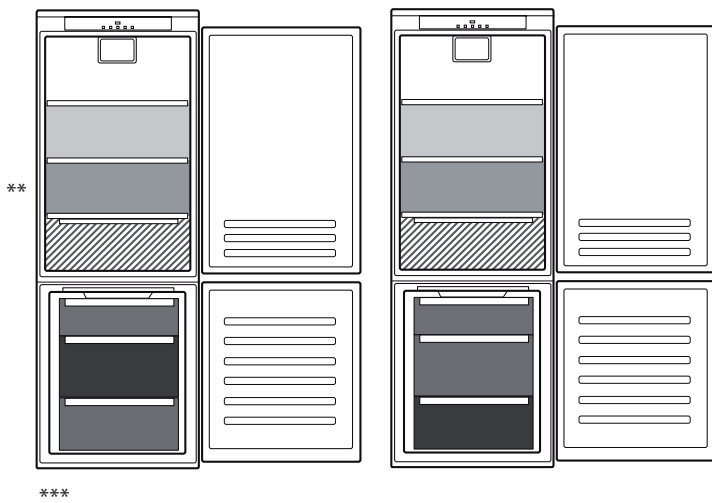HOW TO STORE FOOD AND BEVERAGE




Legend

	TEMPERATE ZONE Suggested for storage of tropical fruit, cans, drink, eggs, sauces, pickles, butter, jam
	COOL ZONE Suggested for storage of cheese, milk, daily food, delicatessen, yoghurt
	COOLEST AREA Suggested for storage of cold cuts, desserts, meat and fish
	FRUIT & VEGETABLE DRAWER
	FREEZER DRAWERS
	FREEZING ZONE DRAWER (Max cool zone) Suggested to freeze fresh/cooked food

** For models with "0 ° ZONE" COMPARTMENT the "coolest area" is the one highlighted in the legend

*** Only for CB310 e CB380 models (refer to the Rating plate located at side of Fruit and vegetable drawer)

TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance may be in On/Stand-by mode. There may be an appliance power supply problem.	Turn the appliance on pressing the On/Stand-by button. Check that: <ul style="list-style-type: none"> • there is not a power outage; • the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered); • the household electrical system protection devices are efficient; • the power cable is not damaged.
The inside light does not work.	The light may need to be replace.	Models with LED lights: contact the authorised Technical Assistance Service.
	The appliance may be in On/Stand-by mode.	Turn the appliance on pressing the On/Stand-by button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Solutions").	Check that: <ul style="list-style-type: none"> • the doors close properly; • the appliance is not installed near a heat source; • the set temperature is adequate; • the circulation of air through the ventilation of the appliance is ensured.
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrosting water drain (see section "Cleaning and Maintenance").
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No solution is necessary.
The temperature indicators for the refrigerator compartment are flashing as shown in the figure: 	Malfunction alarm The alarm indicates the malfunction of a technical component.	Call the authorized Technical Assistance Service.



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website docs.whirlpool.eu
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.



Whirlpool



400011189741