




**THANK YOU FOR BUYING A HOTPOINT PRODUCT.**  
In order to receive a more complete assistance, please register your appliance on: [www.hotpoint.eu/register](http://www.hotpoint.eu/register)



**Before using the appliance carefully read Safety and Installation Instructions.**


After installation, please remember to remove all transport protection parts from the dishwasher.

**PLEASE SCAN THE QR CODE ON YOUR APPLIANCE IN ORDER TO HAVE MORE DETAILED INFORMATION**

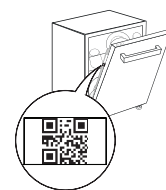

## CONTROL PANEL

1. ON-OFF/Reset button with indicator light
2. Program selection button
3. Salt refill indicator light
4. Rinse Aid refill indicator light
5. Program number and delay time indicator
6. Tablet indicator light
7. Display
8. 3D Zone Wash indicator light
9. 3D Zone Wash button
10. Delay button
11. START/Pause button with indicator light / Tablet (Tab)

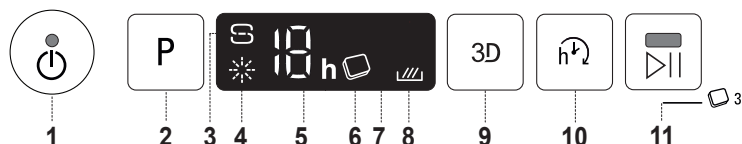

## FIRST TIME USE

More information in the **Daily Reference Guide** on website.

### FILLING THE SALT RESERVOIR

The use of salt prevents the formation of LIMESCALE on the dishes and on the machine's functional components.

- It is mandatory that **the salt reservoir never be empty**.
- It is important to set the water hardness.

The salt reservoir is located in the lower part of the dishwasher and must be filled when the **SALT REFILL indicator light** in the control panel is lit.



1. Remove the lower rack and unscrew the reservoir cap (anticlockwise).
2. **Only the first time you do this: fill the salt reservoir with water.**
3. Position the funnel (*see figure*) and fill the salt reservoir right up to its edge (approximately 1 kg); it is not unusual for a little water to leak out.

4. Remove the funnel and wipe any salt residue away from the opening. Make sure the cap is screwed on tightly, so that no detergent can get into the container during the wash program (this could damage the water softener beyond repair).

**Whenever you need to add salt, it is mandatory to complete the procedure before the beginning of the washing cycle to avoid corrosion.**


### WATER SOFTENING SYSTEM

Water softener automatically reduces water hardness, consequently preventing scale buildup on heater, contributing also to better cleaning efficiency.

**This system regenerates itself with salt, therefore it is required to refill salt container when empty.**

Frequency of regeneration depends on water hardness level setting - regeneration takes place once per 6 Eco cycles with water hardness level set to 3. Regeneration process starts in final rinse and finishes in drying phase, before cycle ends.

- Single regeneration consumes: ~3.5L of water;
- Takes up to 5 additional minutes for the cycle;
- Consumes below 0.005kWh of energy.

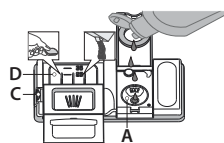

### FILLING THE RINSE AID DISPENSER

Rinse aid makes dish DRYING easier. The rinse aid dispenser **A** should be filled when the **RINSE AID REFILL** indicator light in the control panel is lit. **NEVER pour the rinse aid directly into the appliance tub.**





### FILLING THE DETERGENT DISPENSER

To open the detergent dispenser use the opening device **C**. Introduce the detergent into the dry dispenser **D** only. Place the amount of detergent for pre-washing directly inside the tub. If all-in-one detergents are used, we recommend using the **TABLET** button, because it adjusts the program so that the best washing and drying results are always achieved.

**Usage of detergent not designed for dishwashers may cause malfunction or damage to the appliance.**

## PROGRAMS TABLE

Program	Programs description	Drying phase	ActiveDry	Available options <sup>*)</sup>	Duration of wash program (h:min <sup>**)</sup>	Water consumption (litres/cycle)	Energy consumption (kWh/cycle)
1. <b>ECO</b>	<b>Eco 50°</b> - Program is suitable to clean normally soiled tableware, that for this use, it is the most efficient programme in terms of its combined energy and water consumption, and that it is used to assess compliance with the EU Ecodesign legislation.	✓	✓	3D	3:35	8.7	0.63
2.	<b>Auto Intensive 65°</b> - Automatic program for heavily soiled dishes and pans (not to be used for delicate items).	✓	✓	3D	2:00 - 3:10	14.0 - 17.0	1.50 - 1.85
3.	<b>Auto Mixed 55°</b> - Automatic program for normally soiled pans and dishes.	✓	✓	3D	1:20 - 3:00	7.0 - 14.0	0.70 - 1.10
4.	<b>Auto Fast Wash 50°</b> - Automatic program for limited quantity of normally soiled crockery. Ensures optimal cleaning performance in shorter time.	✓	✓		0:55 - 1:20	11.0 - 14.5	1.15 - 1.25
5.	<b>Half Load 55°</b> - Ideal for washing a half load of lightly or normally soiled crockery.	✓	✓		1:20	11.0	1.00
6.	<b>Rapid 30°</b> - Program to be used for half load of lightly-soiled dishes with no dried food residues. Without drying.	-	✓		0:30	9.0	0.50
7.	<b>Good Night 50°</b> - Suitable for night-time operation of the appliance. Ensures optimal cleaning and drying performance with the lowest noise emission.	✓	✓		3:30	16.0	1.15
8.	<b>Sanitizing 65°</b> - Normally or heavily soiled crockery, with additional antibacterial wash. Can be used to perform maintenance of the dishwasher.	✓	-		1.50	12.0	1.30

Program	Programs description	Drying phase	ActiveDry	Available options <sup>*)</sup>	Duration of wash program (h:min) <sup>**)</sup>	Water consumption (litres/cycle)	Energy consumption (kWh/cycle)
9. 	<b>Soak</b> - Use to refresh crockery planned to be washed later. No detergent to be used with this program.	-	-		0:10	4.5	0.01
10. 	<b>Self-Clean 65°</b> - Program to be used to perform maintenance of the dishwasher, to be carried out only when the dishwasher is EMPTY using specific detergents designed for dishwasher maintenance.	-	-		0:50	8.0	0,85


ECO program data is measured under laboratory conditions according to European Standard EN 60436:2020. Note for Test Laboratories: For information on comparative EN testing conditions, please send an email to the following address: [dw\\_test\\_support@europeanappliances.com](mailto:dw_test_support@europeanappliances.com)  
Pre-treatment of the dishes is not needed before any of the programs.

\*) Not all options can be used simultaneously.


\*\*) Values given for programs other than the program Eco are indicative only. The actual time may vary depending on many factors such as temperature and pressure of the incoming water, room temperature, amount of detergent, quantity and type of load, load balancing, additional selected options and sensor calibration. The sensor calibration can increase program duration up to 20 min.

## OPTIONS AND FUNCTIONS

Please scan the QR code on your product in order to have more detailed information.

 **TABLET (Tab)** - If you use powder or liquid detergent, this option should be off.

**3D 3D ZONE WASH** - Thanks to the additional power jets this option provides up to 80% more water power, a more intensive and powerful wash in the lower rack, in the specific bottom area. This option is recommended for washing pots and casseroles.

 **DELAY** - The start time of the program may be delayed for a period of time between **1** and **12** hours.

The DELAY function cannot be set once a program has been started.



**OPERATION INDICATOR** - A LED light projected on the floor indicates that the dishwasher is working.

One of the following operating modes can be selected:


- Disabled function.
- When the cycle starts the light goes on for few seconds, stays off during the cycle and flashes at the end of the cycle.
- The light stays on during the cycle and flashes at the end of the cycle (default mode).

**ActiveDry** - is a convection drying system which automatically opens the door during/after the drying phase to ensure exceptional drying performance every day. The door opens at a temperature that is safe to your kitchen furniture, thus door will not be opened when the option of SHORT TIME is on.

## LOADING THE RACKS

CAPACITY: **11** standard place-settings


### CUTLERY RACK

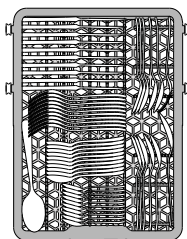

The third rack was designed to house the cutlery.

(loading example for the cutlery rack)

### UPPER RACK

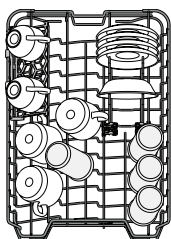

Load delicate and light dishes: glasses, cups, saucers, low salad bowls.


The upper rack has tip-up supports which can be used in a vertical position when arranging tea/ desert saucers or in a lower position to load bowls and food containers.

(loading example for the upper rack)

### FOLDABLE FLAPS WITH ADJUSTABLE POSITION



### LOWER RACK

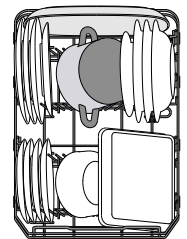


For pots, lids, plates, salad bowls, cutlery etc. Large plates and lids should ideally be placed at the sides to avoid interferences with the spray arm.

The lower rack has tip-up supports which can be used in a vertical position when arranging plates or in a horizontal position (lower) to load pans and salad bowls easily.

(loading example for the lower rack)

### 3D ZONE WASH

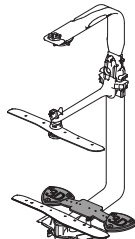


3D Zone Wash uses additional water jets located both: in the lower and upper part of the dishwasher (marked with orange color) to wash more intensively heavily soiled items by increasing water coverage on dishes.

## CARE AND MAINTENANCE

More information in the **Daily Reference Guide** on website.


### CLEANING THE FILTER ASSEMBLY

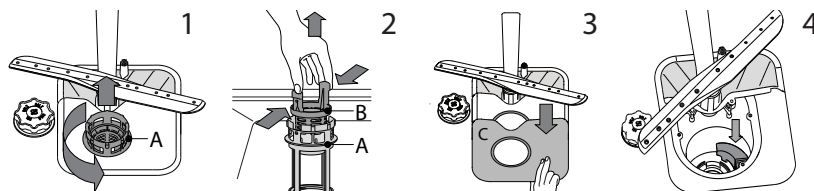

In case you find foreign objects (such as broken glass, porcelain, bones, fruit seeds etc.) **please remove them carefully.**

**NEVER REMOVE** the wash-cycle pump protection (black detail) (Fig 4).

### CLEANING THE SPRAY ARMS

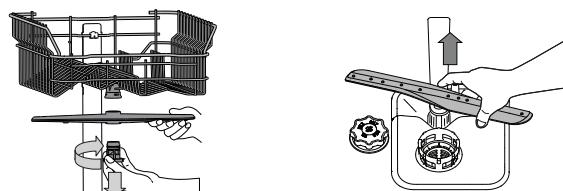

To remove the upper spray arm, turn the plastic locking ring in a clockwise direction.

The lower spray arm may be removed by pulling it upwards.

## TROUBLESHOOTING

Please scan the **QR code** on your product in order to have more detailed information.

In case your dishwasher doesn't work properly, check if the problem can be solved by going through the following list. For other errors or issues please contact authorized After-sales Service which contact details can be found in the warranty booklet. Spare parts will be available for a period of either up to 7 or up to 10 years, according to the specific Regulation requirements.

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
The dishwasher does not fill the water. Display shows: <b>H</b> , <b>6</b> and On/Off LED is blinking rapidly	No water in the water supply or the tap is closed.	Make sure there is water in the water supply or the tap running.
	The inlet hose is bent.	Make sure the inlet hose is not bent (see <i>INSTALLATION</i> ) reprogram the dishwasher and reboot.
	The sieve in the water inlet hose is clogged; it is necessary to clean it	After having carried out the verification and cleaning, turn off and turn on the dishwasher and restart a new program.
Dishwasher finishes the cycle prematurely. Display shows: <b>15</b> and On/Off LED is blinking rapidly	Drain hose positioned too low or siphoning into home sewage system.	Check if end of drain hose is placed at correct height (see <i>INSTALLATION</i> ). Check for siphoning into home sewage system, install air admittance valve if necessary.
	Air in water supply.	Check water supply for leaks or other issues letting air inside.
Detergent leaks.	Depends on the liquid detergent used and can be emphasized in case of delay option is activated.	Small leaks will not cause machine malfunction and can be avoided by changing liquid detergent type or using tablets.

Policies, standard documentation, ordering of spare parts and additional product information can be found by:

- Using QR code on your product.
- Visiting our website **[docs.hotpoint.eu](https://docs.hotpoint.eu)** and **[parts-selfservice.europeanappliances.com](https://parts-selfservice.europeanappliances.com)**
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet).

When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code reported in the energy label.

The label also includes the model identifier that can be used to consult the portal of the registry at <https://eprel.ec.europa.eu>.

