


MACHINE OPERATION

Additional information (including troubleshooting and service) can be found in the individual chapters of the Instructions for use.

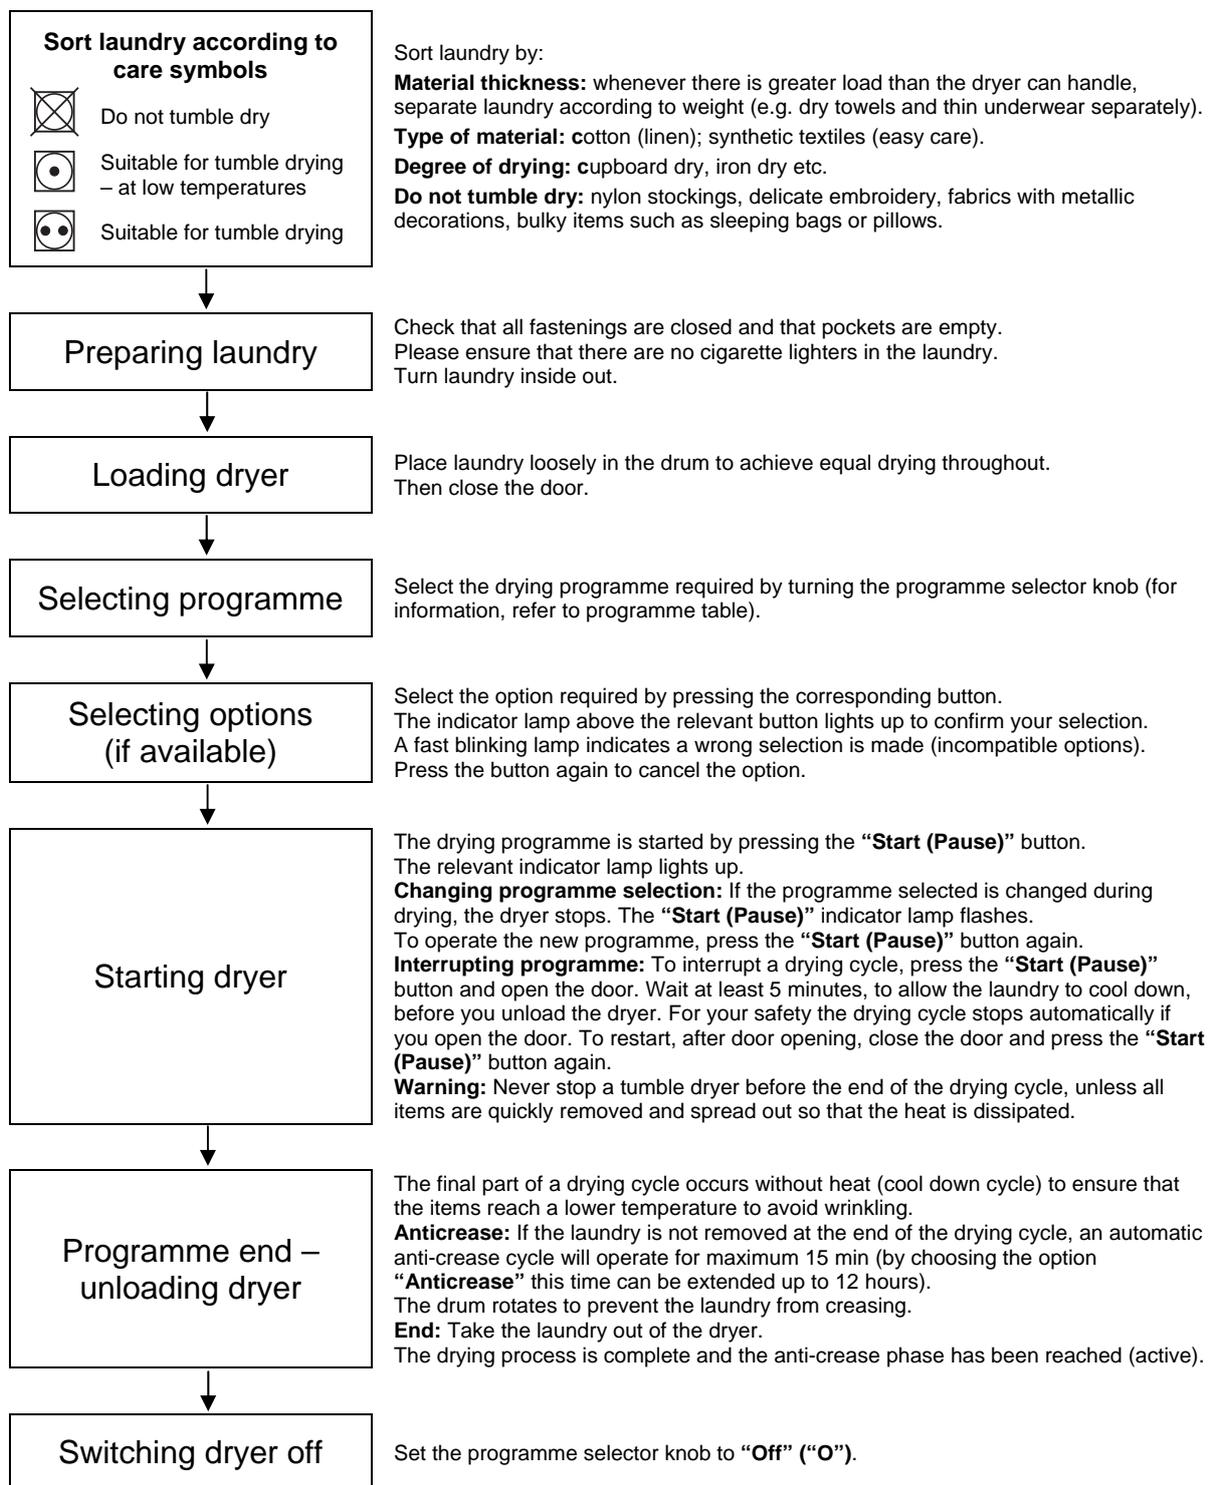

Cleaning the lint filter after every cycle: open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close door filter and push firmly back into place.

Emptying water container: pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

Please note: Only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided with the garment or article.

Overview of programmes				Options									Approximate drying times (in minutes)		
Programmes / Drying levels			Type of textile	Fabrics	Gentle 	Anticrease 	Rapid 	Dryness adjustment Dryness Level	Pause Start (Pause)	Key lock 	Reset Reset	Finish in Finish on time	Very wet load	Wet load	
	Extra dry	Extra dry	Multi-layered, thick laundry such as: terry towels, terry towelling bath robes.	Cotton Max. 9.0 kg	X	X	X	X	X	X	X	X	210	180	
	Cupboard dry plus	Cupboard dry +	Terry towels, dry towels, bed linen, underwear		X	X	X	X	X	X	X	X	X	185	160
	Cupboard dry	Cupboard dry*	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.		X	X	X	X	X	X	X	X	X	160	135
	Iron dry	Iron dry*	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		X	X	X	X	X	X	X	X	X	130	110
	Extra dry	Extra dry	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry Max. 4.5 kg	X	X	-	X	X	X	X	X	95	70	
	Cupboard dry	Cupboard dry*	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		X	X	-	X	X	X	X	X	X	70	50
	Iron dry	Iron dry	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		X	X	-	X	X	X	X	X	X	60	45
	Delicate Plus	Delicate plus	Low drying intensity for delicates and items such as: trousers, dresses, shirts, blouses.	Laundry made from synthetic fibres such as polyamide, nylon, polyacrylic, etc. 2.5 kg	X	X	-	X	X	X	X	X	85	70	
	Mixed load	Mixed load	T-shirts, blouses, towels, underwear, sportswear.	Cotton – synthetic blend 3.0 kg	X	X	-	X	X	X	X	X	80	60	
	Jeans	Jeans	Jeans, working trousers and jackets.	Cotton 3.0 kg	X	X	-	X	X	X	X	X	80	60	
	Silk	Silk	Blouses, shirts and T-shirts.	Textiles made of silk 2.5 kg	X	X	-	X	X	X	X	X	85	70	
	Sport	Sport	Sport clothes, functional underwear, running tights.	Synthetic 2.5 kg	X	X	-	X	X	X	X	X	85	70	
Airing	Laundry is aired, refreshed and loosen up for 30 minutes without heating.	All textiles.	Airing	-	-	-	-	X	X	X	X	30'	-		
Drying items	Completes drying (suitable for all fabrics)		Drying time 10' 20' 30' 40' 50' 60' 70' 80' 90' 100' 110' 120'	X	X	-	X	X	X	X	X	10' 20' 30' 40' 50' 60' 70' 80' 90' 100' 110' 120'			

*Test programmes according to EN61121, tested with maximum rated load capacity.

HOW TO PROCEED IF...

...you want to check the dryer yourself first: (If your machine is not functioning correctly, please check the following points before calling the customer service – also refer to relevant chapter in the Instructions for use)

<p>Drying takes too long / Laundry is not dry enough</p>	<ul style="list-style-type: none"> • Has the correct drying programme been selected? • Has the cycle been interrupted (door opening, full water container)? • Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm)? • Is the lint filter dirty (filter indicator light on)? • Is the heat exchanger dirty (for more information, refer to the Instructions for use)? • Is the room temperature too high? • Is the “End” and “Antcrease” indicator lamp lighting up? The drying cycle is complete and the laundry can be taken out. • If the drying result does not meet your expectation, select a more dry programme or use the dryness adjustment option (if available) to optimize the drying result. • Is thin and thick load mixed? Are different types of materials mixed? Sort the laundry after thickness and material and dry again.
<p>The dryer does not operate (after a power failure, always press the “Start (Pause)” button)</p>	<ul style="list-style-type: none"> • Is the plug properly inserted into the mains electricity socket? • Is there a power failure? • Has the fuse blown? • Is the door properly closed? • Has a drying programme been selected? • Has the “Start (Pause)” button been pressed? • Has the start delay option been selected? • Is the dryer overloaded? → Please remove a part of the load.
<p>Filter, water container indicator lamp on</p>	<ul style="list-style-type: none"> • Is the lint filter clean? • Is the water container empty? • Has the water container been inserted correctly? • Is the heat exchanger clean and inserted correctly?
<p>Water droplets underneath the dryer</p>	<ul style="list-style-type: none"> • Has the heat exchanger been inserted correctly? • Have all lint on the heat exchanger seal and the door seal been wiped away? • Has the water container been inserted correctly? • If the direct drain connection is used, is it tight? • Is the dryer leveled?

...you want to care of and clean your dryer:

<p>Clean the filter at the end of every cycle</p>	<ul style="list-style-type: none"> • Brush lint using a soft brush or your fingertips. • Close the filter. • Push the filter back into place.
<p>Empty the water container at the end of every drying cycle</p>	<ul style="list-style-type: none"> • Pull the handle to remove the water container. • Empty the water container. • Replace the water container when empty by pushing it completely back into place.
<p>Clean the heat exchanger at least once a month</p>	<ul style="list-style-type: none"> • Clean the heat exchanger under running water. • Remove all fluffs from the seals. • Clean the heat exchanger housing (for further information see chapter “Cleaning the heat exchanger” in the Instructions for use).

FAILURE CODES

In case of a malfunction of the dryer, one the following failure codes could be displayed.
Depending on the model of your dryer, the failure can be displayed in letters or by different blinking lamps.

Failure code	Lamps failure code	Check needed by customer before Service call
F01	* <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/>	Please call the After-Sales-Service.
F02	* <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/>	Please call the After-Sales-Service.
F03	* <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/>	Please call the After-Sales-Service.
F04	* <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/>	Please call the After-Sales-Service.
F05	* <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/>	Turn OFF the dryer. Unplug the dryer. Assure that the ambient temperature is between 5°C and 35°C. Wait for 1 hour. Plug the dryer again and restart the dryer. If the failure occurs again, please call the After-Sales-Service.
F06	* <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/>	
F07	* <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/>	
F10 – F22	* <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/>	Turn OFF the dryer. Unplug the dryer. Wait for 30 minutes. Plug the dryer again and restart the dryer. If the failure occurs again, please call the After-Sales-Service.
Start lamp is blinking 2 times per second when it is pressed		Assure that the door is correctly closed and heat exchanger correctly positioned.
Bottom filter lamp is blinking or Door filter lamp is blinking 2 times per second when the Start button is pressed		Assure that the heat exchanger is correctly positioned.

* <input checked="" type="checkbox"/> Lamp blinking	<input type="checkbox"/> Lamp Off	<input checked="" type="checkbox"/> Lamp On
---	-----------------------------------	---

Before using the machine, please also read the instructions for use carefully!

AZB 9780/1 – Quick Reference Guide



Indicator lamps and Options



Programme selector knob

The drying programme is selected by turning this knob.

The “Start (Pause)” indicator lamp flashes.

Start (Pause)



“Start (Pause)” button

The drying programme is started by pressing this button.

The indicator lamp lights up.

Clean filter

Filter

The indicator lamp lights up when the filter and/or heat exchanger including housing needs to be cleaned.

Clean the filter at the end of every drying cycle.

Water container

Water container

The indicator lamp lights up when the water container needs to be emptied.

The drying cycle is automatically interrupted. Empty the container and restart the drying programme.

Empty the water container after every drying cycle

Clean condenser

Clean heat exchanger

The Led lights up after 30 cycles when the heat exchanger needs to be cleaned.

Clean the heat exchanger.

h “Remaining time” display



Depending on the programme selected a default drying time is displayed.

After start of cycle the time displayed is corrected depending on the volume, type and moisture of the laundry.

The drying time specified is a calculated value which will be updated during the drying cycle.



The flashing lines indicate that the calculation is running.

The remaining time will be updated.

Eco Monitor

The “Eco monitor” gives you a rough feedback about the energy consumption of the selected programmes.

This function will not work for a time based programme.

As soon as you turn the programme selector to any humidity steared programme, the “Eco monitor” lamps will indicate the expected energy consumption.



The three indicators show the degree of consumption: the less energy your programme setting is forecasted to consume, the less indicators will light up.

This depends on the programme, initial moisture and options selected, and also on the size of the load.

For that reason, the forecasted degree of energy consumption may adapt when the tumble dryer detects the load size.

End End

The drying programme is finished.

Please unload the dryer.



Overdry protection / 6th Sense

The indicator lights up when a humidity controlled programme is selected, to indicate the activated protection function.

Dryness
Level



Dryness level

By selecting this option you can adjust the dryness level of the laundry.
After the selection of the desired programme you can choose the dryness level by pressing the button.



Pressing 1 time you select a more dry level
or



Pressing 2 times you select a less dry level
or



Pressing 3 times you select again normal dry level.

Reset



Reset

During the selection phase of the programme, pressing this button will switch off all settings of selected options.

During running drying cycle the pressing of the button will stop the cycle and set the dryer back in selection mode.

The button needs to be pressed for 3 seconds.



Key lock

For child protection reasons, this option can be used to lock all functions of the user interface.



To activate this option, the button needs to be pressed for 3 seconds, until the “**key**” symbol at the display appears.

To deactivate this option, press the button until the “**key**” symbol disappears.

The key lock function is still active even when the selector knob is turned to “**off**” position or the door is opened.

The function has to be deactivated.



Dry time adjustment

h min



Turn the programme selector knob to “**Drying Time**” position.

Press the button “**Drying time**” to select the duration of cycle in ten minutes steps up to 120 minutes.



Drying
Time



Gentle

Selecting this option will reduce the drying temperature.

Gentle



This option cannot be selected when the option “**Rapid**” is selected.



Rapid

Selecting this option reduces the drying time.
This option should only be selected for cotton programmes, with a maximum load of 3.5 kg.
The garments shall have similar size and thickness.

Rapid



Anti
crease



Anti crease

This option can be chosen to reduce wrinkling, when the laundry is not unloaded directly after end of the cycle.

The drum turns from time to time for maximum 12 hours.

It can be interrupted at any time by switching off the dryer.

This option deactivates the “**Buzzer**” function, if it is activated.

h



Finish in

With this function you can postpone your programme to complete at a later time: press the button to select in how many hours the programme shall be finished.

- Thus, it allows you to have your laundry ready at a particular time and to profit from more favorable energy rates during the night, for example.

- The “**Finish in**” function can be selected in full hour time segments (1 to 24 h). When you press the button, the shortest possible time will be displayed; keep on pressing the button to loop through all the available times.

To remove it again, set the index of the programme selector knob to the “**Off**” position.

- When you have selected the desired “**Finish in**” time, press “**Start**” – the countdown will begin.

- During the countdown, you can still modify the option setting (select or deselect options).

- Sometimes the programme may finish before the selected “**Finish in**” time has expired (e.g. for small loads).

In this case, the dryer will tumble the laundry regularly to keep it fresh, until the selected “**Finish in**” time has expired. During tumbling, the display will show an animation.

The tumbling phase can be stopped at any time either by pressing any button, by rotating the programme selector or by opening the door.

Finish
on time

