


MACHINE OPERATION

Additional information (including troubleshooting and service) can be found in the individual chapters of the Instructions for use.

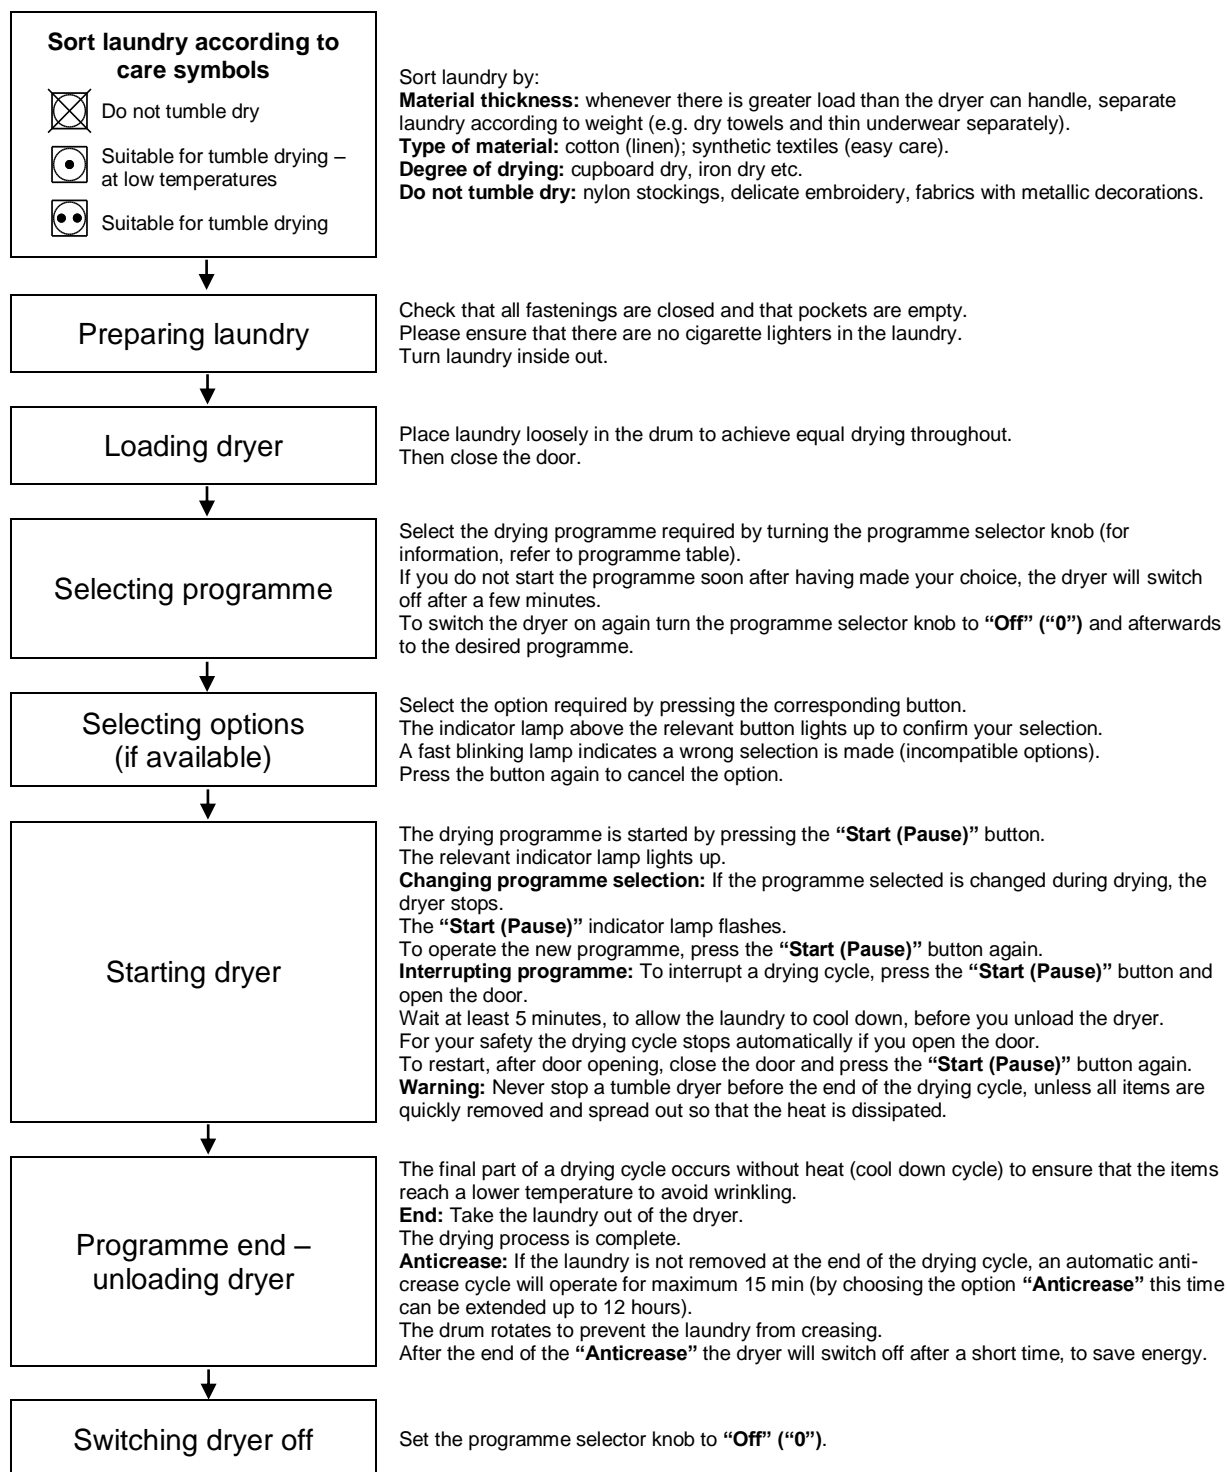
















Cleaning the lint filter after every cycle: open door, pull lint filter up and out of machine and open it. Brush lint using a soft brush or your fingertips. Close door filter and push firmly back into place.

Emptying water container: pull container out by the handle and empty. Replace the container when empty by pushing it completely back into place.

Please note: Only use additives/plastic items specified as dryer safe and rinse items that have been treated with stain remover thoroughly in plenty of water before drying. Never dry rubber objects or objects stained with vegetable oils in the dryer.

The Manufacturer is not liable for any damage to laundry resulting from inadequate or incorrect fabric care instructions which have been provided with the garment or article.

Power consumption: in off-mode 0.065 W / in left on-mode 0.065 W.

Overview of programmes				Options				Approximate drying times (in minutes)		
Programmes / Drying levels			Type of textile	Fabrics	Gentle 	Pause 	Dry plus 	Start delay 	Very wet load	Wet load
Cotton	 Extra dry	Extra dry	Multi-layered, thick laundry such as: terry towels, terry towelling bath robes.	Cotton or linen hot wash / coloured laundry  Max. 7.0 kg	X	X	X	X	190	170
	 Cupboard dry	Cupboard dry*	Similar types of laundry which do not require ironing such as: dry towels, bed linen, underwear, baby clothes, T-shirts, cotton socks.		X	X	X	X	165	145
	 Iron dry	Iron dry*	Laundry which requires ironing such as: bed and table linen, dry towels, T-shirts, polo shirts, work clothes.		X	X	X	X	125	110
Synthetic	 Extra dry	Extra dry	Laundry with thick, multi-layered areas such as: bed and table linen, track suits, anoraks, blankets.	Synthetic, mixed fibre or cotton easy care (ironing not required) laundry  Max. 3.5 kg	X	X	X	X	80	65
	 Cupboard dry	Cupboard dry*	Laundry which does not require ironing such as: shirts, blouses, T-shirts, sportswear.		X	X	X	X	70	55
	 Iron dry	Iron dry	Laundry which requires ironing such as: trousers, dresses, skirts, shirts, blouses.		X	X	X	X	55	45
Special programmes	 Mixed load	Mixed load	T-shirts, blouses, towels, underwear, sportswear.	Cotton – synthetic blend 3.0 kg	X	X	X	X	110	95
Airing	Laundry is aired, refreshed and loosen up for 30 minutes without heating.		All textiles.	Airing 	–	X	–	X	30'	–
Drying times	Completes drying (suitable for all fabrics)			Drying time  10' 20' 30' 40' 60' 90'	X	X	–	X	10' 20' 30' 40' 60' 90'	

*Test programmes according to EN61121, tested with maximum rated load capacity.

HOW TO PROCEED IF...

...you want to check the dryer yourself first: (If your machine is not functioning correctly, please check the following points before calling the customer service – also refer to relevant chapter in the Instructions for use)

<p>Drying takes too long / Laundry is not dry enough</p>	<ul style="list-style-type: none"> • Has the correct drying programme been selected? • Has the cycle been interrupted (door opening, full water container)? • Was the inserted laundry too wet (washing machine spin speed less than 1000 rpm)? • Is the lint filter dirty (filter indicator light on)? • Is the heat exchanger dirty (for more information, refer to the Instructions for use)? • Is the room temperature too high? • Is the “End” and “Antcrease” indicator lamp lighting up? The drying cycle is complete and the laundry can be taken out. • If the drying result does not meet your expectation, select a more dry programme or use the dryness adjustment option (if available) to optimize the drying result. • Is thin and thick load mixed? Are different types of materials mixed? Sort the laundry after thickness and material and dry again.
<p>The dryer does not operate (after a power failure, always press the “Start (Pause)” button)</p>	<ul style="list-style-type: none"> • Is the plug properly inserted into the mains electricity socket? • Is there a power failure? • Has the fuse blown? • Is the door properly closed? • Has a drying programme been selected? • Has the “Start (Pause)” button been pressed shortly after a programme is selected? (If not, the dryer will switch off.) • Has the start delay option been selected? • Is the dryer overloaded? → Please remove a part of the load.
<p>Filter, water container indicator lamp on</p>	<ul style="list-style-type: none"> • Is the lint filter clean? • Is the water container empty? • Has the water container been inserted correctly? • Is the heat exchanger clean and inserted correctly?
<p>Water droplets underneath the dryer</p>	<ul style="list-style-type: none"> • Has the heat exchanger been inserted correctly? • Have all lint on the heat exchanger seal and the door seal been wiped away? • Has the water container been inserted correctly? • If the direct drain connection is used, is it tight? • Is the dryer leveled?

...you want to care of and clean your dryer:

<p>Clean the filter at the end of every cycle</p>	<ul style="list-style-type: none"> • Brush lint using a soft brush or your fingertips. • Close the filter. • Push the filter back into place.
<p>Empty the water container at the end of every drying cycle</p>	<ul style="list-style-type: none"> • Pull the handle to remove the water container. • Empty the water container. • Replace the water container when empty by pushing it completely back into place.
<p>Clean the heat exchanger at least once a month</p>	<ul style="list-style-type: none"> • Clean the heat exchanger under running water. • Remove all fluffs from the seals. • Clean the heat exchanger housing (for further information see chapter “Cleaning the heat exchanger” in the Instructions for use).

FAILURE CODES

In case of a malfunction of the dryer, one the following failure codes could be displayed.
Depending on the model of your dryer, the failure can be displayed in letters or by different blinking lamps.

Failure code	Lamps failure code	Check needed by customer before Service call
F01	* <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Please call the After-Sales-Service.
F02	* <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Please call the After-Sales-Service.
F03	* <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Please call the After-Sales-Service.
F04	* <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Please call the After-Sales-Service.
F05	* <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Turn OFF the dryer. Unplug the dryer.
F06	* <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Assure that the ambient temperature is between 5°C and 35°C. Wait for 1 hour. Plug the dryer again and restart the dryer.
F07	* <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	If the failure occurs again, please call the After-Sales-Service.
F10 – F22	* <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> * * <input checked="" type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Turn OFF the dryer. Unplug the dryer. Wait for 30 minutes. Plug the dryer again and restart the dryer. If the failure occurs again, please call the After-Sales-Service.
Start lamp is blinking 2 times per second when it is pressed		Assure that the door is correctly closed and heat exchanger correctly positioned.
Heat exchanger lamp is blinking 2 times when the Start button is pressed		Assure that the heat exchanger is correctly positioned.

* <input checked="" type="checkbox"/> Lamp blinking	<input type="checkbox"/> Lamp Off	<input checked="" type="checkbox"/> Lamp On
---	-----------------------------------	---

Before using the machine, please also read the instructions for use carefully!

Quick Reference Guide



Indicator lamps and Options



Programme selector knob

The drying programme is selected by turning this knob.

The “**Start (Pause)**” indicator lamp flashes.



“Start (Pause)” button

The drying programme is started by pressing this button.

The indicator lamp lights up.



Filter

The indicator lamp lights up when the filter and/or heat exchanger including housing needs to be cleaned.

Clean the filter at the end of every drying cycle.



Water container

The indicator lamp lights up when the water container needs to be emptied.

The drying cycle is automatically interrupted. Empty the container and restart the drying programme.

Empty the water container after every drying cycle



End

The drying programme is finished.

Please unload the dryer.



Overdry protection / 6th Sense

The indicator lights up when a humidity controlled programme is selected, to indicate the activated protection function.



Dry plus

By selecting this option you can increase the dryness level of the laundry.



Gentle

Selecting this option will reduce the drying temperature.

This option cannot be selected when the option “**Rapid**” is selected.



Start delay

Delays the start of the drying cycle by 3, 6 or 9 hours.

Each time the button is pressed the delay is increased by 3 hours.



Press the “**Start (Pause)**” button to confirm the final selection and to start the dryer.

The lamps above the programme selector knob are flashing to indicate the selected time.

During the countdown, the drum will turn from time to time to redistribute the laundry and the pump will start to pump water in the water container.

To cancel or change the previously set time delay, set the index of the programme selector knob to “**off**” position, or open the door.