


Read the Instructions for Use carefully before using the appliance.

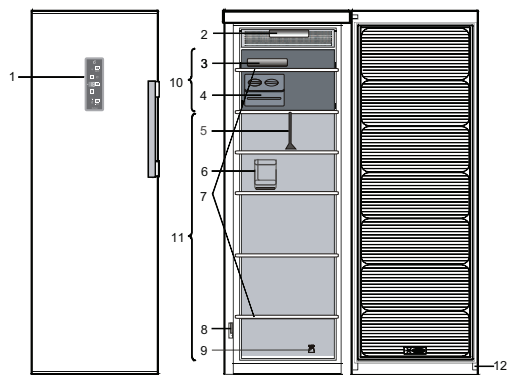

1. Control panel
2. Light (LED system)
3. Ice packs*
4. Ice Mate* or Ice tray*
5. Drawer divider*
6. Bottle rack*
7. Glass shelves
8. Rating plate with commercial name
9. Door reversibility kit
10. Area for freezing fresh food or to store frozen food
11. Area for storing frozen foods
12. Door seal

* Available on selected models

HOW TO START THE APPLIANCE

After plugging the appliance to the mains, it starts the operation automatically. After starting the appliance, wait at least 4-6 hours before placing food into the appliance. When the appliance is connected to the power supply, the display lights up and all the icons appear on the display for approximately 1 second. The default (factory) values of the freezer compartment settings light-up.

HOW TO REVERSE DOOR SWING

- see enclosed Instructions for Use (Version_1)
Is recommended to reverse door swing by two persons.
There is not foreseen door reversibility for:
- models with integrated handle
- models with glass panel on the door.

Specifications, technical data and images may vary from model to model.

SMART DISPLAY

This optional function can be used to save energy. To activate the Smart Display, press the buttons and together for 3 seconds until an audible signal sounds. To deactivate this function repeat the same procedure. Remember that this function does not disconnect the appliance from the power supply, but only reduce the power consumed by external display (see the Instructions for Use).

FAST FREEZE indicator (see the Instructions for Use).

ON/STANDBY indicator /button

To put the product in Stand-by, press and hold for 3 seconds. All the icons turn off except On/Standby indicator . To reactivate the appliance press once (briefly) this button.

TEMPERATURE DISPLAY

TEMPERATURE SETTING button


The appliance is normally factory-set for operation at the recommended temperature of -18°C. The internal temperature can be adjusted between -16°C and -24°C, proceeding as follows:

- Press to change the set point (°C). The storage temperature can be changed by -1°C with each pressure of the button: the value changes cyclically between -16°C and -24°C.

PARTY MODE indicator (see the Instructions for Use).

6th SENSE FREEZE CONTROL indicator

6th Sense Freeze Control is an advanced technology that reduces freeze burns and food preserves its original quality and color.

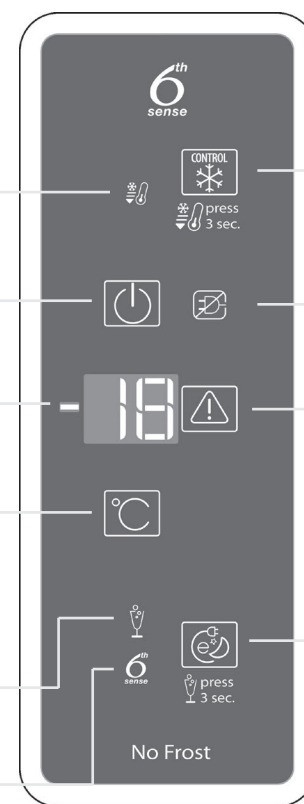

FREEZE CONTROL / FAST FREEZE button

Freeze Control

Freeze Control is an advanced technology that reduces temperature fluctuations in the whole freezer compartment to minimum. To activate/deactivate the Freeze Control function simply press FREEZE CONTROL button.

If the function is engaged and the user modify the freezer temperature out of the working range, the function is automatically switched off. In case of Fast freezing is engaged, the function "Freeze control" is inhibited until the Fast Freezing function switched off. (see the Instructions for Use)

Fast Freeze

Press for 3 seconds to activate/deactivate the Fast Freeze function (see the Instructions for Use). The Fast Freeze function switches off automatically after 50 hours.

BLACK OUT ALARM

Long Black-out Alarm indicator. (see the Instructions for Use)

STOP ALARM button

Press in case of alarm (see the below Alarm Table).

ECO NIGHT FUNCTION (NIGHT TIME RATE) / PARTY MODE button

Eco Night function

Press to activate/deactivate the Eco Night function. The Eco Night function enables appliance energy consumption to be concentrated in the reduced rate hours, generally at night (see the Instructions for Use)

Party Mode

To activate / deactivate the Party Mode function, press the Stop Alarm button for 3 seconds. In case of Party Mode alarm to deactivated press the Stop Alarm button.

ALARMS TABLE

ALARMS TYPE	Signal	Cause	Cure
Door open alarm	The acoustical alarm is activated and the Alarm Indicator blinks.	The door has remained open for more than 2 minutes.	Close the door or press the Stop Alarm to mute the acoustical alarm.
Temperature alarm	The Temperature display blinks (°C) and the Alarm Indicator remains on.	The inside temperature is not adequate.	Press the Stop Alarm button ; the acoustical alarm stops, the Temperature Display (°C) blinks and the Alarm Indicator remains on until a temperature < -10°C is reached.
Party Mode Alarm	The Party Mode Indicator blinks and the acoustical alarm is activated.	30 min. elapsed since Party Mode function has been activated. It is time to take out the bottle from the freezer (see Instructions for Use for more details).	Press the Stop Alarm button and remove the bottle from the freezer.
Long Black-Out alarm	The Black Out Alarm icon remains on, the Alarm indicator blinks and the Temperature display (°C) blinks, showing the maximum temperature reached during blackout.	Prolonged power failure, able to cause the inside temperature to increase to 0°C.	Press the Stop Alarm button ; the acoustical alarm stops, the Temperature Display (°C) blinks and the Alarm Indicator remains on until a temperature < -10°C is reached.
Malfunction	The letter "F" blinks on the display (°C).	Product malfunction.	Contact the After-sales Service.