

KitchenAid™

ARTISAN™ BLENDER
INSTRUCTIES

ARTISAN™ BLENDER
INSTRUCTIONS

BLENDER/MIXEUR ARTISAN™
MODE D'EMPLOI

ARTISAN™ BLENDER/STANDMIXER
BEDIENUNGSANLEITUNG

FRULLATORE ARTISAN™
ISTRUZIONI PER L'USO

LICUADORA ARTISAN™
INSTRUCCIONES

ARTISAN™ MIXER
INSTRUKTIONER

ARTISAN™ BLENDER
BRUKSANVISNING

ARTISAN™-TEHOSEKOITIN
OHJEET

ARTISAN™ BLENDER
INSTRUKTIONER

LIQUIDIFICADOR ARTISAN™
INSTRUÇÕES

ARTISAN™ BLANDARI
LEIÐBEININGAR

ΜΠΛΕΝΤΕΡ ARTISAN™
ΟΔΗΓΙΕΣ



Model 5KSB555
Blender

Table of Contents

Blender Safety	1
Electrical Requirements	1
Important Safeguards	2
Blender Features	3
Preparing the Blender for Use	5
Before First Use	5
Blender Assembly	5
Using the Blender	6
Before Use.....	6
Operating the Blender	6
CRUSH ICE.....	7
PULSE Mode.....	8
Ingredient Cup	8
Soft Start Blending Feature.....	8
Speed Control Guide.....	9
Care and Cleaning	10
Troubleshooting.....	11
Blender Tips.....	12
Household KitchenAid™ Blender Warranty.....	14
Service Centers.....	14
Customer Service	15

NOTE: DUE TO THE UNIQUE CONTAINER AND BLADE DESIGN, READ THESE INSTRUCTIONS AND RECIPES BEFORE USING YOUR NEW KITCHENAID™ BLENDER TO ACHIEVE MAXIMUM PERFORMANCE RESULTS.

Blender Safety

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

⚠ DANGER

You can be killed or seriously injured if you don't immediately follow instructions.

⚠ WARNING

You can be killed or seriously injured if you don't follow instructions.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Electrical Requirements

Volts: 220-240 Volts
Hertz: 50 Hz a.c.

NOTE: This product is supplied with a Y type power cord. If the power cord is damaged, it must be replaced by the manufacturer or its service agent in order to avoid a hazard.

Do not use an extension cord. If the power supply cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.

⚠ WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire or electrical shock.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons including the following:


1. Read all instructions.
2. To protect against risk of electrical shock, do not put Blender in water or other liquid.
3. Close supervision is necessary when any appliance is used by or near children.
4. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contact with moving parts.
6. Do not operate the Blender with a damaged cord or plug or after appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
7. Do not use outdoors.
8. Do not let cord hang over edge of table or counter.
9. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the Blender. A scraper may be used but must be used only when the Blender is not running.
10. Blade assembly is sharp. Handle carefully.
11. To reduce risk of injury, never put locking collar and blade assembly on the base without having the pitcher properly attached.
12. Always operate Blender with cover in place.
13. The use of attachments, including canning jars, not recommended by KitchenAid may cause a risk of injury to persons.
14. **When blending hot liquids, remove center piece of two-piece cover.**
15. This product is designed for household use only.
16. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
17. Children should be supervised to ensure that they do not play with the appliance.

SAVE THESE INSTRUCTIONS

This appliance is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE).

By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.




The symbol  on the product, or on the documents accompanying the product, indicates that this appliance may not be

treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

Disposal must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

Blender Features (Model 5KSB555)

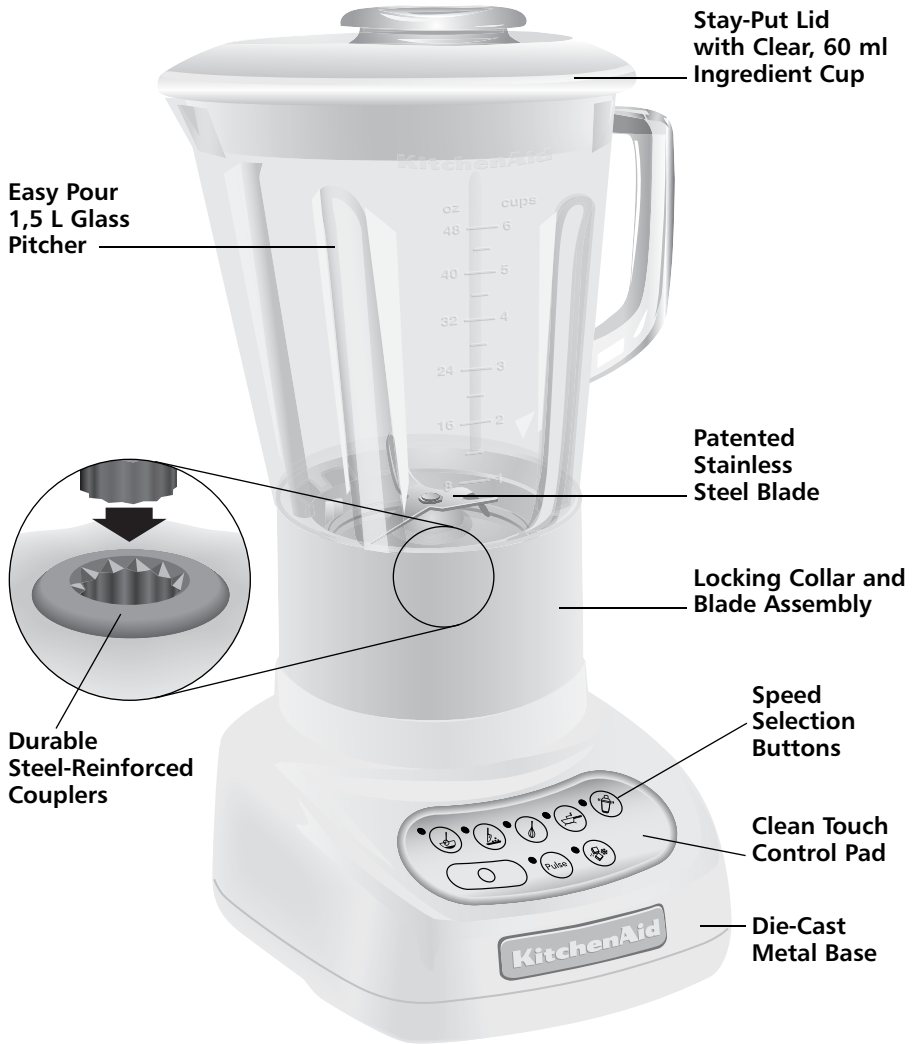

WARNING: Flashing light indicates ready to operate. Do not touch blades.

Blender Features

This Blender was built and tested to KitchenAid quality standards for optimum performance and long, trouble-free life.

Robust Motor

Rugged 0.9-horsepower motor supplies the power for superb performance with all blending tasks – from pureeing sauces to making chunky salsas, or uniformly crushing a pitcher of ice or frozen fruit within seconds for silky smoothies.



Easy Pour 1.5 L Glass Pitcher

Glass Pitcher resists scratches, stains and odors. Pitcher is removable from locking collar

for easy cleaning, and withstands a range of extreme temperatures. Easy pour spout provides smooth, drip-free pouring.

Stay-Put Lid with Clear, 60 ml Ingredient Cup

Provides a strong seal. The flexible lid will maintain its tight seal throughout the life of the Blender. The lid incorporates a removable 60 ml cup for convenience in measuring and adding ingredients.

Patented Stainless Steel Blade

Sharp oversized blade tines are positioned on four different planes for fast, thorough, and consistent blending.

Locking Collar and Blade Assembly

Durable, one-piece blade design is built into the locking collar for easy handling and cleaning. Dishwasher-safe assembly keeps the blades from rotating until the pitcher is properly attached to the collar and put on the Blender base.

Durable Steel-Reinforced Couplers

Commercial-quality couplers with 12 interlocking teeth provide direct transfer of motor power to the blade. Pitcher coupler is coated for quiet operation.

Speed Selection Buttons

Create frozen drinks and puree sauces or soups in seconds. Blend with confidence, control, and consistency at all speed settings: STIR (🌀), CHOP (🔪), MIX (🌀), PUREE (🌀), and LIQUEFY (🌀). The PULSE (Pulse) mode works with all five speeds. The CRUSH ICE (🧊) feature is designed specifically for crushing ice and will automatically pulse at staggered intervals for optimal results.

Intelli-Speed™ Motor Control

Exclusive Intelli-Speed™ control automatically works to keep speed constant – even through density changes when ingredients are added. This advanced KitchenAid design maintains an optimal blending speed for each culinary task and control-pad setting.

Soft Start Blending Feature

The Blender starts at a slower speed to pull food into the blade then quickly increases to selected speed setting. This design feature reduces start-up kick and allows hands-free operation.

Die-Cast Metal Base

Heavy, die-cast metal base ensures stable, quiet operation when blending a full pitcher of ingredients. Four rubber feet on wide, solid base provide a no-slip, non-marring grip. Smooth and rounded, the base is easy to clean and features cord storage underneath.

Clean Touch Control Pad

Wipes clean in an instant. Smooth control pad has no crevices or cracks to trap ingredients.

Preparing the Blender for Use

Before First Use


Before using your Blender for the first time, wipe Blender base with a warm sudsy cloth, then wipe clean with a damp cloth. Dry with a soft cloth. Wash pitcher, lid, locking collar and blade assembly, sealing ring and ingredient cup in warm, sudsy water (see Care and Cleaning, page 10). Rinse parts and wipe dry.

Blender Assembly


1. Put locking collar with blade assembly pointing up on a sturdy surface.



2. Put sealing ring, flat side down, around the blades and into the groove within the locking collar.

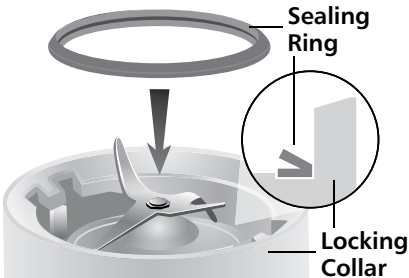

3. Align the pitcher tabs with the slots of the locking collar.

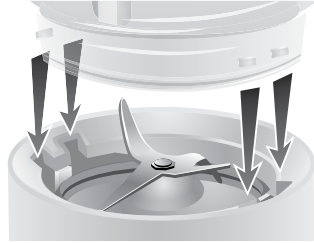


4. Press down and rotate pitcher clockwise, approximately 1/4 turn until two clicks are heard.



5. Adjust the length of the Blender power cord.



6. Put pitcher assembly onto the Blender base.

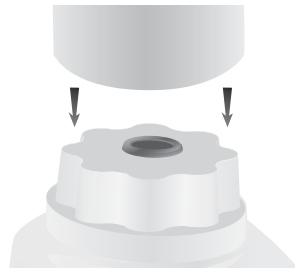

Preparing the Blender for Use

NOTE: When properly positioned, pitcher assembly will rest completely on Blender base. If not, repeat steps 3 and 4.



7. Put lid on pitcher.

! WARNING



Electrical Shock Hazard

Plug into a grounded outlet.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire or electrical shock.

8. Plug power cord into a grounded outlet. Blender is now ready for operation.
9. Before removing the pitcher assembly from the base, always press "O" and unplug the power cord.

Using the Blender

Before Use

NOTE: While the Blender is on or the PULSE (Pulse) mode indicator light is blinking:

- Do not interfere with blade movement
- Do not remove pitcher lid

Operating the Blender


The KitchenAid™ Blender has five speeds: STIR (☞), CHOP (☞), MIX (☞), PUREE (☞), and LIQUEFY (☞). In addition, it also features CRUSH ICE (☞) and PULSE (Pulse) mode.



1. With convenient one-step operation, this unit will operate only when a speed selection button is pressed.
2. Before operating the Blender, make sure the pitcher is properly secured in the locking collar and assembly is positioned on the Blender base.

Using the Blender

NOTE: If a gap exists between the locking collar and the base, the pitcher might not be locked into the locking collar or the assembly is not positioned properly on the Blender base. See Blender Assembly, page 5 for further instructions.

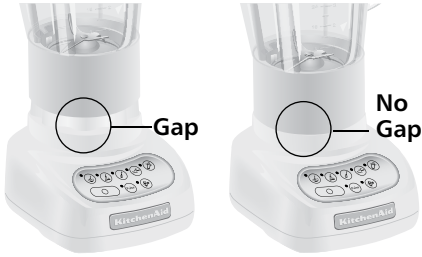

- Put ingredients in pitcher and firmly attach lid.



- Press the desired speed button for continuous operation at that speed. The green indicator light by the selected speed will stay lit. You may change settings without stopping the unit by pressing a new speed button.

IMPORTANT: If blending hot foods or liquids, remove the center ingredient cup. Operate only on STIR (🌀) speed.

- To turn off the Blender, press "O". The "O" (OFF) button will stop any speed and deactivate the Blender at the same time.
- Before removing the pitcher assembly, unplug the power cord.

CRUSH ICE

Your KitchenAid™ Blender offers a CRUSH ICE (🧊) feature. When selected, the Blender will automatically pulse at staggered intervals at the optimal speed for crushing ice or other ingredients.

- Before operating the Blender, make sure the pitcher assembly is properly positioned on the Blender base.

NOTE: If a gap exists between the locking collar and the base, the pitcher might not be locked into the locking collar or the collar is not positioned properly on the Blender base. See Blender Assembly, page 5 for further instructions.

- Put ingredients into the pitcher and firmly attach lid.
- Press CRUSH ICE (🧊). The indicator light will stay lit. The Blender will automatically pulse at staggered intervals.



- To turn off the CRUSH ICE (🧊) feature, press "O". The Blender is now ready for continuous operation.
- Before removing the pitcher assembly, unplug the power cord.

Using the Blender

PULSE Mode

Your KitchenAid™ Blender offers PULSE (Pulse) mode, which allows a “Pulse-at-any-Speed” feature.

NOTE: PULSE (Pulse) mode will not work with the CRUSH ICE (❄️) feature.

1. Before operating the Blender, make sure the pitcher assembly is properly positioned on the Blender base.

NOTE: If a gap exists between the locking collar and the base, the pitcher might not be locked into the locking collar or the collar is not positioned properly on the Blender base. See Blender Assembly on page 5 for further instructions.

2. Put ingredients into pitcher, and firmly attach lid.

3. Press PULSE (Pulse). The indicator light above the button will blink to indicate that all five speeds are in the PULSE (Pulse) mode.



4. Select a speed button. Press and hold for the desired length of time. Both the speed button and PULSE (Pulse) mode indicators will stay lit when pulsing at the selected speed. When button is released, the blending will stop, but the Blender will remain in PULSE (Pulse) mode and the PULSE (Pulse) mode

indicator will return to blinking. To pulse again or at another speed, simply press and hold the button of the desired speed.



5. To turn off the PULSE (Pulse) mode feature, press “O”. The Blender is now ready for continuous operation.

6. Before removing the pitcher assembly, unplug the power cord.

Ingredient Cup

The 60 ml ingredient cup can be used to measure and add ingredients. Remove cup and add ingredients at STIR (🌀), CHOP (🔪) or MIX (🌀), speeds. When operating at higher speeds, with a full pitcher or with hot contents, stop the Blender and then add ingredients.

IMPORTANT: If blending hot foods or liquids, remove the center ingredient cup. Operate only on STIR (🌀) speed.



Soft Start Blending Feature

The Soft Start blending feature automatically starts the Blender at a lower speed to draw ingredients into the blades, then quickly increases to the selected speed for optimal performance.

NOTE: The Soft Start blending feature only works when a speed is selected from the “O” mode and does not work with the PULSE (Pulse) mode or CRUSH ICE (❄️) features.

Speed Control Guide

Item	Speed	Item	Speed
Blended ice drink		Gravy	
Cheesecake		Ice milk-based drink	
Chopped fruits	Pulse	Meat salad for sandwich filling	Pulse
Chopped vegetables	Pulse	Mousse	
Cream cheese-based spread		Oatmeal	
Cream soup		Pancake batter	
Crushed/chopped Ice		Pesto	
Dip		Pureed fruit/Baby food	
Finely chopped fresh fruits		Pureed meat/Baby food meat	
Finely chopped fresh vegetables		Pureed vegetables/Baby food vegetables	
Fluffy gelatin for pie/desserts		Salad dressing	
Frozen chopped fruit (defrost slightly until it can be probed with a knife tip)		Savory crumb topping	Pulse
Frozen yogurt-based drink		Sherbet-based drink	
Fruit juice from frozen concentrate		Smooth ricotta or cottage cheese	
Fruit-based drink (thin)		Streusel topping	
Fruit-based drink (thick)		Sweet crumb topping	Pulse
Fruit-based sauce		Sweet crunch topping	Pulse
Grated hard cheese		Vegetable-based main dish sauce	
		Waffle batter	
		White sauce	

Tip - Process up to one standard ice cube tray or 12 to 14 standard ice cubes at a time. Occasional stirring with a spatula will be helpful only when Blender is "O". The CRUSH ICE () feature has been optimized to crush and chop ice without adding any liquid ingredients.

Care and Cleaning

The Blender pitcher, locking collar and blade assembly can be easily cleaned as individual components or together without disassembly.

- Clean the Blender thoroughly after every use
- Do not immerse the Blender base or cord in water
- Do not use abrasive cleansers or scouring pads

To Clean Individual Components

1. Lift the pitcher assembly in a straight, upwards motion off the Blender base. Place jar assembly on a hard surface. Then, while holding locking collar, rotate pitcher counterclockwise, two clicks, to separate locking collar and blade assembly, and sealing ring from the pitcher. Wash components with soapy water. Rinse and wipe dry.

NOTE: Pitcher can be placed in the bottom rack of an automatic dishwasher. For best results, hand washing is recommended for the lid, ingredient cup, locking collar and blade assembly, and sealing ring.



2. Wipe the Blender base and cord with a warm, sudsy cloth; wipe clean with a damp cloth, and dry with a soft cloth.

To Clean Without Disassembly

1. Put the pitcher on the Blender base, fill half full with warm (not hot) water, and add 1 or 2 drops of dishwashing liquid. Put the lid on the pitcher, press the STIR speed setting, and run the Blender for 5 to 10 seconds. Remove the pitcher and empty contents. Rinse with warm water until clean.
2. To clean the lid and ingredient cup, wash in warm soapy water, then rinse and dry thoroughly.
3. Wipe the Blender base and cord with a warm, sudsy cloth; wipe clean with a damp cloth, and dry with a soft cloth.

Troubleshooting


The Blender does not operate when a setting is selected:



No indicator lights are lit.


Check to see if the Blender is plugged into an outlet. If it is, press "O", then unplug the Blender. Plug it back in to the same outlet. If the Blender still does not work, check the fuse or circuit breaker on the electrical circuit the Blender is connected to and make sure the circuit is closed.

The Blender stops while blending:

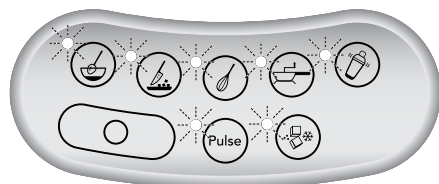

All indicator lights are flashing at the same time.

The Blender may be overloaded. If the Blender becomes overloaded when blending heavy ingredients, it will automatically shut off to prevent damage to the motor. Press "O" to reset the Blender and unplug the power cord. Remove the pitcher assembly from the base and divide contents into smaller batches. Adding liquid to the pitcher may also reduce the load on the Blender.

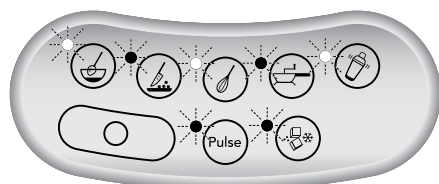

Indicator lights are flashing alternately.

The Blender may be jammed. If it's jammed, the Blender will stop running to prevent damage to the motor. Press "O" to reset the Blender and unplug the power cord. Remove the pitcher assembly from the base and with a scraper, free the blades by breaking-up or removing the contents at the bottom of the pitcher.

The Blender turns on, but blades will not rotate.



The pitcher is not properly secured in the locking collar, not allowing couplers to engage. Remove pitcher from base and fully seat into collar. Press down and rotate pitcher clockwise in the locking collar past the second "click." This will allow the pitcher assembly to engage the coupler. See page 5 for Blender Assembly.

If the problem cannot be fixed with the steps provided in this section, then contact an authorized service center (see page 14).

Do not return the Blender to the retailer – they do not provide service.

Blender Tips

Quick Tips

- In order to produce a smoother texture, blend with CRUSH ICE (☞) if you're making beverages using ice.
- Smaller ice cubes can be chopped or crushed faster than large ones.
- Add food to this Blender pitcher in larger quantities than you would with other blenders – you can add 2 to 3 cups (475 to 710 ml) at a time versus 1 cup (235 ml) portions.
- For many ingredient mixtures, start the blending process at STIR (☞) to thoroughly combine the ingredients. Then increase to a higher speed, if necessary.
- Be sure to keep lid on pitcher while blending.
- If desired, remove center ingredient cup of pitcher lid to add liquids or ice cubes while the Blender is operating at STIR (☞), CHOP (☞) or MIX (☞) speeds.
- When operating at higher speeds with a full pitcher or with hot contents, stop the Blender and then add ingredients.
- Stop the Blender before using utensils in the pitcher. Use a rubber spatula to mix ingredients only when the Blender is "O". Never use any utensil, including spatulas, in the pitcher while the motor is running.
- Cool hot foods, if possible, before blending. Begin blending warm foods at STIR (☞). Increase to higher speed, if necessary.
- **Remove center ingredient cup when blending hot liquids and operate only on STIR (☞). Do not place bare hand on pitcher lid when processing hot liquids.**
- Stop and check the consistency of foods after a few seconds to prevent over-processing.

How To ...

Reconstitute frozen juice: For a 175 ml can of orange juice concentrate, combine the juice and correct amount of water in the pitcher. Cover and blend at MIX (☞) until thoroughly combined, about 10 to 15 seconds.

For a 355 ml can, combine the juice and 1 can of water in the pitcher. Cover and blend at MIX (☞) until thoroughly combined, about 20 to 30 seconds. Stir in remaining 2 cans of water.

Dissolve flavored gelatin: Pour boiling water into the pitcher; add gelatin. Remove center ingredient cup and blend at STIR (☞) until gelatin is dissolved, about 10 to 30 seconds. Add other ingredients.

Make cookie and graham cracker crumbs: Break larger cookies into pieces about 4 cm in diameter. Use smaller cookies as-is. Place in pitcher. In PULSE (Pulse) mode, cover and blend at CHOP (☞), pulsing a few times, about 3 seconds each time, until desired consistency is reached. Use the crumbs to make a quick topping for frozen yogurt, pudding, or a fruit compote.

To make a finer crumb for pie and dessert crusts, break graham crackers or cookies into pieces about 4 cm in diameter and place in the pitcher. In PULSE (Pulse) mode, cover and blend at LIQUEFY (☞), pulsing a few times until desired consistency is reached, about 20 to 30 seconds.

Make cracker crumbs: Follow procedure for cookies. Use as a topping or as an ingredient in main dish casseroles and vegetable dishes.

Make bread crumbs: Tear bread into pieces about 4 cm in diameter. Follow procedure for cookies. Use as a topping or as an ingredient in main dish casseroles and vegetable dishes.

Blender Tips

Chop fruits and vegetables: Put 2 cups (475 ml) of fruit or vegetable chunks in pitcher. In PULSE (Pulse) mode, cover and blend at STIR (🌀), pulsing a few times, about 2 to 3 seconds each time, until desired consistency is reached.

Puree fruits: Place 2 cups (475 ml) canned or cooked fruit in pitcher. Add 2 to 4 tablespoons (30 to 60 ml) fruit juice or water per cup (240 ml) of fruit. Cover and blend at PUREE (🌀) about 5 to 10 seconds.

Puree vegetables: Place 2 cups (475 ml) canned or cooked vegetables in pitcher. Add 2 to 4 tablespoons (30 to 60 ml) broth, water, or milk per cup (240 ml) of vegetables. Cover and blend at PUREE (🌀) about 10 to 20 seconds.

Puree meats: Place cooked, cubed, tender meat in pitcher. Add 3 to 4 tablespoons (45 to 60 ml) broth, water, or milk per cup (240 ml) of meat. Cover and blend on STIR (🌀) 10 seconds. Stop the Blender and scrape sides of pitcher. Cover and blend on PUREE (🌀) 10 to 20 seconds longer.

Puree cottage cheese or ricotta cheese: Place cottage cheese or ricotta cheese in pitcher. Cover and blend at MIX (🌀) until smooth, about 25 to 35 seconds. Stop the Blender and scrape sides as needed. If necessary, add 1 tablespoon (15 ml) of skim milk per cup (240 ml) of cottage cheese. Use as a base for low-fat dips and spreads.

Combine liquid ingredients for baked goods: Pour liquid ingredients in pitcher. Cover and blend at LIQUEFY (🌀) until well-mixed, about 10 to 15 seconds. Pour liquid mixture over dry ingredients and stir well.

Take lumps out of gravy: If sauce or gravy becomes lumpy, place in the pitcher. Cover and blend at MIX (🌀) until smooth, about 5 to 10 seconds.

Combine flour and liquid for thickening: Place flour and liquid in pitcher. Cover and blend at STIR (🌀) until smooth, about 5 to 10 seconds.

Prepare white sauce: Place milk, flour, and salt, if desired, in pitcher. Cover, and blend at STIR (🌀) until well-mixed, about 5 to 10 seconds. Pour into saucepan and cook as usual.

Prepare pancake or waffle batter from mix: Place mix and other ingredients in pitcher. Cover and blend at MIX (🌀) until well-mixed, 10 to 20 seconds. Stop the Blender and scrape sides of the pitcher as needed.

Grate cheese: Cut very cold cheese into 1,5 cm cubes. Place up to ½ cup (120 ml) cheese in the pitcher. Cover, and blend at LIQUEFY (🌀) about 5 to 10 seconds. For hard cheeses, such as Parmesan, bring to room temperature, then blend at LIQUEFY (🌀) for 10 to 15 seconds.

Make oatmeal for a baby: Place uncooked rolled oats in pitcher. In PULSE (Pulse) mode, blend at MIX (🌀) until desired consistency, about 5 pulses, 2 to 3 seconds each pulse. Cook as usual.

Make baby food from adult food: Place prepared adult food in pitcher. Cover and blend at STIR (🌀) about 10 seconds. Then blend at PUREE (🌀) about 10 to 30 seconds.

Rinse your Blender Pitcher: Fill pitcher one-half full with warm water. Add a few drops of dishwashing liquid. Cover and blend at STIR (🌀) until sides are clean, about 5 to 10 seconds. Rinse and dry. For complete cleaning, pitcher can also be cleaned in an automatic dishwasher. For best results, hand washing is recommended for the lid, ingredient cup, locking collar and blade assembly, and sealing ring. Refer to Care and Cleaning, page 10.

Household KitchenAid™ Blender Warranty

English

Length of Warranty:	KitchenAid Will Pay For:	KitchenAid Will Not Pay For:
<p>Europe, Australia and New Zealand: Three years Full Warranty from date of purchase.</p> <p>Other: One Year Full Warranty from date of purchase.</p>	<p>Replacement parts and repair labor costs to correct defects in materials or workmanship. Service must be provided by an Authorized KitchenAid Service Center.</p>	<p>A. Repairs when Blender is used for operations other than normal household food preparation.</p> <p>B. Damage resulting from accident, alterations, misuse, abuse, or installation/operation not in accordance with local electrical codes.</p>

KITCHENAID DOES NOT ASSUME ANY RESPONSIBILITY FOR INDIRECT DAMAGES.

Service Centers

All service should be handled locally by an Authorized KitchenAid Service Center. Contact the dealer from whom the unit was purchased to obtain the name of the nearest Authorized KitchenAid Service Center.

In the U.K.:

Call: 0845 6011 287

In Ireland:

M.X. ELECTRIC
Service Department
25 Alymer Crescent
Kilcock, CO.KILDARE

Call: 1 679 2398/87 2581574

Fax: 1 628 4368

In Australia:

Call: 1800 990 990

In New Zealand:

Call: 0800 881 200

Customer Service

For U.K. & Northern Ireland:

Freephone helpline number on:
0800 988 1266
(calls from mobiles are charged
at your standard network rate)

For Southern Ireland:

Helpline number on:
+44 (0) 20 8616 5148

Address:

KitchenAid Europa, Inc.
PO BOX 19
B-2018 ANTWERP 11
BELGIUM

www.KitchenAid.co.uk

www.KitchenAid.com



FOR THE WAY IT'S MADE.™

® Registered Trademark of KitchenAid, U.S.A.
™ Trademark of KitchenAid, U.S.A.
© 2009. All rights reserved.

Specifications subject to change without notice.

