



**THANK YOU FOR BUYING AN INDESIT PRODUCT**  
In order to receive a more complete assistance, please register your product on [www.indesit.com/register](http://www.indesit.com/register)



**Before using the appliance carefully read the Safety Instruction.**

## PRODUCT DESCRIPTION

### FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connect the appliance to the power supply it starts the operation automatically. The ideal storage temperatures for the food are preset in the factory.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the audible signal sounds, it means that the temperature alarm has intervened: press the button to switch off the acoustic alarms.

### CONTROL PANEL



1. Thermostat control reference
2. Freezer and refrigerator compartment temperature knob
3. LED light bulb

### FREEZING FRESH FOOD

Place the fresh food to be frozen in the FREEZING ZONE in the freezer compartment avoiding the direct contact with the food that is already frozen. To optimize the freezing speed, the lower drawer can be removed and the food can be placed directly on the bottom of the compartment.

### FAN\*

You can turn the Fan on/off by pressing the button on the base (as shown in the figure). If the ambient temperature exceeds 27°C, or if drops of water are present on the glass shelves, it is essential that the fan is on to ensure the proper preservation of the food. Deactivation of the fan allows energy consumption to be optimised.



### FREEZER AND REFRIGERATOR COMPARTMENT TEMPERATURE

This Fridge/Freezer is switched on using the thermostat located inside the refrigerator compartment. The temperature of both compartments is adjusted by turning the thermostat knob.

Thermostat set to **1/2 : minimum refrigeration (less cold)**


Thermostat set to **3-5 : medium refrigeration**

Thermostat set to **6/7 : maximum refrigeration (colder)**

Setting the Thermostat knob to • turns the whole appliance off (no refrigeration, no light).

\* Available only on certain models

## HOW TO STORE FOOD AND BEVERAGE

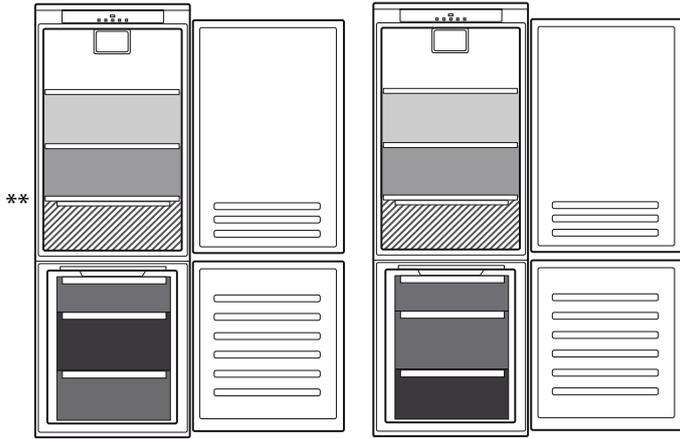

\*\*\*

\*\* For models with "0 ° ZONE" COMPARTMENT the "coolest area" is the one highlighted in the legend

\*\*\* Only for CB310 e CB380 models (refer to the Rating plate located at side of Fruit and vegetable drawer)

### Legend

	<b>TEMPERATE ZONE</b> Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam
	<b>COOL ZONE</b> Suggested for the storage of cheese, milk, daily food, delicatessen, yogurt
	<b>COOLEST AREA</b> Suggested for storage of cold cuts, desserts, meat and fish
	<b>FRUIT &amp; VEGETABLE DRAWER</b>
	<b>FREEZER DRAWERS</b>
	<b>FREEZING ZONE DRAWER</b> (Max cool zone) Suggested to freeze fresh/cooked food.

## TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The appliance doesn't work.	There may be an appliance power supply problem.	Make sure: <ul style="list-style-type: none"> <li>• there is not a power outage;</li> <li>• the plug is properly inserted in the power socket and the double-pole switch (if present) is in the correct position (on);</li> <li>• the household electrical system protection devices are efficient;</li> <li>• the power cable is not damaged;</li> <li>• the thermostat knob is not turned to "0".</li> </ul>
The inside light does not work.	It may be necessary to replace the light bulb.	Disconnect the appliance from the power supply and contact the Technical Assistance Service if you need a replacement.
The internal temperature of the compartments is not cold enough.	The reasons could vary (see "Solution") column.	Check that: <ul style="list-style-type: none"> <li>• the doors are closed properly;</li> <li>• the appliance is not installed near a heat source;</li> <li>• the temperature is appropriately set;</li> <li>• the circulation of air through the ventilation grilles on the base of the appliance is not obstructed.</li> </ul>
There is water on the bottom of the refrigerator compartment.	The defrost water drain is blocked.	Clean the defrosting water drain (see section "Cleaning and Maintenance").
Excessive amount of frost in the freezer compartment.	The door to the freezer compartment is not closed properly.	<ul style="list-style-type: none"> <li>• Check that there is nothing preventing the door from closing properly.</li> <li>• Defrost the freezer compartment.</li> <li>• Make sure the appliance has been correctly installed.</li> </ul>
The front edge of the appliance that the door gaskets seal against is hot.	This is not a problem. It prevents condensation from forming.	A solution is not needed.
The temperature of the refrigerator compartment is too cold.	<ul style="list-style-type: none"> <li>• The set temperature is too cold.</li> <li>• A large amount of fresh food may have been placed in the freezer compartment.</li> </ul>	<ul style="list-style-type: none"> <li>• Try to set a less cold temperature.</li> <li>• If fresh food has been put in the freezer compartment, wait until the freezing has been completed.</li> <li>• Turn off the fan (if present) described in the paragraph "FAN".</li> </ul>

\* Available only on certain models



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website [docs.indesit.eu](http://docs.indesit.eu)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

