

Health & Safety, Use & Care and Installation guide



www.whirlpool.eu/register



ENGLISH 3

ENGLISH

HEALTH & SAFETY, USE & CARE

and INSTALLATION GUIDES



THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.

In order to receive a more complete assistance,
please register your appliance on www.whirlpool.eu/register

Index

Health and Safety guide

SAFETY INSTRUCTIONS	5
SAFEGUARDING THE ENVIRONMENT	8
DECLARATION OF CONFORMITY	9

Use and Care guide

PRODUCT DESCRIPTION	11
APPLIANCE	11
CONTROL PANEL	11
DOOR	12
DRUM LIGHT (if available)	12
AVAILABLE ACCESSORIES	12
HOW TO USE THE APPLIANCE	13
6 th SENSE LIVE FEATURE	13
FIRST TIME USE	14
DAILY USE	15
PROGRAMMES	17
OPTIONS	21
FUNCTIONS	22
INDICATORS	24
6 th SENSE LIVE FEATURE / SETUP PROCEDURE	25

6 th SENSE LIVE REMOTE CONTROL / DAILY USE.....	29
6 th SENSE LIVE FEATURE / FAQ.....	30
ENERGY SAVING	32
CLEANING & MAINTENANCE	33
EMPTYING THE WATER TANK.....	33
CLEANING THE DOOR FILTER	34
CLEANING THE BOTTOM FILTER.....	35
CLEANING THE OUTSIDE OF THE DRYER.....	37
REVERSING THE DOOR STOP.....	38
TROUBLESHOOTING GUIDE & AFTER-SALES SERVICE	43
FAILURE INDICATOR AND MESSAGES.....	45
TRANSPORT AND HANDLING.....	47
AFTER-SALES SERVICE.....	48
<i>Installation guide</i>	46

SAFETY INSTRUCTIONS

IMPORTANT TO BE READ AND OBSERVED

Before using the dryer carefully read, Health and Safety and Use and Care guides. Keep these instructions close at hand for future reference.

YOUR SAFETY AND SAFETY OF OTHERS IS VERY IMPORTANT.

This manual and the dryer itself provide important safety warnings, to be read and observed at all times.



This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol or the word **DANGER** or **WARNING**. These words mean:

DANGER

Indicates a hazardous situation which, if not avoided, will cause serious injury.

WARNING

Indicates a hazardous situation which, if not avoided, could cause serious injury.

All safety warnings give specific details of the potential risk presented and indicate how to reduce risk of injury, damage and electric shock resulting from improper use of the dryer. Carefully observe the following instructions. Failure to observe these instructions may lead to risks. The Manufacturer declines any liability for injury to persons or animals or damage to property if these advices and precautions are not respected.

Very young (0-3 years) and young children (3-8 years) shall be kept away unless continuously supervised. Children from 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge can use this dryer only if they are supervised or have been given instructions on safe appliance use and if they understand the hazards involved. Children shall not play with the dryer. Cleaning and user maintenance shall not be made by children without supervision.

Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot

removers, turpentine, waxes and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer. Items such as foam rubber (latex foam), shower caps, waterproof textiles, rubber backed articles and clothes or pillows fitted with foam rubber pads should not be dried in the tumble dryer. Remove all objects from pockets such as lighters and matches. Do not use the tumble dryer if chemicals have been used for cleaning.

Oil-soaked items ignite spontaneously, especially when exposed to heat sources such as in a tumble dryer. The items become warm, causing an oxidation reaction in the oil. Oxidation creates heat. If the heat cannot escape, the item can become hot enough to catch fire. Piling, stacking or storing oil-soaked items can prevent heat from escaping and so create a fire hazard.

WARNING

Never stop a tumble dryer before the end of the drying cycle unless all items are quickly removed and spread

out so that the heat is dissipated.

The last phase of the drying cycle is done without heat (cool down phase), to assure that the laundry stays at a temperature level which is not leading to a damaging of the laundry.

If you want to stack the dryer on a washing machine, first contact our After-Sales Service to verify if this is possible. Stacking of a dryer is only admitted if the dryer is safely fixed on the washing machine by using an appropriate stacking kit.

INTENDED USE OF THE PRODUCT

This dryer is designed solely for domestic usage. To aim the dryer as professional use is forbidden. The manufacturer declines all responsibility for inappropriate use or incorrect setting of the controls.

CAUTION: The dryer is not intended to be operated by means of an external timer or separate remote control system.

Do not use the dryer outdoors. Do not store explosive or flammable substances such as aerosol cans and do not place or use gasoline or other flammable materials in or near the dryer: a fire may break out if the dryer is inadvertently switched on.

INSTALLATION

Installation and repairs must be carried out by a qualified technician, in compliance with the manufacturer's instructions and local safety regulations. Do not repair or replace any part of the dryer unless specifically stated in the user manual. Children should not perform installation operations. Keep children away during installation of the dryer. Keep the packaging materials (plastic bags, polystyrene parts, etc.) out of reach of children, during and after the installation of the dryer.

Use protective gloves to perform all unpacking and installation operations. After unpacking the dryer, make sure that it has not been damaged during transport. In the event of problems, contact the dealer or your nearest After-sales Service. The dryer must be handled and installed by two or more persons. Keep children away during installation of the dryer.

The dryer must be disconnected from the power supply before carrying out any installation operation. During installation, make sure the dryer does not damage the power cable. Only activate the dryer when the installation procedure has been completed.

After installation of the device to wait a few hours before starting it, to acclimatize to the environmental conditions of

the room.

Do not install your dryer where it may be exposed to extreme conditions, such as: poor ventilation, high temperature or below 5°C or above 35°C.

The dryer must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

The dryer must be placed with the back towards a wall, to avoid injuries by touching the rear panel, which can become hot during the drying process.

Do not install the dryer in rooms with poor ventilation. If you want to install it in a small storage room, toilet, bathroom or similar, assure a good ventilation (open door, ventilation grid or slot larger than 500 cm²).

When installing the dryer make sure that the four feet are stable and resting on the floor, adjusting them as required, and check that the dryer is perfectly level using a spirit level.

If possible use a hose to drain the water directly into the domestic plumbing system. This will avoid having to empty the water container at the end of each drying cycle, since the condensation water can be directly drained away.

Take care not to install the dryer on a deep-pile carpet.

If, due to lack of space, the dryer must be installed directly next to a gas or coal stove, a heat insulating plate (85 x 57 cm) must be installed in between and the side of the plate facing the stove must be covered with aluminium foil.

The dryer is not designed for built-in installation.

The dryer can be installed under a worktop, provided that adequate ventilation of the dryer is assured. Install a ventilation grid (minimum 45 cm x 8 cm), in the rear part of the worktop under which the dryer is installed.

ELECTRICAL WARNINGS

Make sure the voltage specified on the rating plate corresponds to that of your home.

For installation to comply with current safety regulations, an omnipolar switch with minimum contact gap of 3mm is required.

Regulation require that the dryer is earthed.

For dryers with fitted plug, if the plug is not suitable for you socket outlet, contact a qualified technician.

Do not use extension leads, multiple sockets or adapters. Do not connect the dryer to a socket which can be operated by remote control.

The power cable must be long enough for connecting the dryer, once fitted in its housing, to the main power supply.

Do not pull the power supply

and fuse(B).

If the power cable is damaged it must be replaced with an identical one. The power cable must only be replaced by a qualified technician in compliance with the manufacturer instruction and current safety regulations. Contact an authorized service centre.

Do not operate this dryer if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces.


The electrical components must not be accessible to the user after installation.

Do not touch the dryer with any wet part of the body and do not operate it when barefoot.

ELECTRICAL CONNECTION FOR GREAT BRITAIN AND IRELAND ONLY

Fuse replacement.

If the mains lead of this dryer is fitted with a BS 1363A 13amp fused plug, to change a fuse in this type of plug use an A.S.T.A. approved fuse to BS 1362 type and proceed as follows:

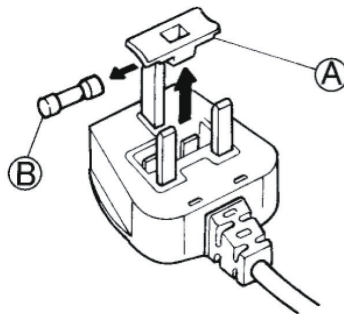

1. Remove the fuse cover (A)

and fuse(B).

2. Fit replacement 13A fuse into fuse cover.

3. Refit both into plug.

Important:

The fuse cover must be refitted when changing a fuse and if the fuse cover is lost the plug must not be used until a correct replacement is fitted. Correct replacement are identified by the colour insert or the colour embossed in words on the base of the plug. Replacement fuse covers are available from your local electrical store.

For the Republic of Ireland only

The information given in respect of Great Britain will frequently apply, but a third type of plug and socket is also used, the 2-pin, side earth type.

Socket outlet / plug (valid for both countries)

If the fitted plug is not suitable for your socket outlet, please contact After-sales Service for further instruction. Please do not attempt to change plug yourself. This procedure needs to be carried out by a qualified technician in compliance with the manufactures instructions and current standard safety regulations.

CORRECT USE

Do not exceed the maximum load allowed. Check the maximum load allowed in the programme chart.

Do not dry unwashed items in the tumble dryer.

Do not overdry the laundry.

Take care that no lint or dust is accumulated around the dryer.

Fabric softeners, or similar products, should be used as specified by the fabric softener instructions.

CLEANING AND MAINTENANCE

The dryer must be disconnected from the power supply before carrying out any cleaning or maintenance operation.

Never use steam cleaning equipment.

SAFEGUARDING THE ENVIRONMENT

For dryer models with heat-pump technology:
This dryer contains fluorinated greenhouse gas (R134a). The circuit containing this gas is hermetically sealed. The electrical switchgear has a tested leakage rate of less than 0,1% per year.

DISPOSAL OF PACKAGING MATERIALS

The packaging material is 100% recyclable and is marked with the recycle symbol:



The various parts of the packaging must therefore be disposed of responsibly and in full compliance with local authority regulations governing waste disposal.

SCRAPPING OF HOUSEHOLD APPLIANCES

When scrapping the dryer, make it unusable by cutting off the power cable and removing the doors and shelves (if present) so that children cannot easily climb inside and become trapped.

This dryer is manufactured with recyclable



or reusable materials. Dispose of it in accordance with local waste disposal regulations.

For further information on the treatment, recovery and recycling of household electrical appliances, contact your competent local authority, the collection service for household waste or the store where you purchase the dryer.

This dryer is marked in compliance with European Directive 2012/19/EU, Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. This symbol



on the product or on the accompanying documentation indicates that it should not be treated as domestic waste but must be taken to an appropriate collection centre for the recycling of electrical and electronic equipment.

ENERGY SAVING TIPS

Always dry a full load, depending on the type of laundry and the programme/drying time. For more detailed information, see the programme chart.

By preference use the maximum spin speed allowed by your washing machine,

since draining the water mechanically requires less energy. You will save time and energy when running your drying cycle.

Always select the correct programme/drying time for the load in order to obtain the desired drying results.

Select the 'Gentle' option only

in case of drying small loads.

When drying cotton, for example, dry Iron Dry and Cupboard Dry loads together. Start with the Iron Dry programme/drying time setting, remove the laundry to be ironed at the end of that cycle and dry the remainder of the load on the Cupboard Dry setting.

DECLARATION OF CONFORMITY

This dryer has been designed, constructed and distributed in compliance with the safety requirements of European Directives:

- 2006/95/EC Low Voltage Directive
- 2004/108/EC Electromagnetic Compatibility Directive.

Whirlpool Europe Srl - Socio Unico, hereby declares that this Wi-Fi enabled home appliance is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC of 9 March 1999 on radio equipment and telecommunications terminal equipment and the mutual recognition of their conformity (the R&TTE Directive)

The following statements refer to the portions of this software based in part on FreeRTOS v7.0.2, <http://www.freertos.org>. The use of this software is governed by the terms of GNU General Public License v. 2, which is available at: <http://www.gnu.org/licenses/gpl-2.0.html>. A copy of the source code may be obtained by written request for the software by name to opensource@whirlpool.com, along with the address for delivery.

The following statements refer to those portions of the software copyrighted by Eclipse Foundation, Inc. Copyright (c) 2007, Eclipse Foundation, Inc. and its licensors.

All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

- Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
- Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
- Neither the name of the Eclipse Foundation, Inc. nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

Portions of this software are copyright (c) Sawtooth Consulting Ltd. 2006-2015 All rights reserved.

Portions of this software are copyright (c) Arraynet, Inc. 2015 All rights reserved.

The following statements refer to those portions of the software copyrighted by Swedish Institute of Computer Science. Copyright (c) 2001-2004 Swedish Institute of Computer Science. All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.


The following statements refer to those portions of the software copyrighted by Marvell International Ltd. Copyright (c) Marvell International Ltd. All rights reserved.

DISCLAIMER. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT OWNER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING,

BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.


PRODUCT DESCRIPTION

APPLIANCE

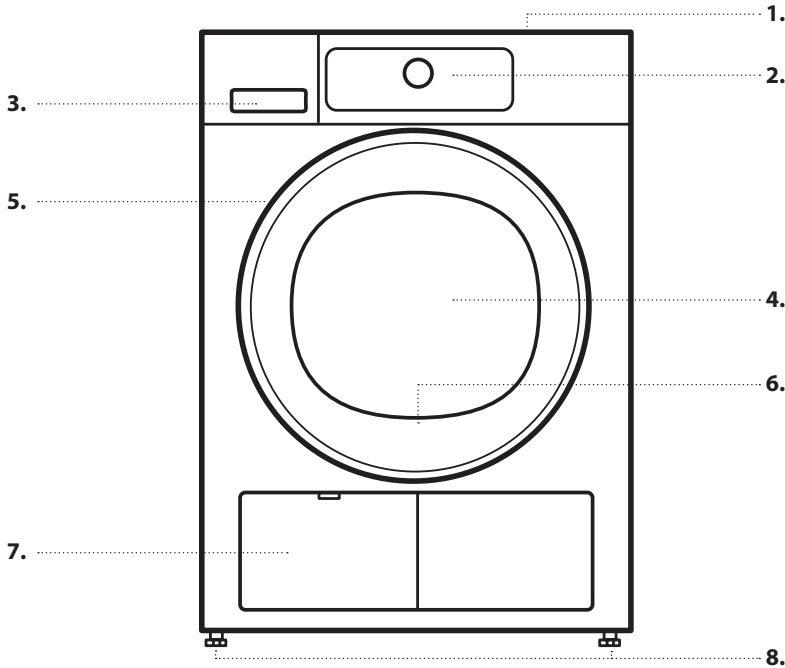

- 1. Worktop
- 2. Control panel
- 3. Water tank
- 4. Door
- 5. Door handle
- 6. Door filter (behind door)
- 7. Plinth
- 8. Adjustable feet (4)


CONTROL PANEL

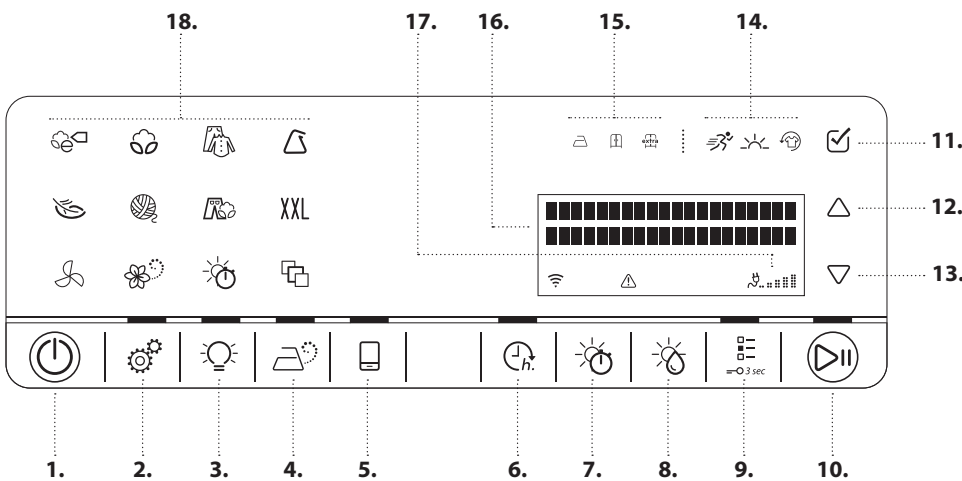


- 1. On/Off button (Reset if long pressed)
- 2. Settings button
- 3. Drum light
- 4. Steam option
- 5. Remote control button
- 6. Finish in
- 7. Drying time
- 8. Dryness level
- 9. Options button (Key lock if long pressed)
- 10. Start/Pause button
- 11. OK key (to confirm)
- 12. UP key
- 13. DOWN key
- 14. Options indicators
- 15. Dryness level indicators
- 16. Display
- 17. Eco monitor
- 18. Programmes area

DOOR

To open the door, pull the handle.

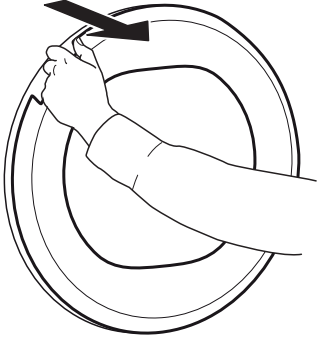

To close the door, hold the handle and push so that you can hear it click shut.

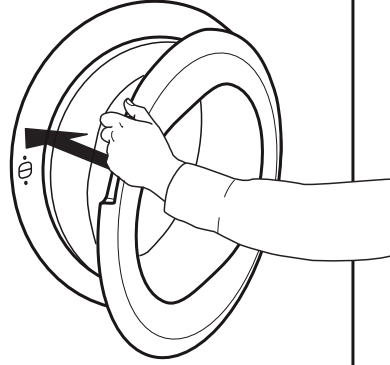

If you interrupt a running programme by opening the door, the programme will be reset if the dryer door is not closed again within one minute.

DRUM LIGHT (if available)

- During programme selection: the light goes on for laundry loading.
- After programme start: the light fades on and off while the laundry load is detected.
- After programme end, when you open the door, the light goes on for a while for unloading the laundry. Then it goes off to save energy; touch any button to switch it on again.

AVAILABLE ACCESSORIES

Contact our After-Sales Service to check if the following accessory is available for your dryer model.

STACKING KIT SHELF

by which your dryer can be fixed on top of your washing machine to save space and to facilitate loading and unloading your dryer in the higher position.

HOW TO USE THE APPLIANCE

6th SENSE LIVE FEATURE

Thanks to the 6th Sense Live feature, your appliance can be connected to the Internet.

Using the 6th Sense Live app on your smartphone / tablet, you can:

- monitor the status of the appliance
- get informed on the programme status
- set and start a programme
- change, modify, or reset a running programme
- access additional contents.

Technical requirements:

- A wireless router 2.4Ghz WiFi b/g/n connected to the Internet. Please note that the appliance has to be installed in a place well covered by your wireless network (good signal strength).
- For Android users: a smart phone running Android 4.3 (or higher) with a 1280x720 screen resolution (or higher).
- For iOS users: a smart phone or a tablet running iOS 8 (or higher).

In order to use this feature you need to download and install the 6th Sense Live app on your external device, register your dryer using the application and connect it to your home wireless network.

Find detailed information on how to use the 6th Sense Live feature in the "6th Sense Live Feature / Setup procedure" section or in the 6th Sense Live app.

FIRST TIME USE

1. WHEN SWITCHING ON THE DRYER FOR THE FIRST TIME, YOU WILL BE ASKED TO

Set the desired language

Press the UP or DOWN key to select the desired language,



and confirm by pressing the OK key.



Adapt the value for your local water conductivity

The drying results are affected by the conductivity of the water used during washing. If, by modifying the available dryness levels (iron dry; cupboard dry; extra dry), you are not satisfied with the final drying results, you can adapt the water conductivity level.

The dryer comes with preset level 2. Choose between level 1 (most damp results) and 5 (most dry results) by pressing the UP or DOWN key. Confirm by pressing the OK key.

Set the dryer to recall the last used programme setting or not

Press the UP or DOWN key to select one of the following settings

On: the dryer recalls the programme which you used last when switching on the appliance.


Off: Eco Cotton is selected by default when switching on the appliance.

Confirm by pressing the OK key.

These settings can be changed later, if needed. Refer to section FUNCTIONS / Settings.


2. CHECK WATER TANK

Make sure that the water tank is correctly inserted

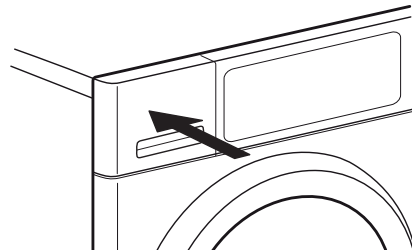

3. CHECK DRAIN HOSE

Make sure that the drain hose on the back of the dryer is fixed, either to the dryer's water tank or to your domestic sewage system (see INSTALLATION GUIDE).

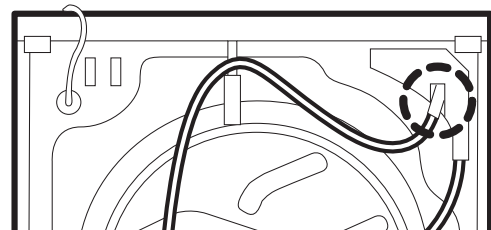

DAILY USE

WARNING

Make sure that no lighters or matches remain in the laundry.


Make sure that the laundry is not soaked with flammable liquids.


1. LOAD THE LAUNDRY


Respect the care labels of your laundry; make sure that it is appropriate for being treated in a dryer.

Drying Care Labels

The dots indicate the temperature degree for drying the laundry.

 Normal temperature

 Reduced temperature

 Do not tumble dry

Open the door and load the laundry. Observe the maximum load sizes given in the section Programmes.



2. CLOSE THE DOOR

Make sure that no laundry gets stuck between door glass and door filter.



Close the door so that you can hear it click shut.

3. SWITCH ON DRYER

Press the *On/Off button* « until the programme button lights up. An animation occurs, and there is a sound. Afterwards the dryer is ready to be operated.

4. SET THE DESIRED PROGRAMME

Press the programme symbol on the control

panel. Programme name and default duration appear on the display. Find more information regarding programmes in section PROGRAMMES and in the Daily Reference Guide.

Select programme

Press the symbol of the needed programme on the control panel; programme name and default duration appear on the display.



This programme position offers a choice of special programmes, which you can select by pressing the UP or DOWN key; the selected programme appears on the display. Afterwards press OK key to confirm the desired programme.

Find more information regarding programmes in section PROGRAMMES.



Select Drying time, if needed

Only if you have selected programme *Drying time* or *Airing* «, you can set the desired drying time from a minimum of 10 minutes to maximum 180 minutes (three hours). Press the Drying time button; the display indicates that the drying time can be set.

Press the UP or DOWN key, or press the Drying time button repeatedly, to select the desired drying / airing time.



Set dryness level, if needed

If you want to change the dryness level, press the *Dryness level button*; the display indicates that the dryness level can be set.

Press the UP or DOWN key, or press the Dryness level button repeatedly, to select the desired dryness level.



Select options, if needed

If you want to select additional options, press the *Options button*. The options which are

selectable for your programme are indicated on the display.

Press the UP or DOWN key to navigate through the list of available options. The selected option blinks. To confirm selection, press the Ok key. The corresponding symbol over the display lights up.

Some options / functions can be selected by directly pressing the button.



Refer to section **OPTIONS, FUNCTIONS AND INDICATORS** for more information.

5. START PROGRAMME

Press and hold *Start/Pause* « until the button lights up solidly and the display indicates that the programme starts.

The duration can be recalculated and adapted in the course of the programme. During such phases, an animation occurs on the control panel.

6. CHANGE THE SETTINGS OF A RUNNING PROGRAMME, IF NEEDED

You can still change some settings after a programme was started:

- Adjust drying time (only if programme *Drying time* or *Airing* is selected)
- Adjust or cancel *Finish in*, if a delay was selected and started
- Add or cancel an option, provided the progress of the programme still allows it.

Press the relevant button. The selected setting will blink for a few seconds.

While blinking, you can adjust the setting by pressing the UP or DOWN key. If the value or setting stopped blinking, press the button again.

After a setting has been changed, the programme continues automatically.

To change the settings of a running programme or delay, you can also:

- press *Start/Pause* to put the running

programme on pause

- change your settings
- press *Start/Pause* again to continue the programme.

7. CANCEL A RUNNING PROGRAMME, IF NEEDED

Press and hold the *On/Off button* « until the display indicates that the programme is cancelled.

WARNING

After cancelling a running programme, quickly remove all items and spread them out so that the heat is dissipated.

8. SWITCH OFF THE DRYER AFTER PROGRAMME END

The display indicates that the cycle has finished. Press *On/Off button* « to switch off the dryer. Open the door and take out your laundry.

The dryer switches off automatically in about a quarter of an hour after programme end, to save energy.

If not switched off right after programme end, the dryer will tumble the laundry for about 10 minutes, to prevent creasing. The display shows an animation.

9. EMPTY WATER TANK / CLEAN DOOR FILTER / CLEAN BOTTOM FILTER

Empty

- the water tank after each programme

Clean

- the door filter after each programme
- the bottom filter after every fifth programme.

Refer to section **CARE AND MAINTENANCE**


PROGRAMMES









Meaning of the care labels:













The dots indicate the temperature degree for drying the laundry.















 Normal temperature




 Reduced temperature

 Do not tumble dry

PROGRAMME	Type of Drying and Recommendations	Care Labels	Regulations
ECO COTTON 	Standard cotton programme, suitable to dry normal wet cotton laundry. Most efficient programme in terms of energy consumption for drying cotton laundry. The values on the Energy Label are based on this programme.		MAX. LOAD (KG): max DEFAULT PROGRAMME DURATION (H): 2:10 SELECTABLE OPTIONS: Fresh care
COTTON 	For drying cotton laundry.		MAX. LOAD (KG): max DEFAULT PROGRAMME DURATION (H): 2:30 SELECTABLE OPTIONS: Steam option, Dryness level, Fresh care, Gentle, Rapid
MIXED 	For drying mixed laundry made of cotton, linen, artificial fibres and their blends.		MAX. LOAD (KG): 2.0 DEFAULT PROGRAMME DURATION (H): 1:15 SELECTABLE OPTIONS: Steam option, Fresh Care, Gentle
SYNTHETICS 	For drying laundry made of synthetic fibres.		MAX. LOAD (KG): 3.5 DEFAULT PROGRAMME DURATION (H): 1:20 SELECTABLE OPTIONS: Steam option, Dryness level, Fresh care, Gentle

PROGRAMME	<i>Type of Drying and Recommendations</i>	<i>Care Labels</i>	<i>Regulations</i>
DELICATES 	For drying delicate laundry which needs gentle treatment.		MAX. LOAD (KG): 2.5 DEFAULT PROGRAMME DURATION (H): 1:15 SELECTABLE OPTIONS: Fresh care
WOOL EXCELLENCE 	For drying woollens labelled with the Woolmark TOTAL EASY CARE WOOL.		MAX. LOAD (KG): 1.0 DEFAULT PROGRAMME DURATION (H): 1:20 SELECTABLE OPTIONS: ---
JEANS 	For drying cotton jeans-wear and garments made of robust jeans like material, such as trousers and jackets.		MAX. LOAD (KG): 3.0 DEFAULT PROGRAMME DURATION (H): 1:50 SELECTABLE OPTIONS: Fresh care, Gentle
BIG ITEMS XXL	For drying big laundry items, such as bathmats, blankets etc.		MAX. LOAD (KG): 3.0 DEFAULT PROGRAMME DURATION (H): 2:00 SELECTABLE OPTIONS: Fresh care
AIRING 	For airing, refreshing and loosening up laundry for 30 minutes, without heating.	 	MAX. LOAD (KG): max DEFAULT PROGRAMME DURATION (H): 0:15 SELECTABLE OPTIONS: Drying time, Fresh care
STEAM REFRESH 	For refreshing laundry with steam. Specifically designed to refresh and remove odours from dry and clean casual garments like shirts, blouses, trousers made out of cotton, synthetics and their blends. Before loading the laundry into the drum, slightly humidify it by spraying it with water (maximum 200 ml; use a water spray bottle). Load the slightly humidified laundry into the drum and start the programme. After programme end, the garments shall be removed immediately and put on clothes hangers to minimize wrinkling.		MAX. LOAD (KG): 1.5 DEFAULT PROGRAMME DURATION (H): 0:30 SELECTABLE OPTIONS: ---

PROGRAMME	<i>Type of Drying and Recommendations</i>	<i>Care Labels</i>	<i>Regulations</i>
DRYING TIME 	Time-restricted drying programme. Select programme duration by option Drying time. For all fabrics appropriate for tumble drying. Suitable to add an additional short drying phase after programme end. Refer to OPTIONS, FUNCTIONS AND INDICATORS / option Drying time for more information.		MAX. LOAD (KG): max DEFAULT PROGRAMME DURATION (H): 0:10 SELECTABLE OPTIONS: Drying time, Fresh care
SHIRTS 	Gentle drying of shirts and blouses made of cotton, synthetic fibres or their blends.		MAX. LOAD (KG): 2.5 DEFAULT PROGRAMME DURATION (H): 1:15 SELECTABLE OPTIONS: Fresh care, Gentle
SILK 	Gentle drying of silk garments.		MAX. LOAD (KG): 2.5 DEFAULT PROGRAMME DURATION (H): 1:05 SELECTABLE OPTIONS: Fresh care
SPORT 	For drying sports garments made of synthetics or cotton.		MAX. LOAD (KG): 2.5 DEFAULT PROGRAMME DURATION (H): 1:15 SELECTABLE OPTIONS: Fresh care
TOWELS 	For drying robust laundry made of cotton, such as terry towels.		MAX. LOAD (KG): 5.0 DEFAULT PROGRAMME DURATION (H): 2:00 SELECTABLE OPTIONS: Fresh care, Gentle, Rapid
OUTDOOR 	For drying outdoor clothes which are appropriate for being treated in a dryer.		MAX. LOAD (KG): 2.0 DEFAULT PROGRAMME DURATION (H): 1:15 SELECTABLE OPTIONS: Fresh care
DOWN JACKETS 	For drying big single items such as down jackets.		MAX. LOAD (KG): 1.5 DEFAULT PROGRAMME DURATION (H): 1:45 SELECTABLE OPTIONS: Fresh care

PROGRAMME	<i>Type of Drying and Recommendations</i>	<i>Care Labels</i>	<i>Regulations</i>
MINI LOAD 	Economic drying of small laundry loads.	 	MAX. LOAD (KG): 1.0 DEFAULT PROGRAMME DURATION (H): 1:00 SELECTABLE OPTIONS: Fresh care

max = maximum capacity of the dryer

Programme durations indicated in the table are default values. The programme duration mainly depends on the humidity level of the laundry and the volume of the laundry load. For that reason, the real programme duration can deviate from the indicated values.

OPTIONS

OPTIONS WHICH ARE DIRECTLY SELECTABLE BY PRESSING THE RESPECTIVE BUTTON

STEAM OPTION



Minimizes creasing of garments made of cotton, synthetics and their blends by adding a humidifying phase at the end of the drying cycle.

Use the option with small loads only, unload the garments from the dryer

immediately after programme end and put them on clothes hangers.

The humidity level automatically adjusts to "cupboard dry" and cannot be changed with this option.

DRYING TIME OPTION



To adjust the desired drying time if Drying time or Airing programme has been selected.

Press the button; the light goes on, and the drying time which was used last appears on the display.

Press the UP or DOWN key, or press the Drying time option button repeatedly, to select the desired drying time from a minimum of 10 minutes up to maximum 180 minutes.


DRYNESS LEVEL




To select the desired dryness level for the laundry load.


Press the button repeatedly until the desired dryness level appears on the display. The corresponding symbol over the display lights up..

Choose between:

 *Iron Dry* (suitable to be ironed after the drying cycle, therefore still

slightly humid)

 *Cupboard Dry* (dry enough to be put in a cupboard at the end of the drying cycle)

 *Extra Dry* (maximum dryness level) and confirm by pressing the knob.

The dryness level is adjustable in programmes Cotton and Synthetics.

OPTIONS SELECTABLE WITH THE OPTIONS BUTTON

FRESH CARE



Helps to prevent creasing if you cannot unload the laundry soon after programme end.

The dryer starts to tumble the laundry periodically a few minutes after programme end. This tumbling will

last up to approximately 12 hours after end of the programme.

You can stop it at any time by switching off the dryer with the On/Off button.

GENTLE



Enables a more gentle treatment of the laundry by reducing the drying temperature.

RAPID



Enables quicker drying by shortening the programme duration.

FUNCTIONS

ON/OFF



To switch the dryer on: press the button until the Start/Pause button lights up.

To switch the dryer off after programme end: press the button until the lights go off.

To cancel a running programme: press and hold the button until the display indicates that the programme is cancelled.

WARNING

After cancelling a running programme, quickly remove all items and spread them out so that the heat is dissipated.

UP AND DOWN KEYS



To navigate through and select from a display menu.

The UP and DOWN keys only light up when navigation or selection is possible.



OK KEY



To confirm a selection in the Options button menu, or in the Settings menu.

The OK key only lights up when confirmation of a selected item is possible.

START/PAUSE



 
To start the programme, after you have finished your settings

To pause a running programme

To continue a paused programme

KEY LOCK



 3 sec

This function allows you to lock the buttons of the control panel against unwanted operation, for example by small children.

Knob and buttons are locked now. The only working function is On/Off to switch the dryer off.

The dryer must be switched on.



Press and hold the Key lock button until the display indicates that the keys are locked.



The key lock remains active also if you switch the dryer off and on again.

To unlock the buttons/knob, press and hold the option button again until the display indicates that the keys are unlocked.

REMOTE CONTROL



See separate section 6th Sense Live Feature/Setup procedure and 6th Sense Live Remote control/Daily use.

FINISH IN



Enables to have the laundry ready at a particular time by setting a delay until end of the programme.

Press the *Finish in* button – the display indicates that the Finish in period can be set.

Select programme and options.



Press the UP or DOWN key to set the desired delay of the programme end.

Press *Start / Pause* - the countdown of the delay starts. The display indicates the default programme duration of the selected programme, and underneath the set "Finish in" period. The Start/Pause button and the Finish in button light up; the colon between hours and minutes of the Finish in period blinks.

The programme starts automatically, in time to be finished at the end of the delay period.

The programme duration can be influenced by certain factors, mainly by the humidity level of the laundry. For that reason, the programme duration is recalculated and adapted in certain programme phases.

During these phases, the display shows an animation. This can lead to an earlier or later programme end than originally set with the *Finish in* function. In that case, the display indicates, after programme end, that the programme has finished earlier or later.

The maximum selectable delay is 23:30 hours. To exit the settings mode without setting a Finish in period, select " __: __".

To cancel the delay:

Either press *Start/Pause* to cancel the delay. To start the selected programme immediately, press *Start/Pause* again.

Or press and hold *On/Off* to cancel the complete programme setting.

SETTINGS



The following settings can be changed:

Language: to adapt the display language

Key tones: to adapt the tone when pressing a button

Cycle end alert: to adjust the tone signal at the end of the programme or switch it off completely

Display contrast: to regulate the contrast of the display text

Water conductivity: to adapt to your local water conductivity; refer to section FIRST TIME USE for more information.

Remember last used cycle: to activate or deactivate recall of the programme which you used last when switching on the dryer

Eco mode: to activate or deactivate the automatic switch-off function after programme end

Factory settings: to return to factory settings

Live menu: remote control settings
Press and hold the *Settings button* for at least 3 seconds. The display indicates that you entered the Settings mode.

Press the UP or DOWN key to navigate through the settings. Confirm the setting which you want to change by pressing the OK key.

Press the UP or DOWN key to adjust the setting, and afterwards press the OK key to confirm.

Press the *Settings button* to exit. If you do not press the Settings button, the settings mode will be exited automatically after about 10 seconds.

INDICATORS

ENERGY MONITOR



The less levels of the energy monitor are lit, the more economic is your programme setting.

FAILURE



For any failure indication on the display, refer to section TROUBLESHOOTING for more information.

CONNECTION STATUS



If your dryer has been already connected to the Internet (see 6th Sense Live Feature/ Setup Procedure section in the Use and Care Guide) and the radio is on, this indicator provides a feedback about the status of the Internet connection through your WiFi router.
When you switch on the dryer, the connection status indicator blinks:

the dryer is looking for a connection. When it becomes solidly lit, it means that the appliance is properly connected to the Internet. The strength of the wireless signal is shown by the indicator (when all the elements of the indicator are lit, the signal strength is strong)

6th SENSE LIVE FEATURE / SETUP PROCEDURE

To enable the appliance to be remotely monitored and controlled, you first have to complete successfully the setup procedure.

The setup procedure has to be carried out only once. You have to carry it out again only if you change your router setup properties (network name and password).

TECHNICAL REQUIREMENTS

- A wireless router 2.4Ghz WiFi b/g/n connected to the Internet.
- For Android users: a smart phone running Android 4.3 (or higher) with a 1280x720 screen resolution (or higher).
- For iOS users: a smart phone or a tablet running iOS 8 (or higher).

BEFORE STARTING THE SETUP PROCESS

1. Download the free 6th Sense Live app from your App Store and install it on your smartphone / tablet.

DOWN keys and press the OK key. The SAID is composed by 13 numbers and letters.

You can take note of your appliance SAID here:

2. If you do not have an account already, create one and subscribe to the service to be able to benefit from the features provided through the app.




The app provides the Terms of Use (legal terms), which require your acceptance in order to use the 6th Sense Live feature.

SAID: _ _ _ _ _

3. Register your dryer following the App instructions.

For the registration process you will need the Smart Appliance Identifier (SAID) code of your appliance.

To find the SAID code:

- press the Setting button 
- select the Live menu from the Setting menu using the UP and DOWN keys and press the OK key. 
- select the SAID item using the UP and 

4. Make sure that the appliance is installed in a place well covered by your wireless network (good signal strength).

To verify the strength of your WiFi network signal: turn on the router connecting to the appliance, use the Wifi network only and watch a Youtube video with your smart device, making sure to be nearby the appliance.

5. If your router supports WPS 2.0 (or higher), follow the automatic setup procedure to connect your appliance to the router. If your router does not support WPS, follow the manual setup procedure.

AUTOMATIC SETUP PROCEDURE

This procedure is applicable only if your router supports WPS 2.0 (or greater)

1. Turn on your router and activate the WPS (Wi-Fi Protected Setup) feature. The WPS indicator light turns on and the feature remains active for about 2 minutes.

2. While the WPS is on, press the Remote Control button. It will operate as a shortcut to the Live menu. Otherwise select the Live menu from the Setting menu using the UP and DOWN key and press the OK key.



3. Select the Setup feature from the display menu using the UP and DOWN key and press the OK key.



The Connection Status indicator starts blinking fast.



4. The Connection Status indicator starts blinking slow as the connection with the router is established.



As the Connection Status indicator becomes steady, the connection has been established and the dryer is connected to the Internet.

5. The setup procedure is complete.

MANUAL SET UP PROCEDURE

This procedure uses the Micro Access Point technology and is applicable if your router does not support WPS 2.0.

1. Before starting the setup procedure take note of your home wireless network name (SSID), its PASSWORD and the SAID code of the dryer.

2. Turn on your router and make sure the Internet connection is working.

3. Press the Remote Control button. It will operate as a shortcut to the Live menu. Otherwise select the Live menu from the Setting menu using the UP and DOWN key and press the OK key.



4. Select the Setup feature from the Live menu using the UP and DOWN key and press the OK key.



The dryer will create a wireless network (SSID). The network name is made up of the prefix "WP_" followed by the MAC address (e.g. WP_88_A1_23_6F_78_C3).



The Connection Status indicator starts blinking fast.



5. Turn on the WiFi on your smart device.

6. Look within your device for the wireless network (SSID) of the dryer and select it. It will look like

WP_XX_XX_XX_XX_XX_XX

where "XX" are letters and numbers.

Each appliance has its own SSID.

7. Once you have selected the SSID, a password will be required. Use the SAID (see "Before starting the setup process", point 3) as network password, without the first three characters.

SAID: X X X — — — — — — — — — —

8. Wait until your device confirms to be connected to the WP network.

9. Open your favourite browser with your device and type **192.168.10.1** in the address bar.

10. Press "Enter"/"Go". The browser displays a SMART web page. It is the configuration page of the WiFi radio of your dryer.

11. Select your home WiFi network in the pulldown list of the available networks.



If your home wireless network is hidden, select "Other" (->) and manually enter the network name (SSID) and the security protocol.







12. Enter the password of your WiFi network. Remember: this kind of passwords are case sensitive.

13. Click "Submit" and wait for 30 seconds.

14. The Connection Status indicator starts blinking slow as the connection with the router is established. As the Connection Status indicator becomes steady, the connection has been established and the dryer is connected to the Internet.



15. The setup procedure is complete.

RESET PROCEDURE

The reset procedure has to be carried out if you change the router setup properties (network name and password) or if the dryer is not able to connect to the cloud.

1. Select the Live menu from the Setting menu using the UP and DOWN key and press the OK key.



2. Select the reset feature from the Live menu using the UP and DOWN key and press the OK key to confirm. This item appears only if the dryer has been set up.



3. On the display there will be a confirmation message asking if you want to perform this operation. Select "Yes" using the UP and DOWN key and press the OK key to continue the de-provisioning process. The de-provisioning process begins.



4. When the provisioning process is complete a message appears on the display.

5. If you want to use the Live feature again you have to repeat the setup procedure.

6th SENSE LIVE REMOTE CONTROL / DAILY USE

The Remote Control mode allows to control the dryer remotely using a smartphone or a tablet.

The Remote Control function needs some specific

1. Make sure the router is on and connected to the Internet.

2. Switch on the dryer.



3. Load your laundry, close the door.

4. Make sure the Connection Status indicator is solidly lit.



5. Press the Remote Control button. The button light switches on, the door locks and the buttons and keys on the control panel are disabled. The only controls still active are "Remote Control", "ON/OFF".



The dryer is now in Remote Control mode and is ready to be operated via 6th Sense Live App.

technical devices and some preparatory setup. Find detailed information in the "6th Sense Live Feature / Setup procedure" section.

6. Using the App you can set and start a programme, change a running programme (if the progress of the programme still allows it), reset a running programme or get informed on the programme status.

If you start a programme remotely, at the end of the programme the dryer will automatically exit the Remote Control mode and switch off.

To manually exit Remote Control, press again the Remote Control button. You will regain local control over the control panel of the dryer.

6th SENSE LIVE FEATURE / FAQ

QUESTION	ANSWER
Are there any differences between using a smart phone (or a tablet) with Android or iOS?	You can use the operating system you prefer, there are no differences.
Which WiFi protocols are supported by the appliance?	The radio installed in the dryer supports WiFi b/g/n for European countries.
Which version of WPS is supported?	The appliance supports WPS 2.0 or higher. To verify the WPS used by your router check the router documentation.
Which settings/configuration have to be set on the router software?	The requested settings are: <ul style="list-style-type: none"> • 2.4 GHz enabled, WiFi b/g/n • DHCP and NAT activated Please refer to router documentation for more information.
Is it possible to use Tethering over a mobile 3G instead of a router?	Yes, but cloud services are designed for devices which are continuously connected to the Internet.
How can I verify that my home Internet connection works and that the wireless functionality is on?	You can search for your network either with your tablet or with your smartphone and/or computer and - if the network is visible - check if the connection works. Remember to disable any other data connections (i.e. the one of your mobile phone) before trying.
How can I find out my wireless network name and password?	A label reporting this information is usually stuck to the router. Otherwise type the URL "http://IP number of the router" to access the router setup from a connected device.
What can I do if the WiFi channel is used from the neighborhood?	You have to check the channel used for your home WiFi and, if the channel is already used from another router, force your router to use a channel free from interference. Please refer to router documentation for more information.
How do I verify that the wireless functionality on the appliance is on?	Verify that the Connection Status indicator light is stable on. Using your smart device, check on the 6 th Sense Live app if the appliance network is visible and connectet to the cloud.
How much must the distance between the router and the dryer be?	The coverage is strongly dependent from wall materials. You can verify signal strength in two ways. If the radio dryer appliance is already provisioned, you can check the signal strength on the Live menu. If the RSSI Value is greater than -75 the connection is good (e.g. -60, the connection is good; -80 the connection is bad). <ul style="list-style-type: none"> • If the radio dryer appliance is not provisioned yet, you have to check the signal strength using your tablet (or another wireless HAN device) next to the dryer (there are specific software tools downloadable from the Internet to check the signal strength).
Is there anything that can prevent the signal to reach the appliance?	Verify you do not have devices using the entire Internet bandwidth and make sure that all the home Internet devices do not exceed the router max limit of connected devices.
What can I do if my wireless connection does not reach the dryer?	You have to use a specific device to extend your home WiFi coverage such as Access Point, WiFi repeaters or Power-line brige (not provided with the dryer).

QUESTION	ANSWER
I changed the router, what do I have to do?	You can either maintain the same setup properties (network name and password) or erase the previous setup from the appliance (reset process) and carry out the setup process again (see "Live-Remote Control/Setup procedure").
I changed my home network setup, what do I have to do?	You have to erase the previous setup from the appliance (reset process) and carry out the setup process again (see "Live-Remote Control/Setup procedure").
What happens in case of a power cut?	<p>When the power returns, the Remote Control will be deactivated.</p> <ul style="list-style-type: none"> • If the dryer is in "Finish in" mode, the delay countdown continues automatically and the drying phase starts as planned. • If the dryer was running, once the power returns the dryer resumes where it left off. There is no need to press START again even if the Remote Control is deactivated.
What can I do if the Connection Status indicator continues to blink slowly and never lits solidly on?	<p>If the Connection Status indicator does not lit up solidly, the dryer has ben successfully connected to the router, but it is not able to connect to the Internet.</p> <p>In order to get the appliance connected to the Internet, you have to check the router and/or the bearer settings.</p> <p><i>Correct router settings:</i> NAT must be on; Firewall and DHCP must be properly set. Password cryptography supported: WEP, WPA, WPA2. Please refer to the router manual.</p> <p><i>Bearer settings:</i> if your Internet service provider has established the numbers of MAC addresses able to connect to the Internet, you may not be able to connect the dryer to the cloud. The MAC address is the unique identifier of a device, e.g. the one of your computer. Please ask your Internet service provider about the procedures to connect a new device other than a computer (e.g. a dryer) to the Internet.</p>
Where do I find the MAC address of the dryer?	Select the Live menu from the Setting menu using the UP and DOWN key and press the OK key. Select the MAC item from the Live menu using the UP and DOWN key and press the OK key. The MAC address is made by a combination of numbers and letters.

ENERGY SAVING

AUTOMATIC SWITCH-OFF FUNCTION

The dryer is designed to save energy. After the programme has finished, it therefore switches off automatically after about a quarter of an hour.

The period from programme end to automatic switching off (= Eco mode) can be prolonged, or the automatic switch-off function can even be disabled. Refer to section FUNCTIONS / SETTINGS

ENERGY SAVING TIPS

- To reduce the drying time, make sure that the laundry is spun with the maximum possible spin speed of the drying programme. This reduces the moisture content in the laundry.
- Preferably dry a full load, as indicated in the Programmes table. This optimizes the relative energy consumption.
- Do not over dry the laundry.
- Clean the door filter after every drying cycle.
- Clean the bottom filter after every fifth drying cycle.

- The optimum ambience temperature for the dryer is between 15 and 20 °C. In case of a higher temperature, air the room.
- Use *Gentle option* only with small loads.
- When drying cotton or synthetics laundry, run *Iron dry* and *Cupboard dry* loads together. Start the programme with dryness level *Iron dry*. At the end of the programme, remove the laundry to be ironed. Finish the drying process for the remaining load with dryness level *Cupboard dry*.
- Use the Remote Control mode to program and start the dryer while the energy costs are lower

CLEANING & MAINTENANCE

⚠ WARNING


Do not use flammable fluids to clean the dryer.

For any cleaning and maintenance, switch off the dryer.


EMPTYING THE WATER TANK

Empty the water tank after each programme, provided the drain hose is not connected to your sewage system (refer to INSTALLATION GUIDE).


- 1.** Hold the handle and carefully pull out the water tank. Hold the full water tank with both hands.

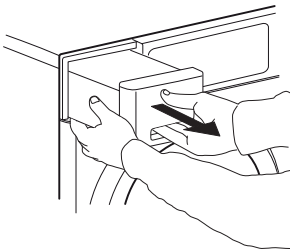

- 2.** Empty the water.

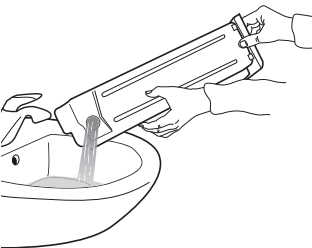


- 3.** Insert the water tank by pushing it back into place. Make sure that it is completely inserted in the compartment.

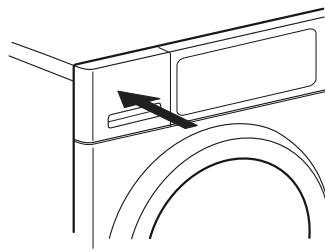


CLEANING THE DOOR FILTER

Clean the door filter after each programme. Make sure that the laundry is unloaded. Open the door.


- 1.** Remove the door filter by pulling it upwards.

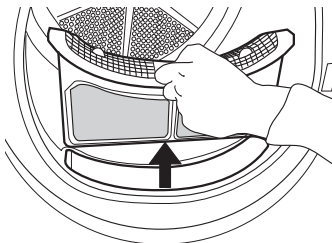


- 2.** Press the button to open the door filter.

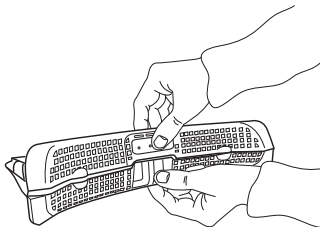


- 3.** Carefully remove the complete lint from the screen by hand. If needed, the screen can be cleaned also under running water, using a soft brush.

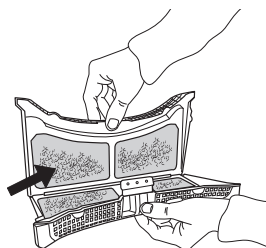

- 4.** Clean the filter compartment with a soft cloth, or carefully with a vacuum cleaner.

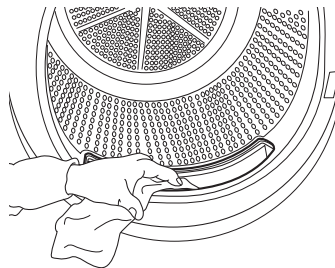


- 5.** Close the filter and reinsert it in the right direction, so that it completely integrates in the filter compartment.

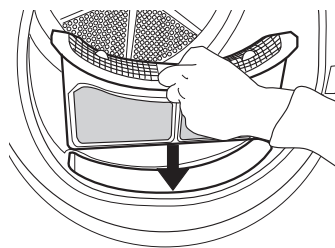


CLEANING THE BOTTOM FILTER

Clean the bottom filter after every fifth programme.


- 1.** Open the bottom flap.

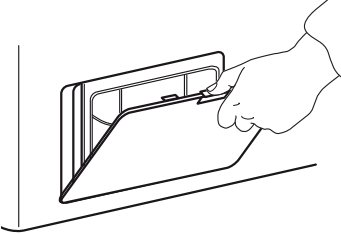


- 2.** Hold the handle and pull out the bottom filter.

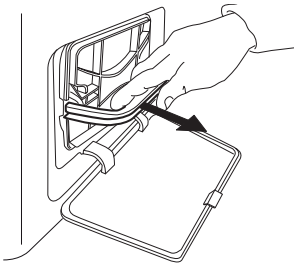

- 3.** Remove the foam from the bottom filter, to clean it.

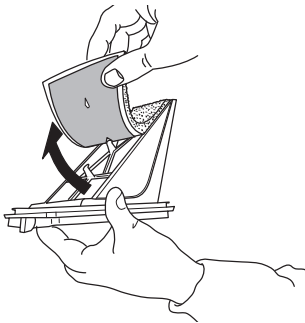


- 4.** Clean the filter foam and the filter by hand or under running water. Do not wash the filter foam in the washing machine.

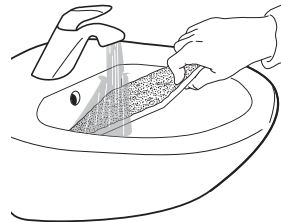


- 5.** Carefully wring out the filter foam. Do not insert it in the bottom filter dripping wet.




- 6.** Fix the filter foam on the bottom filter.

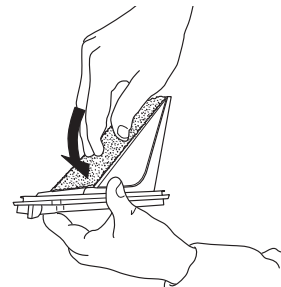


- 7.** Clean the filter chamber of the dryer with a damp cloth or carefully with a vacuum cleaner.

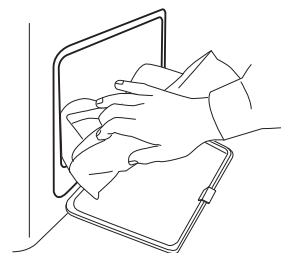


8. Insert the bottom filter again. Make sure that it is completely integrated in the filter compartment.

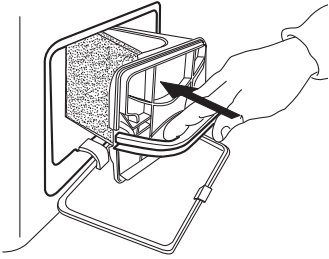

9. Clap the filter handle downwards.

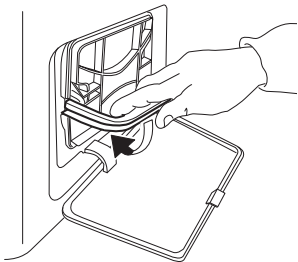

10. Close the bottom flap.

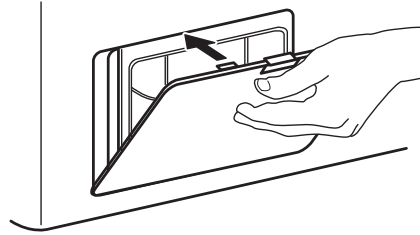

CLEANING THE OUTSIDE OF THE DRYER

Use a soft damp cloth to clean the outer parts of the dryer.

Do not use glass or general purpose cleaners, scouring powder or similar to clean the control panel – these substances might damage the surfaces.




REVERSING THE DOOR STOP


If needed, the door stop of the dryer door can be reversed. Use pliers and a cross-head screwdriver for the procedure.

For removing and fixing the door, the help of a second person is recommended. Make sure that the dryer is unplugged. Open the dryer door.


- 1.** Remove the two screws which are situated over and under the door lock, left from the door opening.

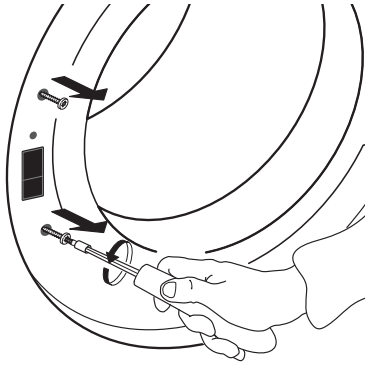



- 2.** Press the small knob above the door lock with a small screwdriver. At the same time move upwards the door lock and pull it towards you with your finger.

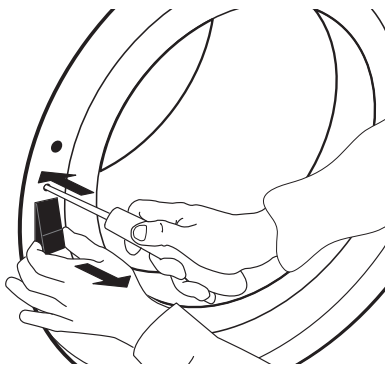


- 3.** Remove the two screws on the door hinge.

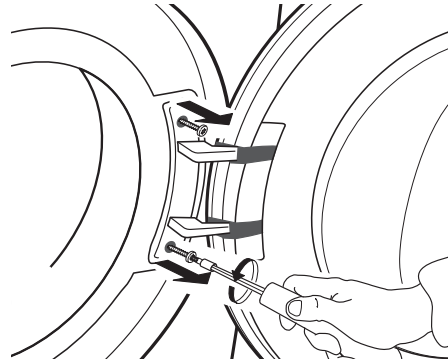



- 4.** Remove the door and carefully lay it upside down on a blanket or similar.

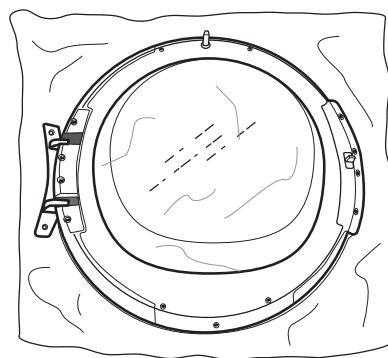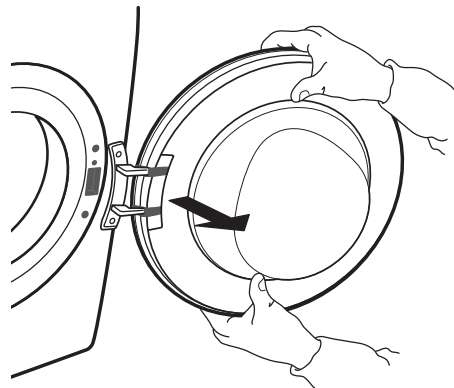


- 5.** Unscrew the bottom screw, to release the cover frame on the front of the door.

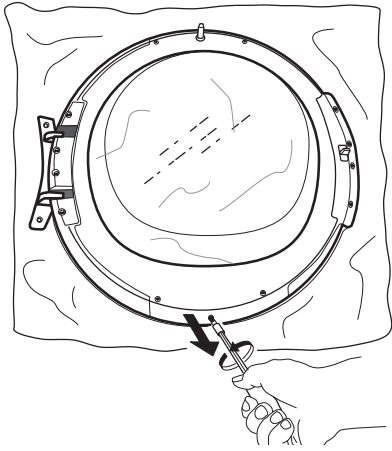



- 6.** Turn the door and lay it down on the door glass.

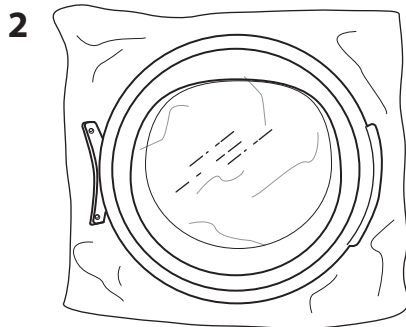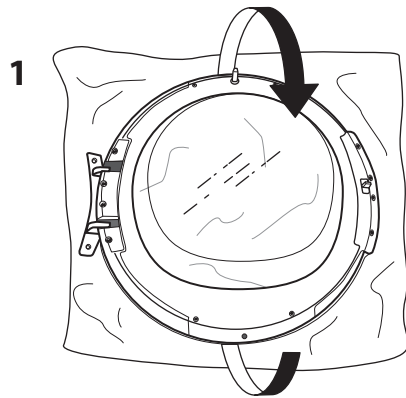


- 7.** Carefully turn the door frame in clockwise direction, and remove it.

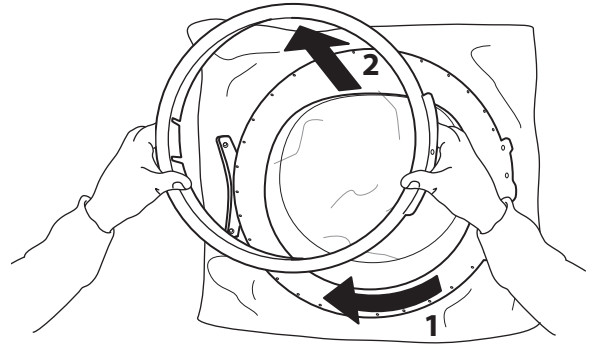


- 8.** Turn the door again and lay it upside down.

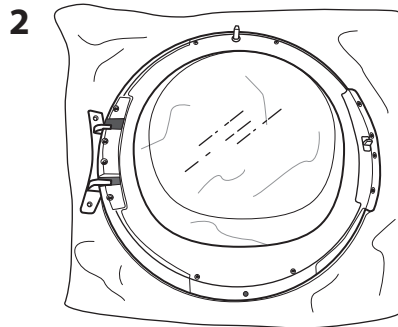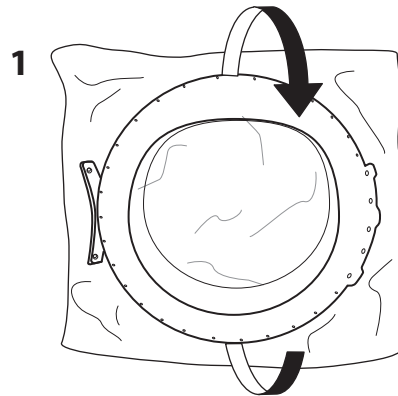


9. Remove the two side screws. Do this on both sides of the door.

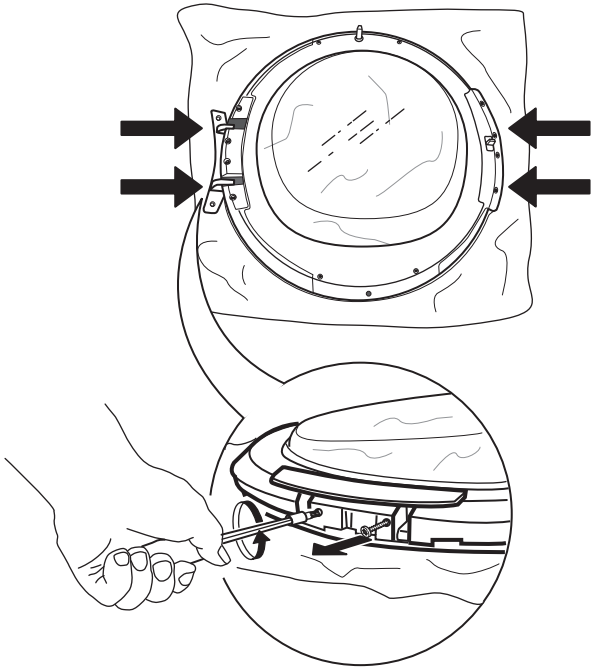


10. Remove the 4 inner screws on each side of the door.

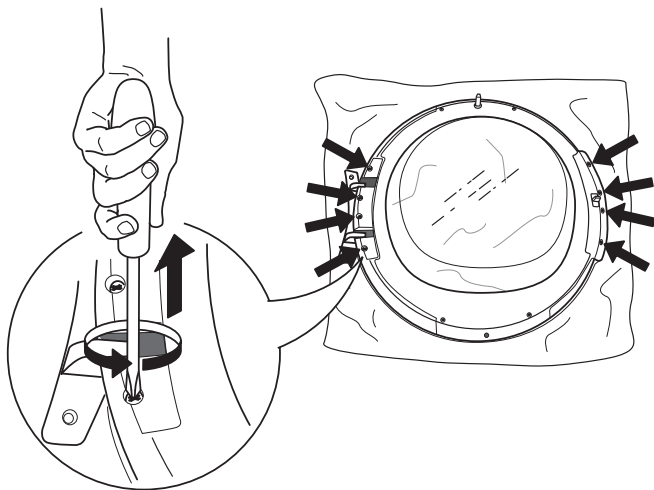


11. Remove the side parts on each side of the door.

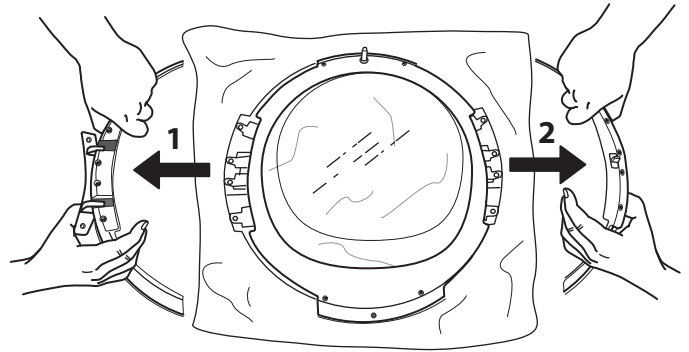


12. Reverse the side parts and insert them again.

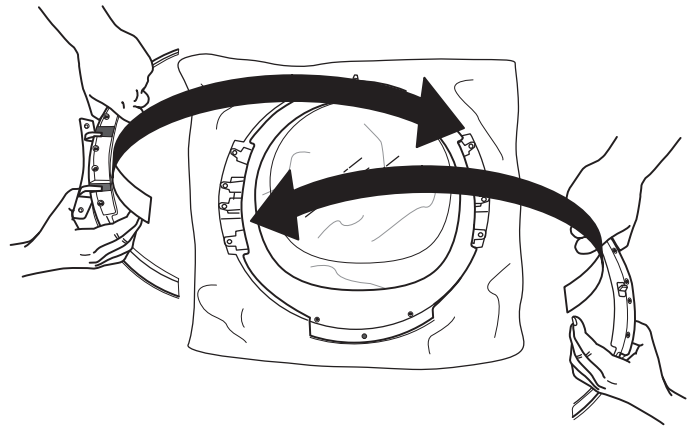


13. Fix the 2 side screws on both sides of the door again.

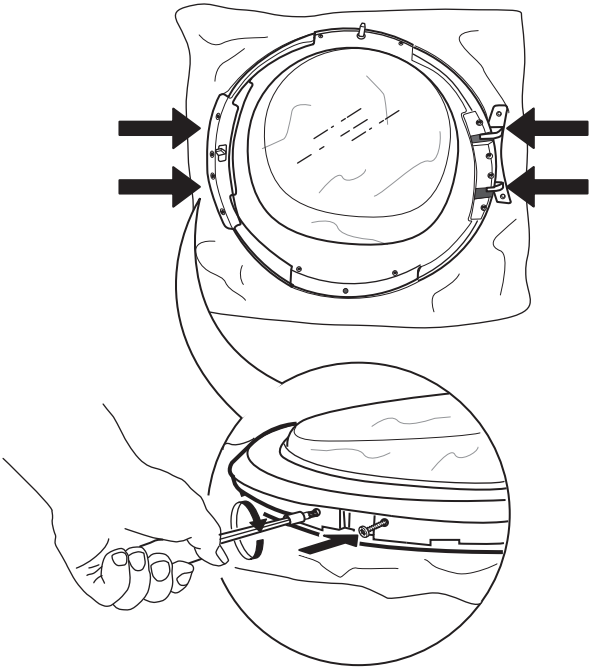


15. Turn the door and lay it down on the door glass.

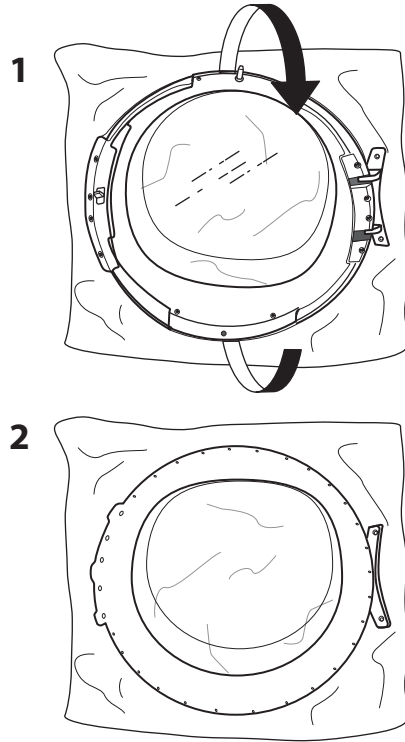


14. Fix the 4 inner screws on each side again.

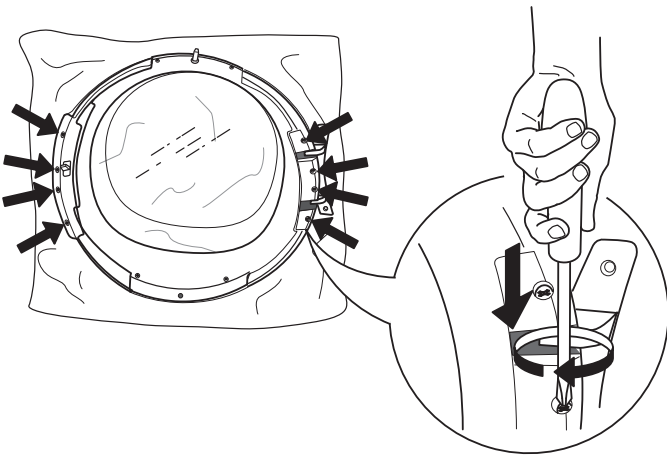


16. Refit the door frame.

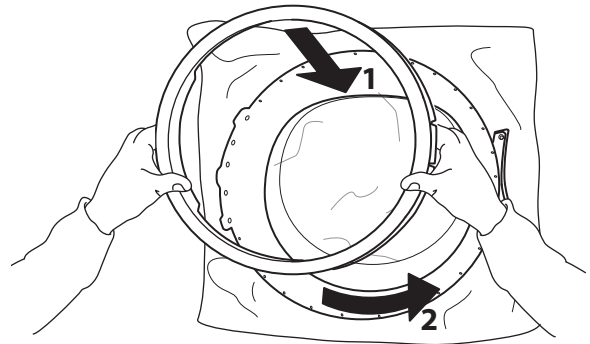


17. Turn the door again and lay it upside down. Fix the bottom screw again.

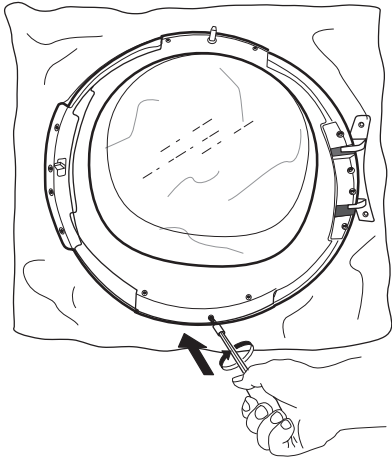


18. Insert the door lock on the right side of the door opening. Press it completely inside the hole and move it a bit downwards, until the small knob of the door lock latches.

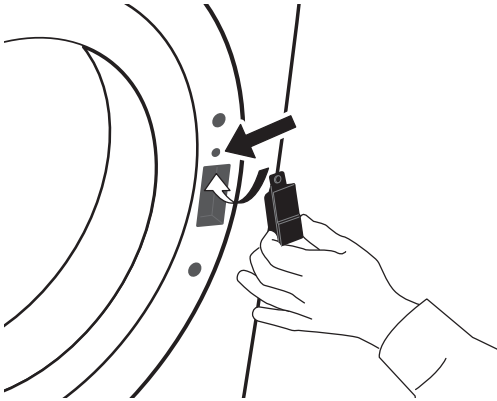

19. Fix the two screws over and under the door lock, on the right side of the door opening.

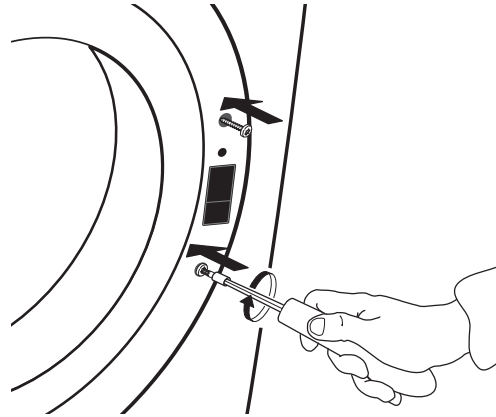

20. Fix the door on the left side of the door opening by turning in the two screws.

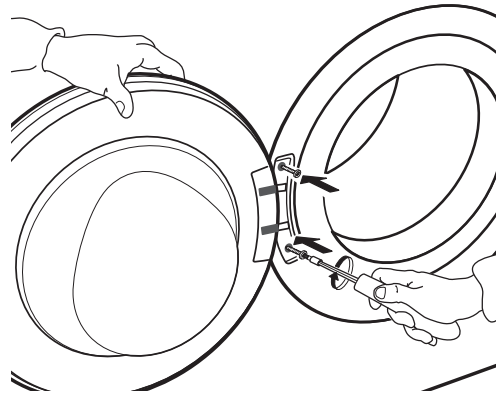

TROUBLESHOOTING GUIDE & AFTER-SALES SERVICE

Your dryer is equipped with various automatic safety functions. These enable failures to be detected in good time and the safety system can react appropriately. These failures are frequently so minor that they can be removed within a few minutes.


<i>Problem</i>	<i>Possible Cause</i>	<i>Solution</i>
DRYING TAKES TOO LONG LAUNDRY IS NOT DRY ENOUGH	Selected programme not optimum for type of laundry	<ul style="list-style-type: none"> • Select the programme matching best the type of laundry; refer to section PROGRAMMES
	Door filter or bottom filter clogged	<ul style="list-style-type: none"> • Clean the filters according to the instructions in section CARE AND MAINTENANCE
	Laundry too wet	<ul style="list-style-type: none"> • Make sure that laundry is spun with the maximum spin speed before drying. If laundry was spun with spin speed below 800 rpm, the water tank may get full during the drying programme.
	The ambient temperature is too high	<ul style="list-style-type: none"> • The ambient temperature is ideal between 15 and 20°C. If the ambient temperature is higher, air the room.
DRYER DOES NOT START, ALTHOUGH START/PAUSE HAS BEEN PRESSED	Door not properly closed	<ul style="list-style-type: none"> • Push door to close it until it clicks shut
	Key lock is activated	<ul style="list-style-type: none"> • Press and hold the button with the key symbol until the display indicates that the keys are unlocked.

<i>Problem</i>	<i>Possible Cause</i>	<i>Solution</i>
WATER DROPLETS ARE BENEATH THE DRYER	Bottom filter not inserted correctly	<ul style="list-style-type: none"> • Check position of the bottom filter and make sure it is completely integrated in the filter compartment.
	Lint remaining on bottom filter or door seal	<ul style="list-style-type: none"> • Remove lint residues on the rubber seals of bottom filter and door seal.
	Water tank not inserted correctly	<ul style="list-style-type: none"> • Push in the water tank and make sure that it is completely integrated in the tank compartment.
	Direct drain connection not working properly	<ul style="list-style-type: none"> • Check drain connection and make sure that the water can drain.
	Dryer not standing level	<ul style="list-style-type: none"> • Check level position of dryer on the tabletop with a water level; if needed adjust the dryer feet. (refer to INSTALLATION GUIDE).

FAILURE INDICATOR AND MESSAGES

Make sure to


- Empty the water tank after each programme
- Clean the door filter after each programme
- Clean the bottom filter after every fifth programme

<i>Failure Indicator</i>	<i>Display message</i>	<i>Possible Cause</i>	<i>Solution</i>
	WATER TANK FULL	Water tank may be <ul style="list-style-type: none"> • filled with water • not correctly positioned 	<ul style="list-style-type: none"> • Empty water tank; make sure to insert it properly afterwards. • Push in the water tank to make sure that it is correctly inserted in the tank compartment.
	CLEAN BOTTOM FILTER	Bottom filter may be <ul style="list-style-type: none"> • blocked by lint • not correctly positioned 	<ul style="list-style-type: none"> • Clean the bottom filter; make sure to insert it properly afterwards • Push in the bottom filter and move the release levers into vertical position, to make sure that the filter is correctly inserted in the filter compartment. Close the flap.
	CLEAN DOOR FILTER	Door filter may be <ul style="list-style-type: none"> • blocked by lint • not correctly positioned 	<ul style="list-style-type: none"> • Remove and clean the door filter; make sure to insert it properly afterwards so that it completely integrates in the filter compartment. • Check position of the door filter; make sure that it is properly inserted in the filter compartment.

Refer to section CARE AND MAINTENANCE for emptying water tank or cleaning filters.

Below is a summary of possible failure causes and solutions.

If the problem persists after having followed the instructions as indicated below, press and hold On/Off for at least three seconds. If afterwards the failure indication still appears, switch off and unplug the dryer and contact our After-Sales Service.

<i>Failure Indicator</i>	<i>Display message</i>	<i>Possible Cause</i>	<i>Solution</i>
	F01 to F04	Failure of a component	Press and hold On/Off for at least 3 seconds.
	F05 to F09	Failure of a component	Switch off and unplug the dryer. Immediately open the door and take out the laundry, so that the heat can dissipate. Make sure that the ambient temperature ranges between 5°C and 35°C. Wait for about an hour. Plug in the dryer, load the laundry and start the programme again. If the failure persists, call the After-Sales Service.
	F10 to F24	Failure of a component	Switch off and unplug the dryer. Wait for about half an hour. Plug in the dryer and start the programme again. If the failure persists, call the After-Sales Service.

TRANSPORT AND HANDLING

**WARNING**

Never lift the dryer by holding it at the worktop.

1. Unplug the dryer.
.....

2. Make sure that door and water tank are properly closed.

3. If the drain hose is connected to your sewage system, fix the drain hose on the rear of the dryer again (see Installation Guide).

AFTER-SALES SERVICE

BEFORE CALLING THE AFTER-SALES SERVICE

1. See if you can solve the problem by yourself with the help of the suggestions given in the **TROUBLESHOOTING GUIDE.**

.....

2. Switch the appliance off and on again to see if the failure persists.

IF AFTER THE ABOVE CHECKS THE FAILURE STILL OCCURS, GET IN TOUCH WITH THE NEAREST AFTER-SALES SERVICE

To receive assistance, call the number shown on the warranty booklet or follow the instructions on the website **www.whirlpool.eu**

Always specify:


- a brief description of the failure;
- the type and exact model of the appliance;
- the service number (number after the word Service on the rating plate on the back of the dryer).
The service number is also indicated on the guarantee booklet;
- your full address;
- your telephone number.



For any repairs, use our authorized After-Sales Service, to ensure proper repairing and use of original spare parts.


Manufacturer:
Whirlpool Europe s.r.l. Socio Unico
Viale Guido Borghi 27
21025 Comerio (VA)
Italy

1.

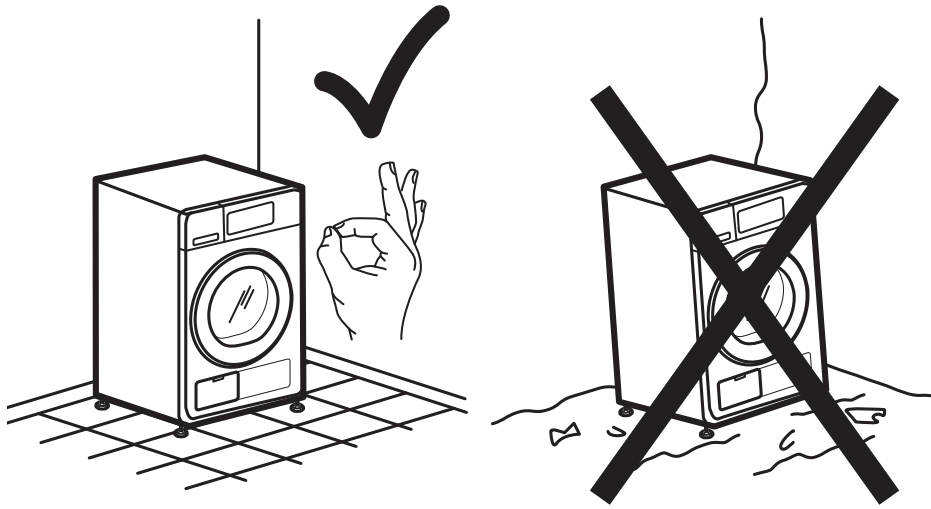


2a.


2b.

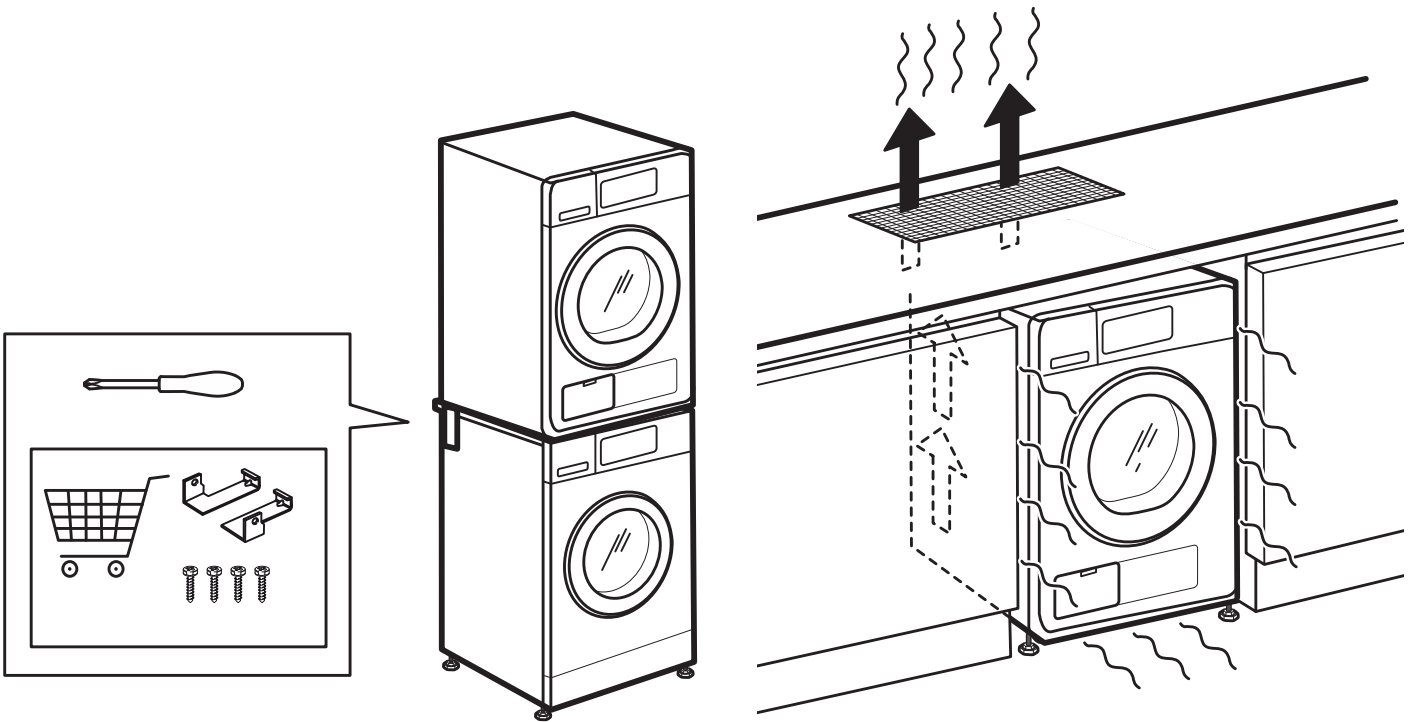





3a.

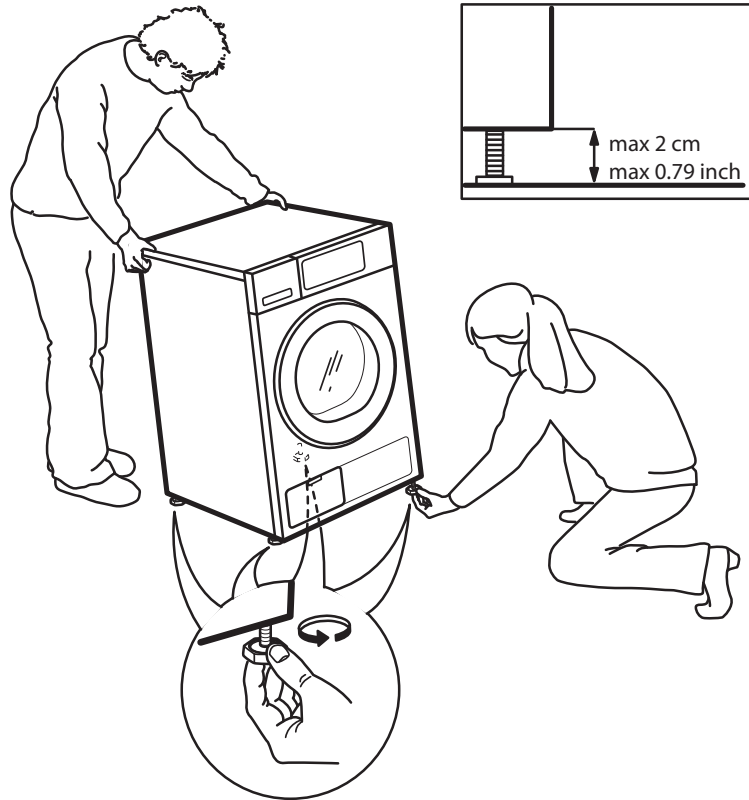


3b.

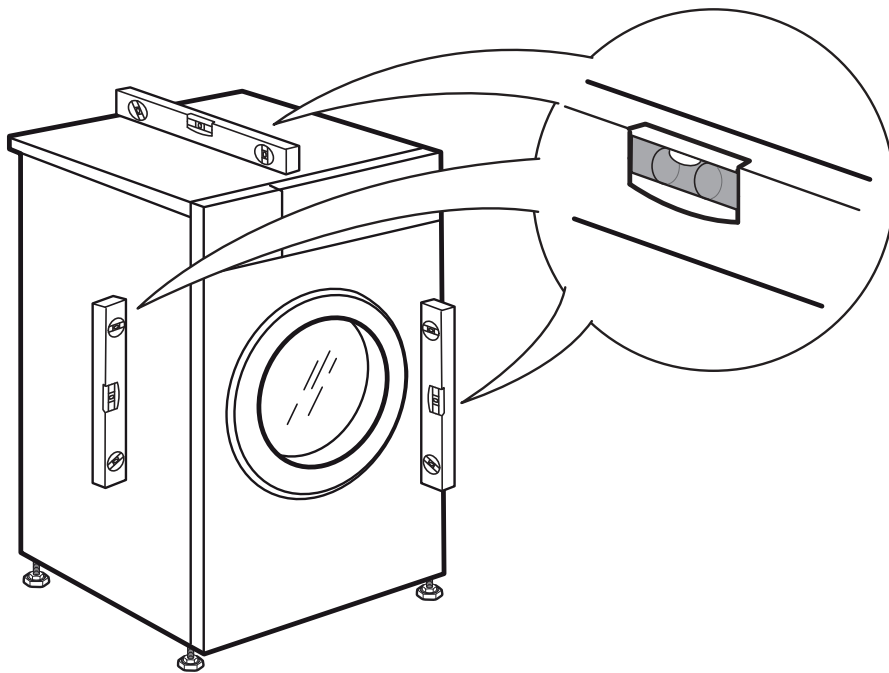

4.

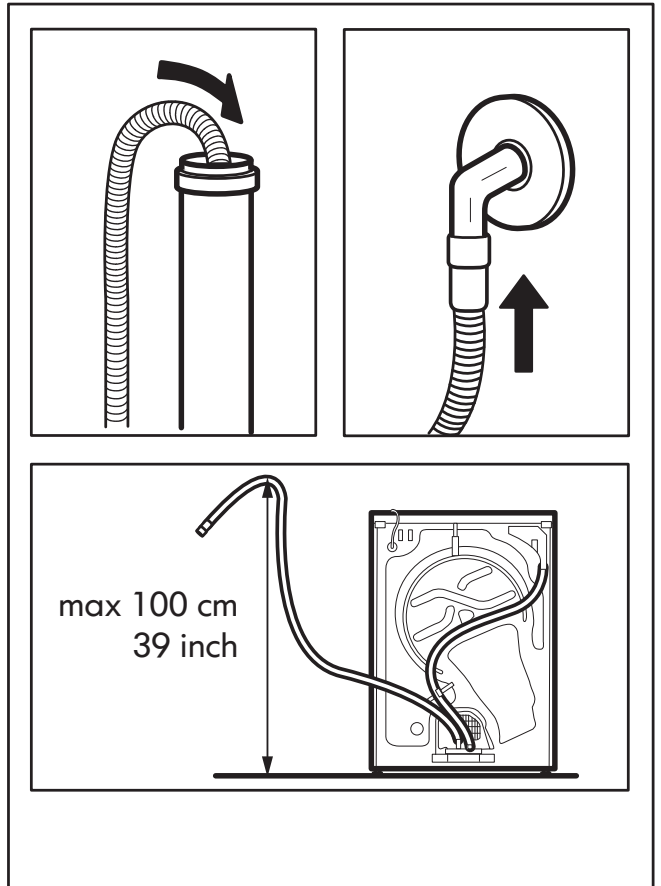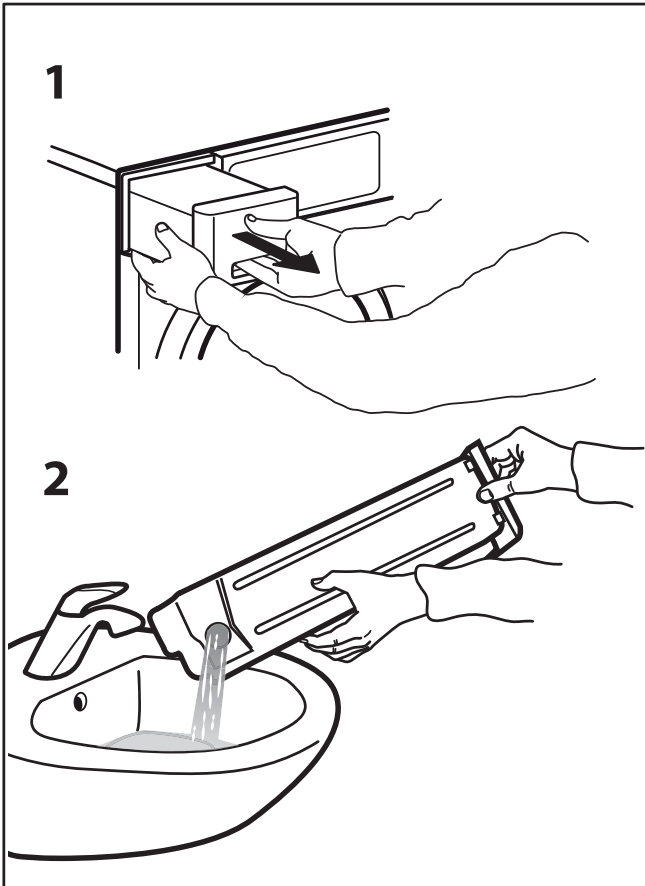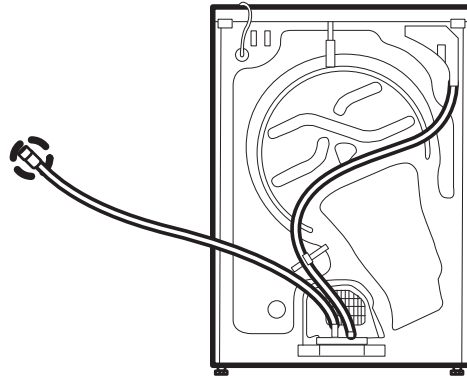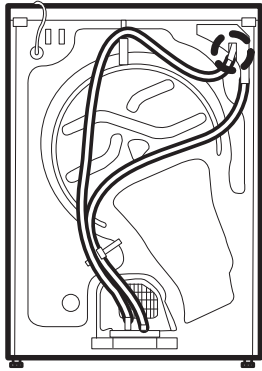


5.

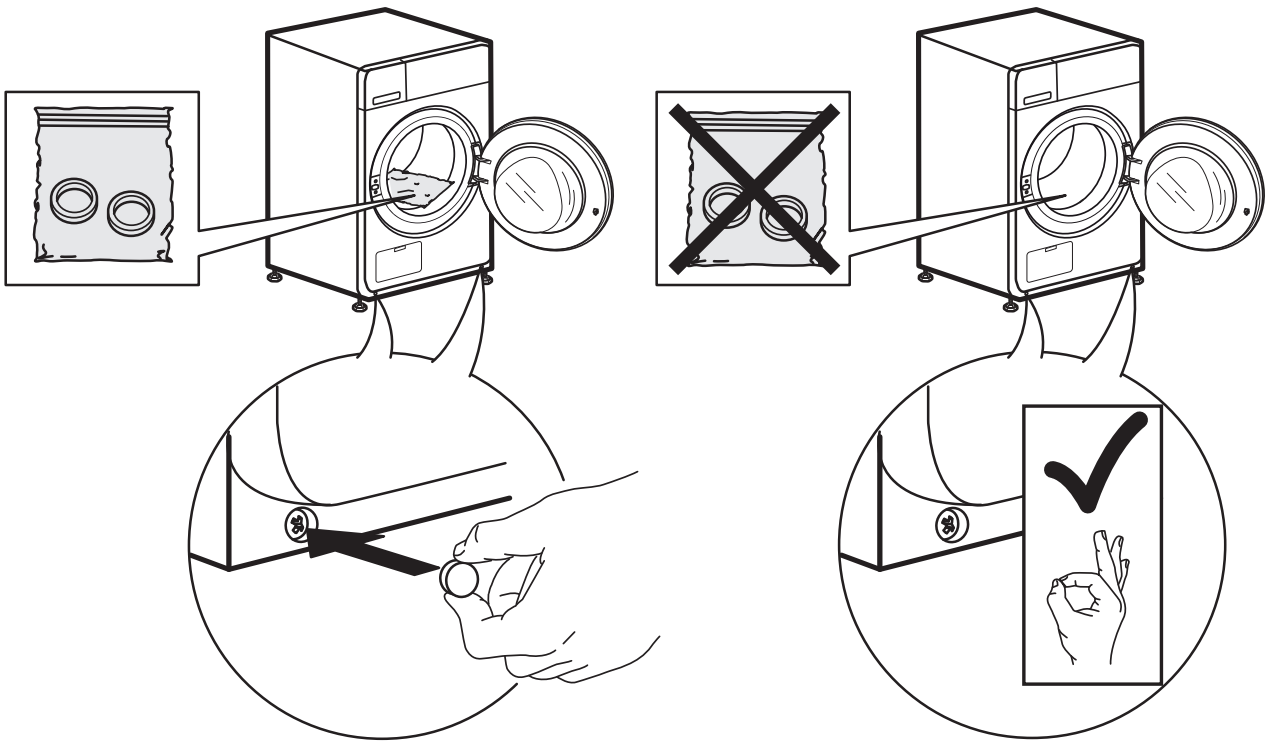

6a.

6b.

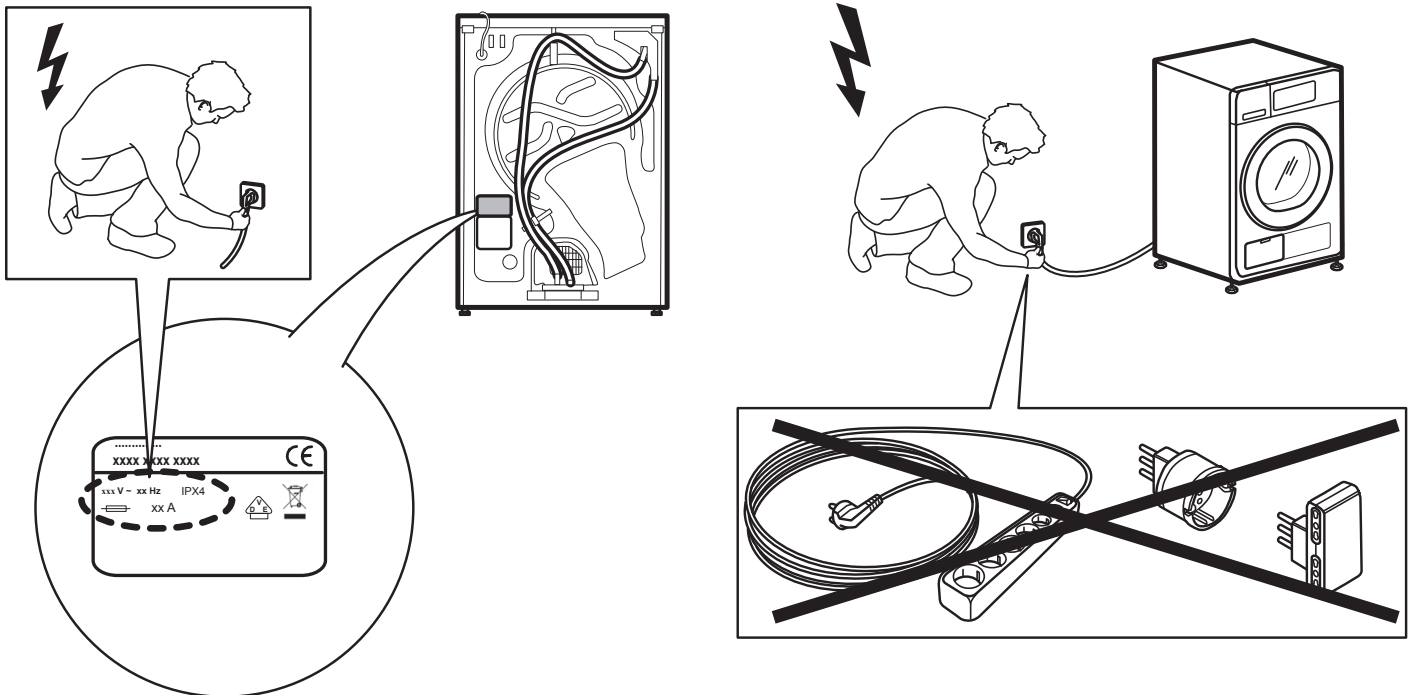

Whirlpool is a registered trademark of Whirlpool, USA



400010838912



SENSING THE DIFFERENCE