

User Manual

USER MANUAL

INDEX

Use & Care guide **3**

Refrigerator light 3

Replacing the LED light 3

Shelves 3

Door..... 3

How to use the appliance 4

First time use 4

Refrigerator compartment and food storage 4

How to store fresh food and beverages 4

Freezer compartment food storage 5

Storage times for home frozen foods 5

Functional sounds 6

Recommendation in case of no use of the appliance 6

Cleaning and maintenance 6

Accessories *..... 7

Humidity control * 7

Tuck shelf * 8

Freezer pad (Alu PAD)* 8

Refrigerator pad* 8

Troubleshooting..... 8

Gasket replacement 10

* Available only on certain models

Refrigerator light

 
The light system inside the refrigerator compartment uses LED lights, allowing a better lighting than traditional light bulbs as well as providing a very low energy consumption. Contact the Technical Assistance Service if you need a replacement.

Important: The refrigerator compartment light switches on when the refrigerator door is opened.

Replacing the LED light

Always disconnect the appliance from the power supply before replacing the light bulb. Then follow the instructions based on the type of light bulb for your product. Replace the light bulb with one with the same features, available from the Technical Assistance Service and authorised sellers.

If you need to replace the LED lights, please contact the Technical Assistance Service.

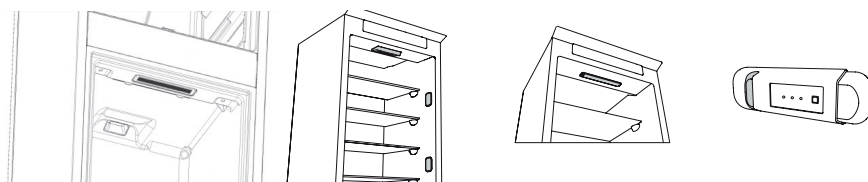

Shelves

All of the drawers, door shelves and shelves can be removed.

Door

Door reversibility

Note: the direction of door opening can be changed. If this operation is performed by the After-sales Service it is not covered by the warranty.

Follow the instructions in the **Installation Guide**.

* Available only on certain models

How to use the appliance

First time use

Wait at least two hours, after the installation, before connecting the appliance to the power supply. Connecting the appliance to the power supply starts the operation automatically. The ideal storage temperatures for the food are preset in the factory. After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available). If the acoustic signal sounds, it means that the temperature alarm was activated: press the button to switch off the acoustic alarm.

Refrigerator compartment and food storage

The refrigerator compartment allows for the storage of fresh food and drink. The refrigerator compartment defrosts completely automatically. The occasional presence of drops of water on the internal back wall of the compartment is a sign of the automatic defrosting phase. The defrosting water is channelled into a drain and then collected in a container, where it evaporates.

Note: the ambient temperature, how often the doors are opened and the position of the appliance may affect the internal temperatures in the two compartments. Set the temperatures according to these factors. In very humid conditions, condensation may form in the refrigerator compartment, especially on the glass shelves. In this case, it is recommended that you close containers with liquids in (e.g. a pot of stock), wrap up food with a high water content (e.g. vegetables) and turn on the fan, if there is one. All of the drawers, door shelves and shelves can be removed.

 
Multiflow Air Distribution

The multiflow helps to distribute evenly the cold air in the cavity for better food preservation. Food can be placed on any shelf of the appliance. Please be careful not to obstruct the air distribution vents thus ensuring its free movement.

How to store fresh food and beverages

Foods which give off a large amount of ethylene gas (apples, apricots, pears, peaches, avocados, figs, prunes, blueberries, melons, beans) and those that are sensitive to this gas, such as fruit, vegetables and salad, should always be kept separated or wrapped so as not to reduce their storage life; for example do not store tomatoes together with kiwi fruits or cabbage. Do not store food too close together to enable sufficient air circulation. Use recyclable plastic, metal, aluminium, glass containers and cling film to wrap foods.

If you have a little quantity of food to store in the refrigerator, we recommend to use the shelves above the crisper for fruits and vegetables since this is the coolest area of the compartment. Always use closed containers for liquids and for food that may give off or be tainted by odour or flavour transfer or cover them. To avoid bottles falling over, you can use the bottle holder (available on selected models).

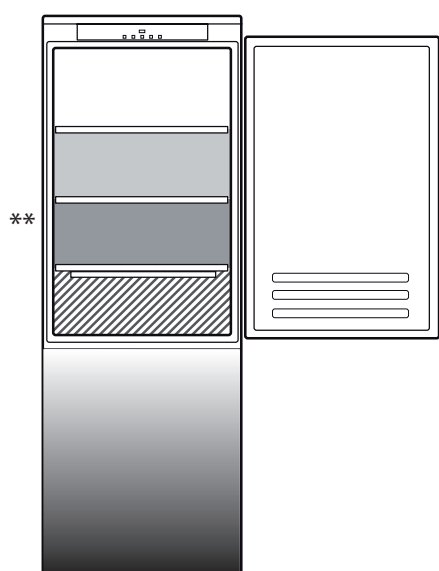

Legend

ZONE

Suggested for the storage of tropical fruit, cans, drinks, eggs, sauces, pickles, butter, jam

COOL ZONE

Suggested for the storage of cheese, milk, daily food, delicatessen, yoghurt, flour-based PASTAS & DOUGHS

COOLEST AREA

Suggested for the storage of cold cuts, desserts, meat and fish

FRUIT & VEGETABLE DRAWER

**

For models with "0° ZONE" COMPARTMENT the "coolest area" is the one highlighted in the legend

* Available only on certain models

Freezer compartment food storage


The freezer compartment **✱***** allows for long time storage of frozen food and freezing of fresh food. The quantity of fresh food that can be frozen in 24 hours is written on the rating plate. Arrange the fresh food in the freezing area inside the freezer compartment, leaving enough space around the food packages to allow air to circulate freely. It is advisable that you do not re-freeze food that has been partially defrosted. It is important to wrap the food in a way that prevents the penetration of water, humidity or condensation.

Tray*
The freezer tray is useful to easily access frequently used products, to freeze or simply store leftovers or small items.


Ice cubes
Fill 2/3 of the ice tray with water and put it back in the freezer compartment. Do not use sharp or pointed objects to remove the ice under any circumstances.


Removing the drawers
Pull the drawers outwards as far as they will go, lift them up and remove them. To get more volume, the freezer compartment can be used without the drawers. Make sure that the door is closed properly after putting the food back on the grilles/shelves.

Total No Frost system
The Total No Frost system effectively prevents ice formation, avoiding the hassle of manual defrosting both in the freezer and fridge cavity. Its ventilation system provides perfect circulation of cold air in both cavities thus avoiding ice build-up.



Legend

**FREEZER DRAWER**

**FREEZING ZONE DRAWER**
(MAX COOL ZONE) Suggested to freeze fresh/cooked food.

*** Only for CB310 and CB380 models (refer to the rating plate located at the side of the fruit and vegetable drawer)

Storage times for home frozen foods

FROZEN COMPARTMENT			
Product	Storage period (-12°C)	Recommended storage period (-18°C)	Storage period (-24°C)
Butter or margarine	1 month	6 months	9 months
Fish	1 month	1-3 months	6 months
Fruit (except citrus) & vegetables	1 month	8-12 months	12 months
Meat			
Ham-sausages	1 month	2 months	12 months
Roasts (beef-pork-lamb)		8-12 months	
Steaks or chops (beef-lamb-pork)		4 months	
Milk, fresh liquids, cheese, ice cream or sorbet	1 month	1-3 months	5 months (not recommended for ice cream)
Poultry (chicken-turkey)	1 month	5-7 months	9 months

* Available only on certain models

UNFROZEN COMPARTMENT

Product	Storage period 0-3°C	Storage period (3-6°C)	Storage period 6-8°C
Cans, drinks, eggs, sauces, pickles, butter, jam	3-4 weeks	3-4 weeks	3-4 weeks
Tropical fruit	Not recommended	2-4 weeks	3-4 weeks
cheese, milk, dairy food, deli food, yoghurt	2-5 days	2-5 days	2-5 days
Cold cuts, desserts, meat and fish and home-cooked food	3-5 days	1-2 days	Not recommended
Store vegetables and fruits (excluding tropical fruits and citrus)	15 days	10-12 days	4-7 days

Functional sounds

1. A buzz generated by the compressor is normal while the product is working.



2. Gurgling and crackles are generated by the passage of the refrigerant gas inside the cooling circuit, therefore these are normal noises.



3. It's possible to "hear" creaks when the compressor is active and inactive: it is a normal sound of the product's structure.



4. Check that the balconies on the inside of the refrigerator door, the shelves and the drawers in the refrigerator compartment are attached and positioned properly, to avoid possible vibrations.
5. Don't place glass containers (bottles, jars, etc.) in direct contact with each other, to avoid vibrations.
6. This device is equipped with a compressor that operates at an optimum speed to minimise energy consumption. It may happen that in certain situations (in summer or if large quantities of food are stored) the compressor increases the speed and therefore it is more noisy than usual.

Recommendation in case of no use of the appliance

In the event of non-use of the appliance

Disconnect the appliance from the power supply, empty it, defrost it (if necessary) and clean it. Keep the doors slightly ajar to let air circulate inside the compartments. By doing this, you avoid the development of mould and bad odours.

In the event of an interruption to the power supply

Keep the doors closed so the food stays cold for as long as possible. Do not re-freeze food that has partially defrosted. If there is a prolonged power cut, the black out alarm may also activate (in products with electronics).

Cleaning and maintenance

Before any cleaning or maintenance operation, unplug the appliance from the mains or disconnect the electrical power supply.

Never use abrasives. Never clean refrigerator parts with flammable fluids.

Do not use steam cleaners.

 
The buttons and control panel display must not be cleaned with alcohol or alcohol-derived substances, but with a dry cloth.

Clean the appliance occasionally with a cloth and a solution of warm water and neutral cleaning agents specifically made for cleaning the inside of the refrigerator.


* Available only on certain models

Accessories *


EGG TRAY

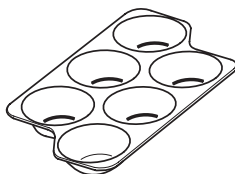


BOTTLE RACK

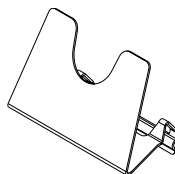 


BOTTLE RACK

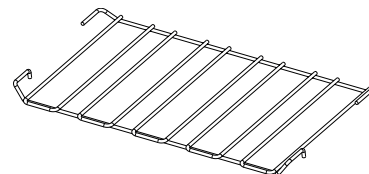 


REFRIGERATOR PAD

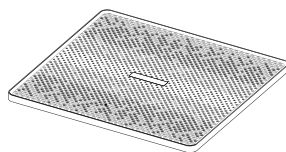 


FREEZER PAD

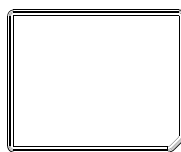 


ICE TRAY

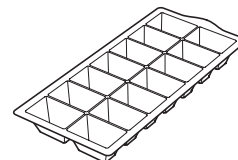 


KNOB HUMIDITY CONTROL

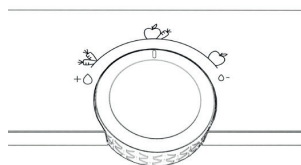 

HUMIDITY CONTROL

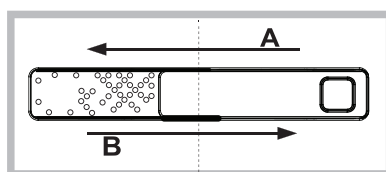 


TUCK SHELF

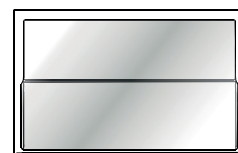 

Humidity control *

 Open the humidity regulator (position B) if you want to store food in a less humid environment like fruit, or close it (position A) to store food in a more humid environment like vegetable.

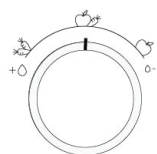

Multi Fresh Zone

3 temperature selection to optimally preserve: Meat/Fish; Dairy; Fruit/ Veggies, offering also extra storage space for your fresh greens.

Settings:

 
LOW = Meat and Fish

MID = Dairy Food (Cheese and Yogurt)

HIGH = Fruits and vegetables

For the correct functioning of the "Multi Fresh zone" drawer, it is necessary that:

- the appliance is turned on
- one of the following special functions is not selected: Standby, Cooling-Off, Vacation (in this case, remove the food contained in it).

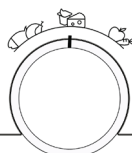

* Available only on certain models

Spare parts will be available for a period of either up to 7 or up to 10 years, according to the specific Regulation requirements

Tuck shelf *

Thanks to the rail system, this shelf allows you to slide it under the front part, creating an extra space for storing tall bottles or pitchers.

Freezer pad (Alu PAD)*

The metallic panel helps to freeze the food faster.

For easy cleaning the metallic panel can be removed, lifting it up from the left corner.

Refrigerator pad*




The fruit & vegetable drawer is equipped with the hygiene grid.

Thanks to the special design of this component fruit & vegetables do not come in contact with natural leakages (like drips and moisture loss from vegetables) that will drop underneath the hygiene grid. The hygiene grid is treated with Microban SilverShield® technology that reduces harmful bacteria by up to 99.9% on the surface of the crisper grid, for enhanced preservation of fruit and vegetables**. The hygiene grid can be removed to be washed when dirty, simply by raising it and pulling it out. It can be simply washed by hand, with water only or with common neutral detergents for dishes. It can also be washed in the dishwasher.


After cleaning, dry it before putting it back into place.

Troubleshooting

What to do if...	Possible reasons	Solutions
The control panel is switched off, the appliance does not work.	The appliance could be in On/Standby mode. There may be an appliance power supply problem.	Activate the appliance with the On/Standby button. Make sure: <ul style="list-style-type: none"> • there is not a power outage • the plug is properly inserted in the power socket and the mains double-pole switch (if present) is in the correct position (i.e. allows the appliance to be powered) • the household electrical system protection devices are efficient • the power cable is not broken.
The inside light does not work.	The light may need replacing.	Contact the Authorized service center.
	The appliance could be in On/Standby mode.	Activate the appliance with the On/Standby button.
The temperature inside the compartments is not low enough.	There could be various causes (see "Cures").	Make sure: <ul style="list-style-type: none"> • the doors close properly • the appliance is not installed near a heat source • the set temperature is adequate • the circulation of air through the vents at the bottom of the appliance is not obstructed.
The front edge of the appliance, at the door striker seal, is hot.	This is not a defect. It prevents condensation from forming.	No cure is necessary.
The icon 6 lights up, ⚠ flashes and an acoustic signal sounds.	Door open alarm It is activated when a door remains open for a long period of time.	Close the doors of the product to deactivate the acoustic signal.

What to do if...	Possible reasons	Solutions
The icon  lights up,  flashes and an acoustic signal sounds and freezer temperature display flashes the temperature reached.	<p>Black Out alarm It is activated in case of a prolonged power outage causing an increase in the freezer compartment temperature.</p> <p>Note: A different product temperature cannot be set until the Black Out alarm is deactivated.</p>	Before deactivating the acoustic signal, it is advisable to pay attention to the temperature shown on the Freezer temperature display, corresponding to the highest temperature reached in the freezer compartment during the black out. Press the "Stop Alarm" button briefly to deactivate the acoustic signal. After pressing the button, the temperature display shows the set temperatures again. If the freezer compartment has not yet reached the optimum food preservation temperature, the freezer compartment temperature alarm could be activated (see freezer compartment temperature alarm). Check the food before consuming it.
The "Stop Alarm" button  lights up, the freezer temperature display flashes, and an acoustic signal sounds.	<p>Freezer compartment temperature alarm The freezer compartment temperature alarm indicates that the compartment temperature is not optimum. This may happen: with first use, after defrosting and/or cleaning, if large amounts of food are placed inside the freezer or when the freezer door has not been closed properly.</p>	Press the "Stop Alarm" button briefly to deactivate the acoustic signal: The freezer temperature display stops flashing. The "Stop Alarm" button goes off automatically when optimum temperature conditions are reached. If the freezer compartment temperature alarm stays on, contact the Authorised Service Centre.
The letters "F" and "E" flashes on the display.	<p>Malfunction alarm The alarm indicates a fault in a technical component.</p>	Call the authorised Service Centre.

 Gasket replacement

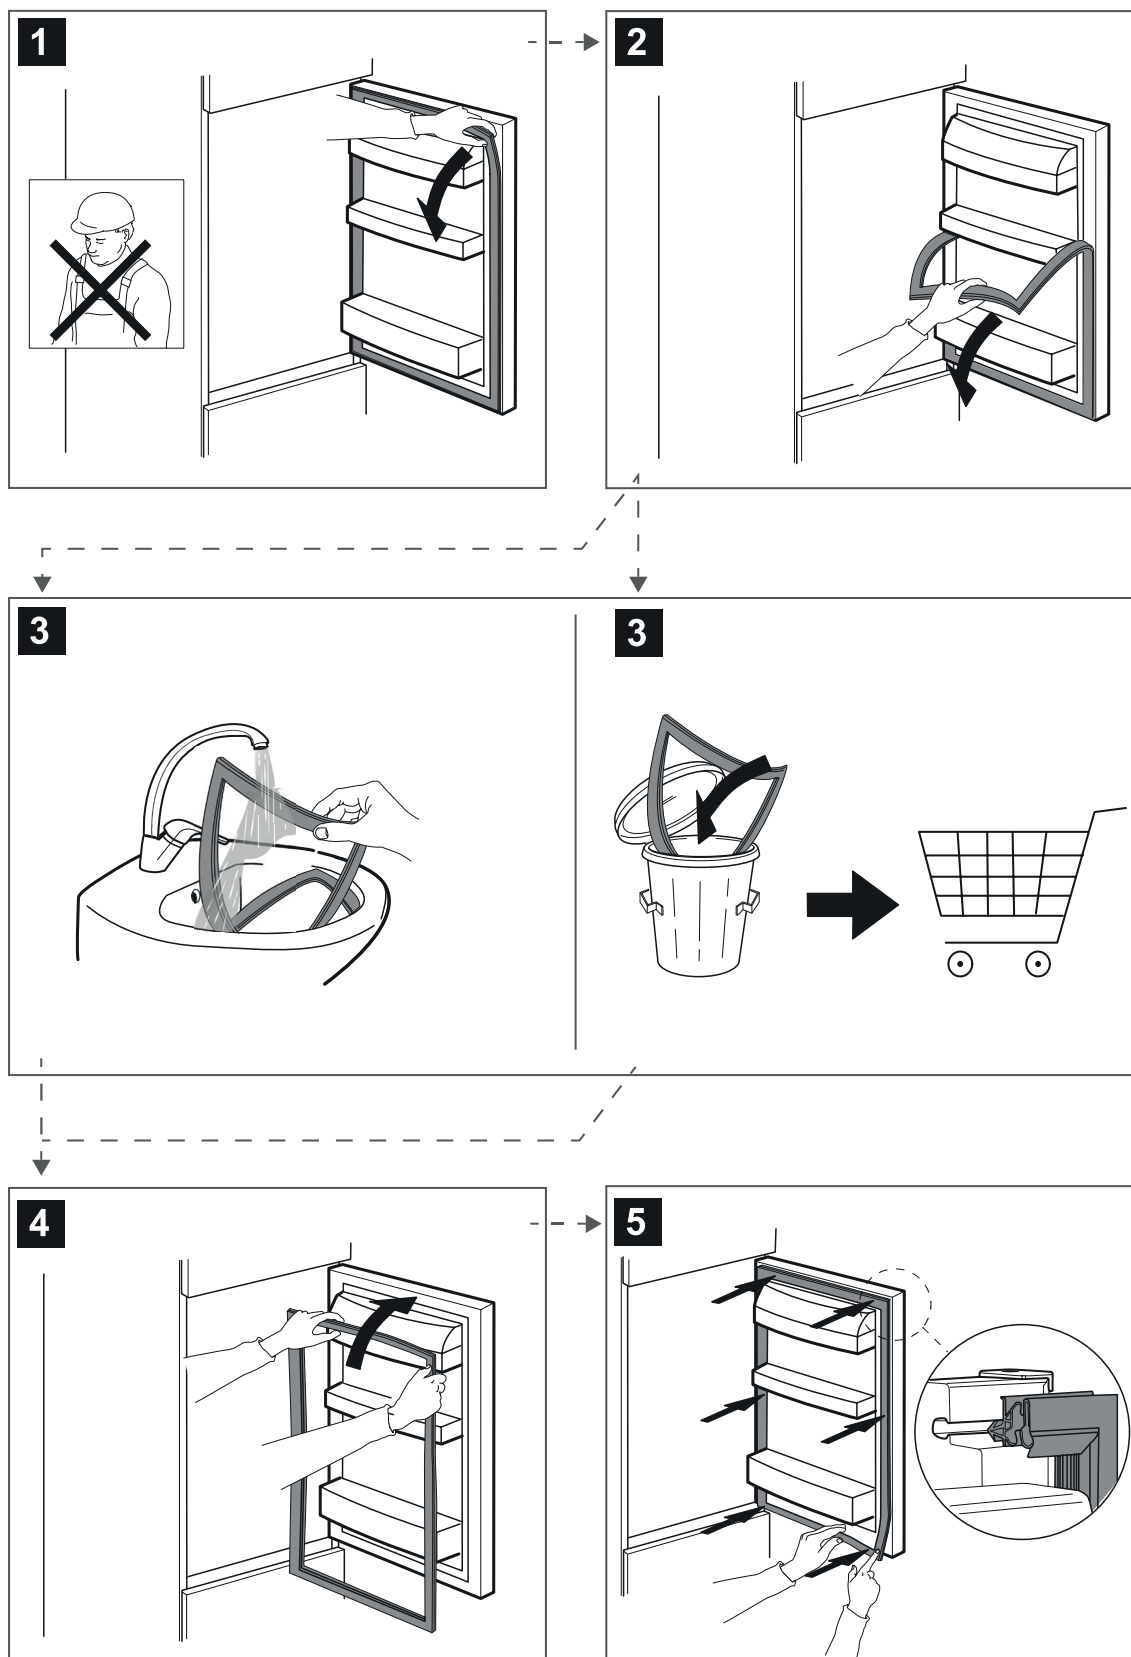

400020007968