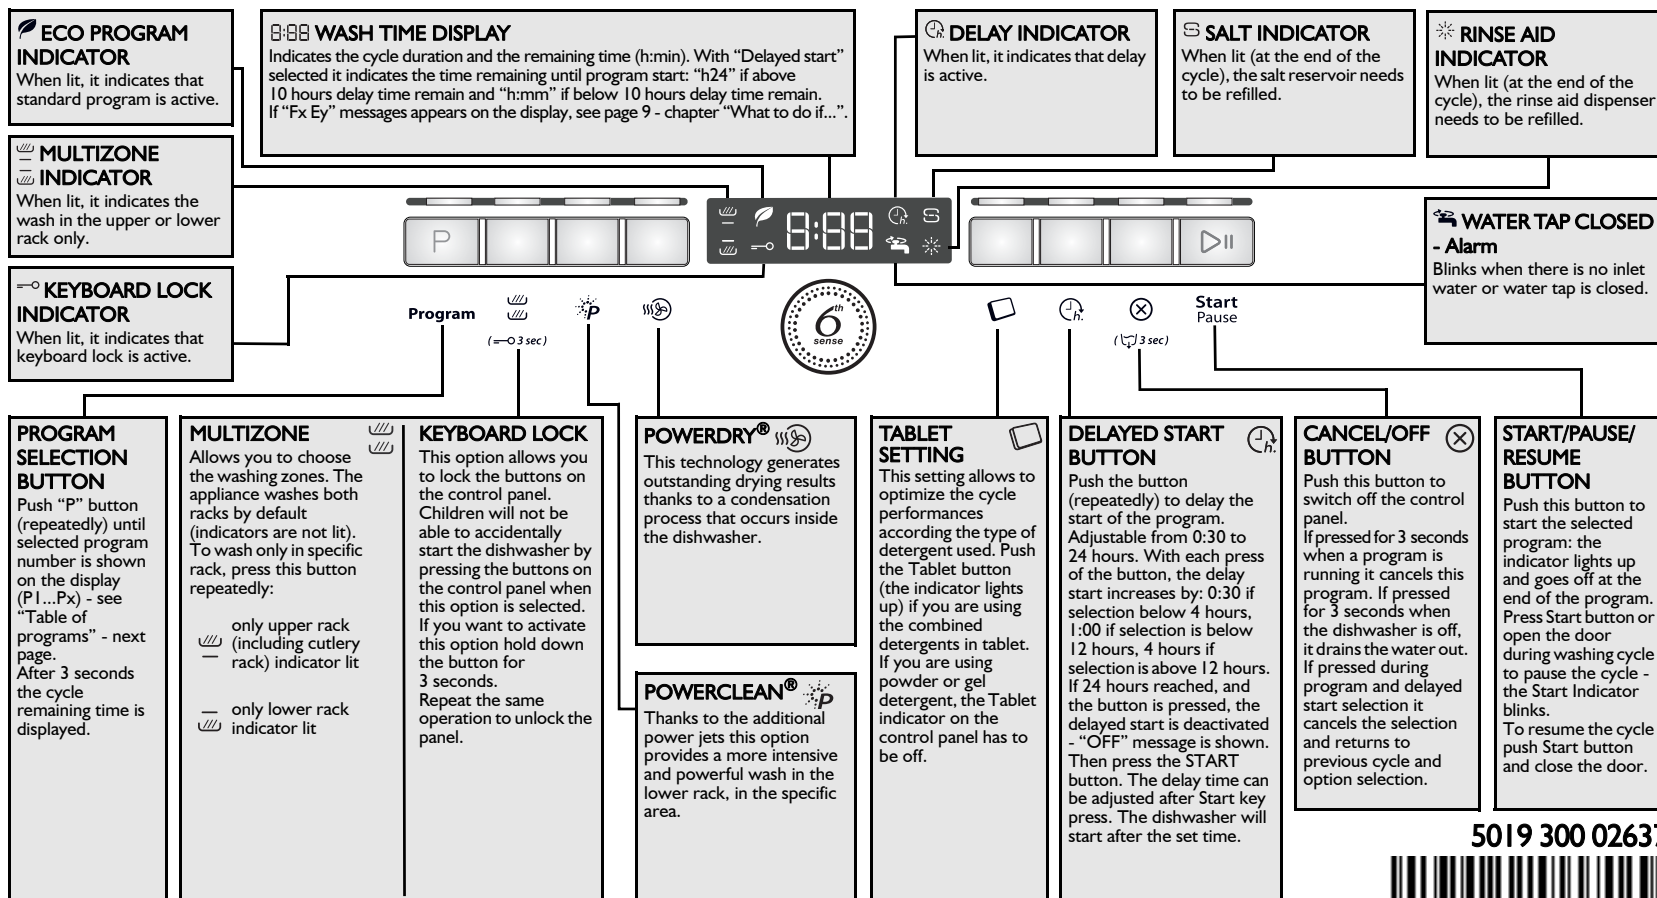












BEFORE USING THE APPLIANCE FOR THE FIRST TIME CAREFULLY READ THIS QUICK REFERENCE GUIDE AND THE ASSEMBLY INSTRUCTIONS!

   FOR ENERGY SAVING THE CONTROL PANEL DEACTIVATES AUTOMATICALLY AFTER 30 SECONDS IF NO CYCLE HAS STARTED.



5019 300 02637

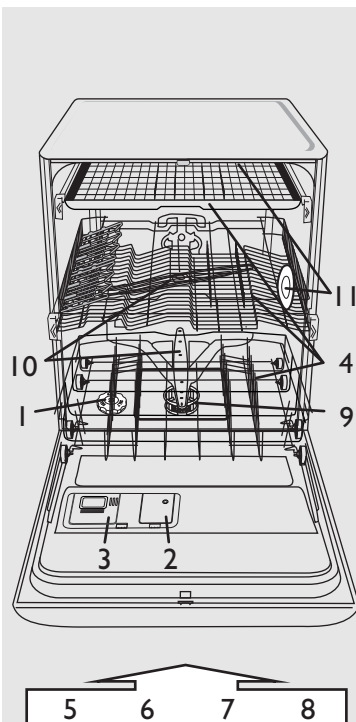


Table of programs					Deter- gent	Consumption			Drying Phase	
Programs			Available options	Loading instructions		Litres	kWh	Minutes ¹⁾		
P1		6th Sense® PowerClean®	40-70°C	Delay Multizone PowerClean® PowerDry®	Use for normal soiled dishes with dried-on food. Senses the level of soiling on the dishes and adjusts the program accordingly. When the sensor is detecting the soil level an animation appears in the display and the cycle duration is updated. The PowerClean® option is activated automatically with this program. To deactivate, press the PowerClean® button on the control panel.	X	7.5-13	0.95-1.45	85-165	Full
P2		Pre-Wash	cold	Delay Multizone	Crockery to be washed later.	—	4.0	0.01	14-16	NO
P3		Fragile	40°C	Delay Multizone PowerDry®	Lightly soiled crockery, for example glasses and cups.	X	10.5	0.85	105-114	Light
P4		Rapid	45°C	Delay Multizone	Lightly soiled crockery, with no dried-on food.	X	11.0	0.85	30-50	NO
P5		Eco ²⁾	50°C	Delay Multizone PowerClean® PowerDry®	Normally soiled crockery. Standard program the most efficient in terms of its combined energy and water consumption.	X	10.0	0.82	200	Full
P6		1 hour Wash & Dry	55°C	Delay Multizone Power Dry®	Light to normally soiled crockery. Suitable for non-dried and fresh soiling.	X	11.0	1.30	60	Full
P7		Daily	60°C	Delay Multizone PowerDry®	Normally soiled crockery.	X	11.0	1.15	80-90	Full
P8		Intensive	65°C	Delay Multizone PowerClean® PowerDry®	Recommended program for heavily soiled crockery, especially suitable for pans and saucepans.	X	15.0	1.60	145-155	Full
P9		Silent	50°C	Delay Multizone	Normally soiled crockery, gentle and quiet thanks to the lower spray pressure.	X	14.0	1.20	290-299	Light
P10		Steam		Delay Multizone PowerClean® PowerDry®	Program including steam action dedicated for heavily soiled crockery, pots and pans. Soaking or hand pretreatment is no longer needed.	X	14.5	1.75	165-175	Full

1) Program data obtained under normal conditions and with default options on. Data may vary depending on ambient conditions and used options. Differences of up to 20 minutes are possible with sensor programs as a result of the appliance's automatic calibration system.

2) Reference program for energy label in compliance with EN 50242 regulations. - Note for Testing Institutes: for detailed information on the EN/Standard loading comparison test and other tests, contact the following address: "contact@whirlpool.com".

Power consumption in: Left-on mode: 1.08 W / Off-mode: 0.40 W.



- 1- salt reservoir
2- rinse aid dispenser
3- detergent dispenser
4- racks system
5,6,7,8- available functions on the panel
9- filters
10- spray arms
11- Power Dry Technology



Water hardness should be set before the first wash or if water hardness has been changed



Water hardness level is factory set for medium-hard water (level 4).



Detergents



When powder or gel detergent is used, regeneration salt must be added and water hardness level must be set as indicated in the table on the right.



Also, when tablets which include salt functionality are used, regeneration salt still must be added.

- Press and hold together **Program** and buttons for minimum 3 seconds.
- The current water hardness setting will be visible on the display.
- Press the **Program** button to increase setting. Value range goes from 1 to 7 (when the level reaches 7, the next press of the start button will set the level back to 1).
- Wait 30 seconds (control panel switches off) or press **Start/Pause** button to save setting.

1. Ask your water supply company what the **water hardness** is...


German degrees °dH	French degrees °fH	English degrees °eH	Water hardness level
0 - 5	0 - 9	0 - 6.3	Soft
6 - 10	10 - 18	7 - 12.6	Medium
11 - 15	19 - 27	13.3 - 18.9	Average
16 - 21	28 - 37	19.6 - 25.9	Medium-hard
22 - 28	38 - 50	26.6 - 35	Hard
29 - 35	51 - 63	35.7 - 44.1	Very hard
36 - 50	64 - 90	44.8 - 62.4	Extremely hard

2. ...enter this value on your dishwasher


Insert value is shown in the display	Salt required
1	NO
2	YES
3	
4	
5	
6	
7	

Filling the salt reservoir - Dissolve limescale (not necessary if water hardness level is set to "soft 1")

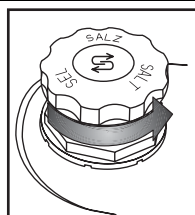
Daily check



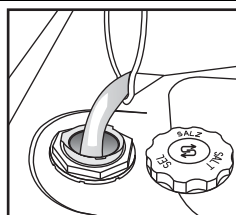
Visual indicator (depending on the model). Unscrew cap.



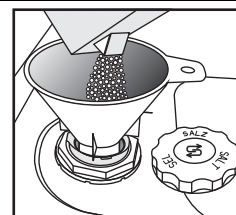Fill the salt reservoir with water before the first wash only.



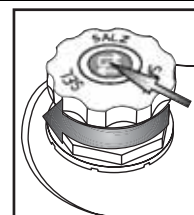Add salt (never add detergent!) min. 0.8 kg/max. 1 kg



Screw on the cap. Salt residual around the cap needs to be removed. Some salt reservoirs have a level indicator integrated in the cap (see below how to check).



Once regeneration salt is added, **immediately** start a wash program (the "Pre-wash" program alone is **not** sufficient). Residual saline solution or grains of salt can lead to deep-down corrosion, irreparably damaging the stainless steel components. The guarantee is not applicable if faults are caused by such circumstances.

(depending on the model)



The salt level indicator lamp may remain lit at the end of several wash cycles. If the water hardness is set to level 1 (soft), no salt is required and salt indicator lamp will remain off.

Salt indicator on the control panel



The indicator lamp lights up when SALT NEEDS TO BE ADDED.

Salt indicator on the salt reservoir cap



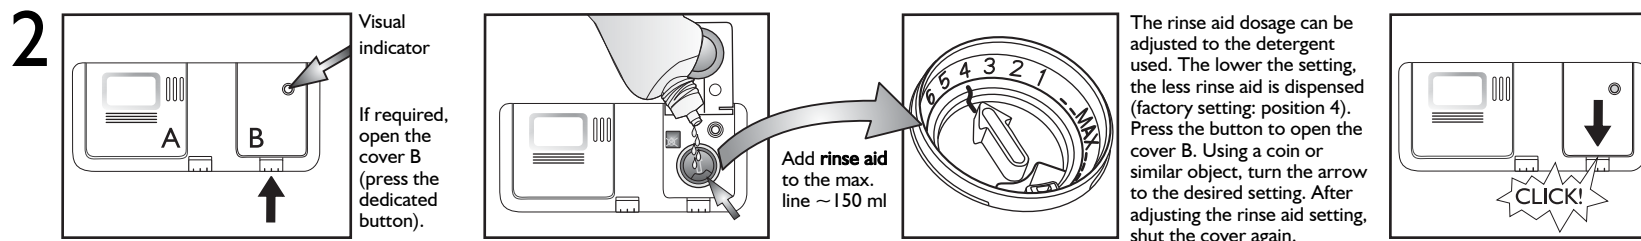
green: OK.



clear: NEEDS TO BE ADDED

Adding rinse aid (not necessary when you use tablets). How to adjust the rinse aid dosage regulator


Daily check





(depending on the model)	
<p>i Check the rinse aid indicator to check the level into the dispenser.</p>	<p>Rinse aid indicator on the control panel</p> <p>▶ The indicator lamp lights up when RINSE AID NEEDS TO BE ADDED.</p>
	<p>Rinse aid indicator on the dispenser</p> <p>▶ dark: OK. clear: NEEDS TO BE ADDED</p>
<p>! Only use rinse aids recommended for use in domestic dishwashers. Immediately wipe away any rinse aid spilt accidentally. This prevents the formation of excess suds which can cause a fault function of the appliance.</p>	
<p>i If there are streaks: reduce the dosage by turning the dial to a lower setting (1-3). If crockery is not perfectly dry: increase the dosage by turning the dial to a higher setting (5-6). Plastic dishes have more difficulty drying and a higher rinse aid setting will not improve the situation.</p>	
<p>i Detergents with rinse aid incorporated may be effective only with longer programs. In the case of shorter programs, detergent residue may be a problem (if necessary, use powder detergent). Detergents with rinse aid incorporated tend to form excess suds.</p>	

Adding detergent - Use only detergent specifically for dishwashers in accordance with the supplier's recommendations

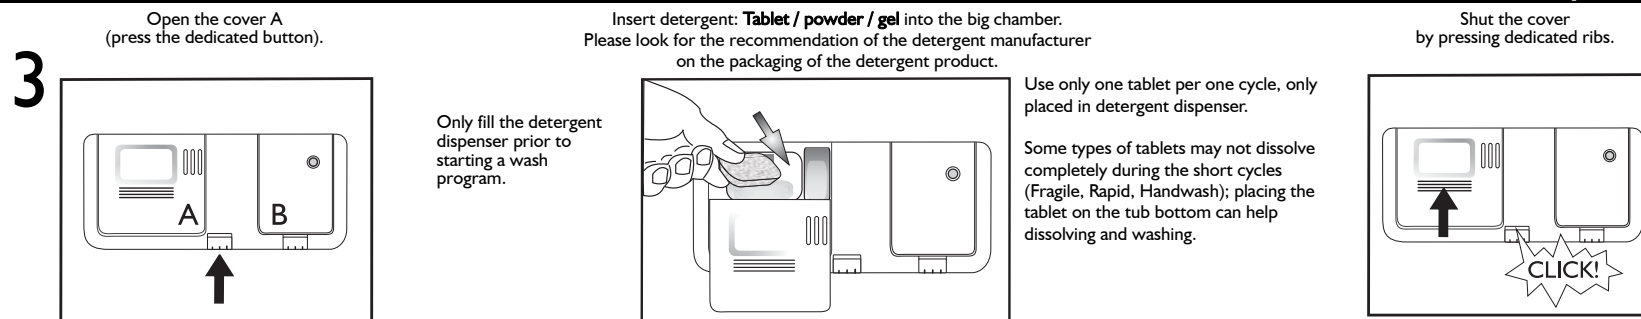Daily use




4

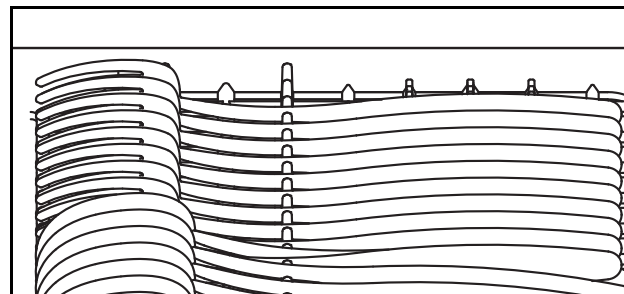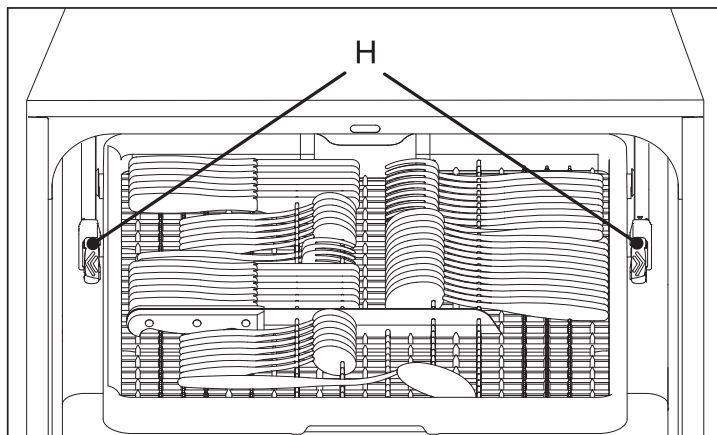


Long tools can be loaded in the frontal part of the rack
(if long tools do not fit in the cutlery rack they can be
placed on foldable flaps in upper rack).

How to remove cutlery rack (if available) - It could be useful to remove cutlery rack to load stem glasses in upper rack.

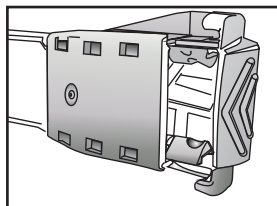- Open the two retainers (**H**) to take off the rack. When the cutlery rack is in place the retainers must always be closed.



H - CLOSED

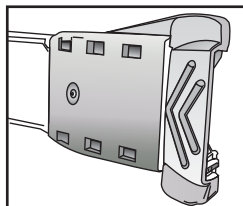



H - OPEN

4

In the upper rack you can load glasses, cups, bowls and, in the right side of the rack, you can load the dessert dishes.

Foldable flaps (A) when open help to load stemmed glasses, long utensils or coffee cups.

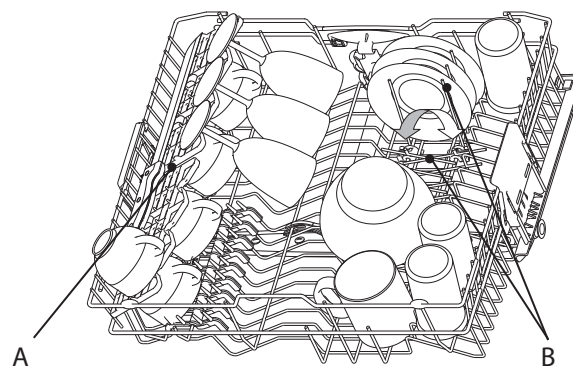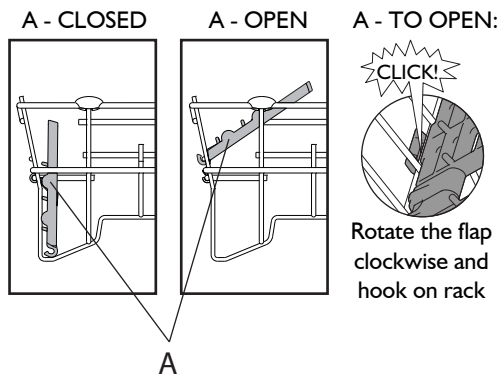
Plate holders (B) can be folded down to load bowls.



You can load dishes up to Ø 20 cm in the upper rack **ONLY** if the rack is in lower position (see below how to adjust the upper rack).


How to adjust upper rack height (if available) - it could be useful to lift up upper rack to have more space in lower rack bring it down to load long stem glasses.

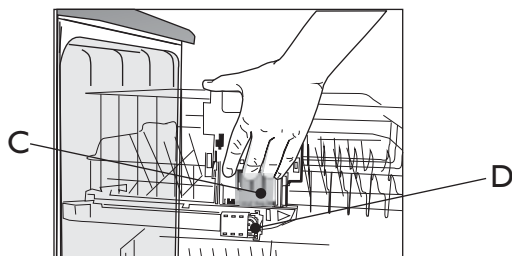- Grasp and take out the two lateral handles (C) (they must be on the same level) and lift up or take down the upper rack.




How to remove upper rack (if available) - It could be useful to remove upper rack to load bulky items in lower rack.

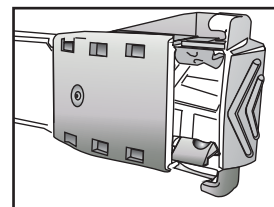- Open the two retainers (D) to take off the rack. When the upper rack is in place the retainers must always be closed.




D - CLOSED

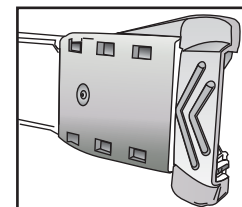


D - OPEN

4

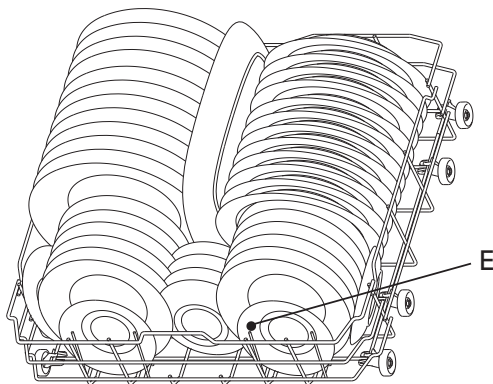
In the lower rack plates and pots can be loaded. **Vertical plate holders (E)** can be folded down to create more space to load pots.



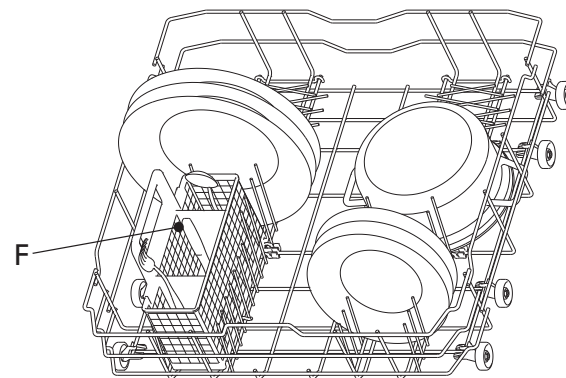When the “Half load/Multizone” option is selected the **cutlery basket - F** (provided in some models) can be placed in the lower rack.




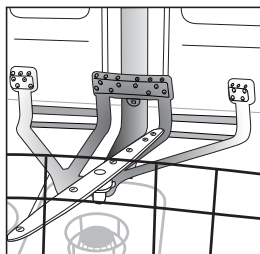PowerClean® uses the special water jets in the rear of cavity to wash more intensively the high dirty items.




How to use PowerClean®

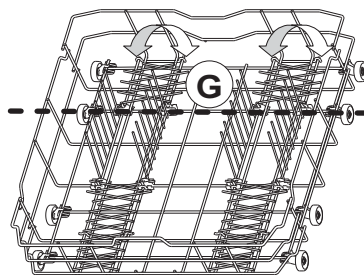1. Adjust the PowerClean® area (**G**) folding down the rear plate holders to load pots.



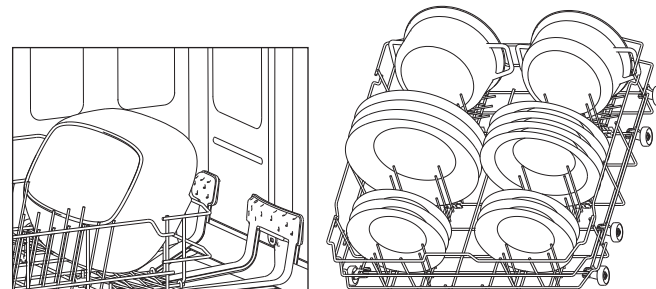2. Load pots and casseroles inclined vertically in PowerClean® area. **Pots have to be inclined towards the power water jets.**



Arrange crockery so that water does not collect in cavities, ensuring that the spray arms turn freely. Only use dishwasher-proof crockery and dishes. Do not use the dishwasher for washing wooden items, aluminium, tin, silver cutlery or decorated crockery (unglazed). In the baskets, dishes (e.g. plates, bowls, pots) must be placed in a correct way to let water flow down!

5

Switching on the appliance. Press any button to switch on the control panel and start programming.

Select program

6

Overview of programs

The max. possible number of programs is illustrated in the chapter "Chart". The corresponding programs for your appliance can be found on the panel (page 1).



Choose program according to the attached table of programs (page 2). Duration of the program depends on the external conditions in the apartment, temperature and pressure etc. For hygienic reasons it is recommended to run a high-temperature cycle (e.g. Intensive 65) at least once per month. It will help to keep the appliance clean, fully functional and avoid odours.

Wash cycle

7

The dishwasher door must be closed and the water tap open.

To pause the program (e.g. if you want to insert an item):

- Press **Start/Pause** button or open the door with caution (the program pauses) and insert the item/s, **(beware of HOT steam!)**.
- Close the door and press the **Start/Pause** button again to restart the cycle (the program resumes the cycle from where it was interrupted).

To Cancel the program on running:

- Press for 3 seconds the button.
- (Water drains for up to 1 minute then the appliance switches off.)

To change the program in progress:

- Press for 3 seconds the button to cancel the program on running.
- (Water drains for up to 1 minute then the appliance switches off.)
- Press any button to switch on the appliance.
- Select a new program.
- Press the **Start/Pause** button.

Switching off the appliance. Everything OK...

8

After the program is completed appliance turns into **Standby** mode automatically. All indicator lamps switch off.

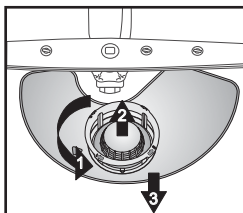
Exercise caution when opening the door: beware of hot steam.

Unload the appliance starting from the lower rack in order to avoid any residual drips of water falling onto crockery below.


Maintenance and care

9


Filters
Check and clean if necessary



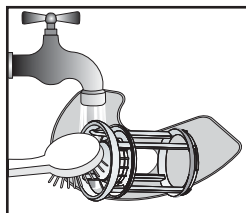Unscrew microfilter (1), remove it (2) and remove fine sieve (3)...




Rinse under running water...

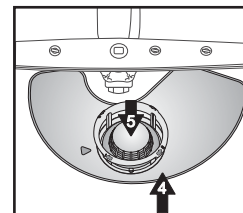

Insert

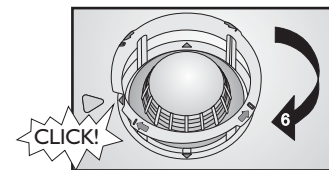
Screw on microfilter NOTE MARK!




Rectifying minor faults yourself...

10

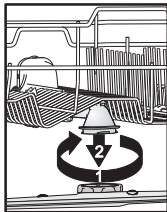
Spray arms
Remove blockages/deposits.



Unscrew and remove upper arm...

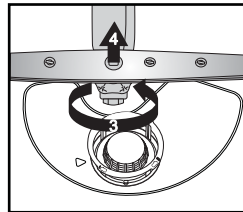


Unscrew and remove lower arm...

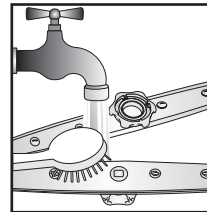



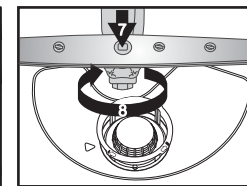Clean spray nozzles under running water (use toothpicks if necessary)...

Insert and screw on upper and lower arms tightly.






If a fault occurs, before contacting the After-sales Service, make the following checks to try and remedy the problem. Most faults can be remedied by taking the following courses of action, quickly restoring normal appliance operation.

The appliance...	Possible causes...	Solutions...
 salt indicator is lit	- Salt reservoir is empty. (After refill the salt indicator may remain lit at the end of the several wash cycles.)	- Refill reservoir with salt (for more information - see page 3). - Adjust water hardness - see table, page 3.
 rinse aid indicator is lit	- Rinse aid dispenser is empty.	- Refill dispenser with rinse aid (for more information - see page 4).
...is not working/will not start	- The appliance must be switched on. - The dishwasher door doesn't close. - "Delayed start" option is ON.	- Check the household circuit fuse if there is no power supply. - Check if the dishwasher's door is closed. - Check whether the "Delayed start" option (if available) has been selected. If it has, the appliance will only start once the set time has elapsed. If necessary, RESET the appliance by pressing CANCEL or start the cycle immediately by pressing START.
...shows "F6 E7" or "H2O" + Water Tap indicator	- Water tap closed. - Water pressure too low. - Bent water inlet hose or clogged inlet filters.	- The water tap must be open. - The water tap must be fully open during water inlet (minimum capacity: 0.5 litres per minute). - The water inlet hose must not be bent and the relative inlet filter in the water tap connector must not be dirty or clogged.
...shows "F6 E3"/wash program ended too early (dishes are dirty and wet)	- Dirty or clogged filters or spray arms. - Too little water in the dishwasher's water system. - Drain hose incorrectly fitted. - High level of foam inside.	- Clean the filters and spray arms. - Concave items (e.g. bowls, cups) must be arranged facing downwards in the rack. - The drain hose must be fitted correctly (for high mounted appliances, leave min. 200-400 mm from the lower edge of the appliance) - see Assembly instructions. - Repeat without detergent or wait until foam disappears.
...shows "F8 E1"	- Dirty filters. - Kinked drain hose. - Syphon hose connection closed.	- Clean the filters. - The drain hose must not be kinked. - The closure disk of the syphon hose connection must be removed.
...shows other fault display "Fx Ey"	- Appliance has technical defect.	- Call factory customer service (state fault display). Close the water tap.

After taking the above course of action, the fault message must be reset. In the majority of cases the fault is thus eliminated.

- RESET:**
- ➔ Press for 3 seconds the  button.
 - ➔ Close the door.
 - ➔ Water drains automatically for up to 1 minute.
 - ➔ The appliance is now ready to be restarted.

Crockery and cutlery...	Possible causes...	Solutions...
...are not perfectly clean/have food residues	- Too little space between dishes (incorrect arrangement of the concave items in the rack).	- Arrange crockery so that items do not touch each other. Concave items (e.g. bowls, cups) must be arranged facing downwards in the rack.
	- Too little detergent; detergent too old or incorrectly stored.	- If necessary, use more detergent, observing the manufacturer's indications as regards dosage. Always store detergent in a dry place and do not store it for excessively long periods of time.
	- Temperature not high enough for heavily soiled crockery.	- For heavily soiled crockery, select a wash program with a higher temperature (see Table of programs - chapter "Chart" - page 2).
	- Loading of the dishwasher using lower and upper rack at the same time with "Half load/Multizone" option.	- If you select the "Half load/Multizone" option (if available), remember to load only the upper rack or only the lower rack to increase washing power and thus obtain optimum wash results.
	- Clogged spray arms, dirty filters or not fitted correctly.	- The spray arms must not be clogged, the filters must not be dirty and must be fitted correctly (see page 8, "Maintenance and care").
	- Spray arms stuck impeded by crockery or cutlery.	- The spray arms must be able to turn freely and must not be impeded by crockery or cutlery.
...have deposits: regeneration salt residue	- Water too hard.	- In areas with very hard water, more regeneration salt needs to be added (see page 3, "How to set water hardness").
	- Salt reservoir cap open.	- Close the salt reservoir cap properly.
	- Not enough rinse aid.	- If you use a combined action detergent, try adding more rinse aid.
...are not dry	- Plastic containers dry badly.	- Synthetic materials do not dry well; if wet at end of cycle, wipe dry.
	- Clean dishes left in dishwasher for a long time after end of cycle (e.g. when using "Delayed start" option).	- In this situation, the presence of drops of water on dishes and on the sides of the dishwasher is normal. Try releasing the door 5 minutes before removing the dishes.
	- Incorrect arrangement of the concave items in the rack.	- Arrange crockery so that water does not collect in cavities.
	- Incorrect dosage the rinse aid.	- Increase the dosage of rinse aid (see page 4, "Adding rinse aid").
	- Rapid program selected.	- The Rapid program 40°C / 45°C is intended for quickly washing lightly soiled dishes. If used for a full load of medium/heavy soiled dishes, the dishes may not dry completely. If so, select a standard-length program. For best results, open the door after the end of the program and wait 15 minutes before unloading the dishwasher.

Crockery and cutlery...	Possible causes...	Solutions...
...have discoloured plastic parts	- Tomato/Carrot juice.	- Tomato sauce, for example, can lead to discolouring of plastic parts. Powder detergent is recommended as it allows slightly higher doses to be used for improved whitening. Programs with higher wash temperatures should be used.
...opaque glasses, etc.	- Dishes unsuitable for washing in dishwashers (porcelain).	- Only use dishwasher-proof crockery and dishes.
...removable deposits on glasses	- Usage of incorrect programs for glasses.	- Dishes should be put together, to avoid touching each other. Do not put glassware together in baskets. Use suitable program for glass.
...glasses not sparkling	- Glasses unsuitable for washing in dishwashers (porcelain).	- Some kinds of glass cannot be washed in the dishwasher.
...permanent deposits on glasses	- Rainbow effect.	- This phenomenon is irreversible. We recommend in future: <ul style="list-style-type: none"> - Change the control of system of dosage of softener. - Be careful – follow recommended detergent dosage. - For combined action tablets see detergent producer's recommendations.
...tea cups darken and dirt does not disappear after washing in dishwasher	- Theine present in black tea.	- In case of tea stains, to enhance bleaching add one teaspoon of baking soda together with detergent into detergent dispenser.
...rust marks	- Pre-wash program not used.	- Salty or acidic food residues can cause rust marks even on stainless steel cutlery. To avoid this, always use the Pre-wash program if the dishes are to be washed later.
...other marks	- Rinse aid dosage too low.	- In the presence of marks, increase the rinse aid dosage (see page 4, "Adding rinse aid"). - If you use a combined action detergent, try adding more rinse aid.
...streaks	- Rinse aid dosage too high.	- In the presence of streaks, reduce the rinse aid dosage (see page 4, "Adding rinse aid"). - If you use a combined action detergent which includes rinse aid, do not add any additional rinse aid.
...suds	- Unsuitable dosage of detergent/rinse aid.	- Only use the amount of detergent/rinse aid required, since excessive amounts can lead to excess suds.


If, after carrying out the above checks, the fault persists, disconnect the mains plug and turn off the water tap. Contact the After-sales Service (see warranty).

Before contacting our After-Sales Service, take note of the following:

- the description of the fault,
- the appliance type and model,
- the service code (the number indicated on the adhesive rating plate) inside the door on the right-hand side:



1. Packing

The packaging materials are 100% recyclable and marked with the recycling symbol .

2. Removing the packaging and inspecting the contents

After unpacking, make sure that the dishwasher is undamaged and that the door closes correctly. If in doubt, contact a qualified technician or your local retailer.

3. Before using the dishwasher for the first time

- The appliance is designed to operate with a minimum ambient temperature of 5°C.
- This dishwasher has been tested by the manufacturer to ensure it functions correctly. Such testing may leave slight drips/water marks which will disappear with the first wash.

4. Energy and water savings

- Do not rinse crockery under running water.
- Always fully load the dishwasher before running it or select the "Half load/Multizone" option (if available).
- If ecological energy sources are available such as solar panel heating, heat pumps or centralised heating systems, the appliance may be connected to the hot water mains up to a maximum temperature of 60°C. Make sure the water inlet hose is of the correct type ("70°C Max" or "90°C Max").

5. Child safety

- Keep the packaging materials out of the reach of children.
- Children must not be allowed to play with the dishwasher.
- Store the detergent, rinse aid and salt out of the reach of children.

6. Safety warnings

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Do not operate the appliance in the open air.
- Do not store flammable materials in close proximity to the dishwasher.
- The water in the dishwasher is not potable.
- Do not use solvents inside the dishwasher: **risk of explosion!**
- Be careful when the door is open: **risk of tripping!**
- The open dishwasher door can only support the weight of the loaded rack when pulled out. Do not rest objects on the open door or sit or stand on it.
- Sharp items that might cause injury (e.g. knives), must be placed in the cutlery basket with the sharp end facing downwards. Long-handled utensils must be arranged horizontally in the upper rack, with the sharp end facing away from the front of the appliance.

- Before cleaning or carrying out maintenance, disconnect the mains plug and turn off the water tap; also in the event of any malfunction.
- Repairs and technical modifications must be carried out exclusively by a qualified technician.

7. Resistance to frost


If the appliance is placed in surroundings exposed to the risk of frost, it must be drained completely. Turn off the water tap, remove the inlet and outlet hoses, and let all the water drain away. Make sure there is at least 1 kg of dissolved regeneration salt in the salt container, to protect the appliance from temperatures of up to -20°C. When the program resumes, an error message may be indicated (see page 9).

"F6 E2" - the appliance must remain at an ambient temperature of min. 5°C for at least 24 hours.

After eliminating these faults, RESET the appliance (see chapter "What to do if...").

8. Disposal

- The appliance is manufactured using recyclable materials. If you decide to scrap the dishwasher, it must be disposed of in compliance with local waste disposal regulations. Make it unusable by cutting off the power cord. To prevent situations of potential danger to children (e.g. danger of suffocation), break the lock of the door so that it can no longer be closed.
- This appliance is marked according to the European directive 2002/96/CE on Waste Electrical and Electronic Equipment (WEEE). By ensuring that this appliance is scrapped suitably, you can help prevent potentially damaging consequences for the environment and health. Unsuitable disposal of an appliance of this type as household

waste could have detrimental effects on the environment. The symbol  on the appliance, or on documentation enclosed with the appliance, indicates that this product must not be treated as household waste, but must be delivered to the nearest collection centre for the recycling of electrical and electronic appliances. Disposal must be carried out in accordance with local environmental regulations for waste disposal. For further information on the treatment, recovery and recycling of this appliance, contact your competent local authority, the collection service for household waste or the shop where you purchased the appliance.

EC Declaration of conformity

This appliance has been designed, constructed and distributed in compliance with the safety requirements of EC Directives:  2006/95/CE, 89/336/CE, 93/68/CE and 2002/95/CE (RoHS Directive).

Loading Capacity: 13 place settings.

The guarantee is not applicable if faults are caused by incorrect use of the appliance.