

## THANK YOU FOR PURCHASING A HOTPOINT PRODUCT.

To receive more comprehensive assistance, register the appliance on [www.hotpoint.eu/register](http://www.hotpoint.eu/register)




## Before using the appliance carefully read the Health and Safety guide.

Before using the machine, it is imperative that the transport bolts are removed. For more detailed instructions on how to remove them, see the Installation Guide.

## CONTROL PANEL

1. ON/OFF button
2. DRYING LEVEL button
3. DRY ONLY button
4. MULTI RINSE button
5. STEAM HYGIENE button
6. ACTIVE CARE button
7. START/PAUSE button and indicator light
8. KEY LOCK button
9. DELAY TIMER button
10. SPIN button
11. TEMPERATURE button
12. AUTO CLEAN button
13. WASH CYCLE SELECTOR KNOB

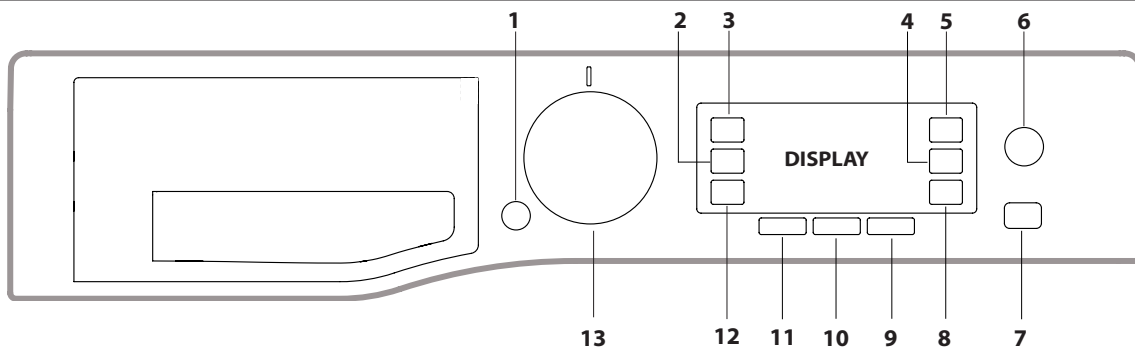

## WASH CYCLE TABLE

Maximum washing load 8 kg. Maximum drying load 6 kg.  
Power input in off mode 0.5 W / in left-on mode 8 W

| Wash cycle                          | Temperature |               | Max. spin speed (rpm) | Max. load for washing (kg) | Duration (h : m) | Drying | Max. load for drying (kg) | Detergents and Additives |                 | Recommended detergent |        | Residual dampness % (****) | Energy consumption kWh | Total water lt | Laundry temperature °C |
|-------------------------------------|-------------|---------------|-----------------------|----------------------------|------------------|--------|---------------------------|--------------------------|-----------------|-----------------------|--------|----------------------------|------------------------|----------------|------------------------|
|                                     | Setting     | Range         |                       |                            |                  |        |                           | Wash                     | Fabric softener | Powder                | Liquid |                            |                        |                |                        |
| Wash & Dry Mixed                    | 30 °C       | ❄ - 30 °C     | 1200                  | 3.0                        | **               | ✓      | 3.0                       | ●                        | ○               | -                     | ✓      | -                          | -                      | -              | -                      |
| Wash & Dry XL Bed & Bath            | 60 °C       | ❄ - 60 °C     | 1400                  | 5.0                        | **               | ✓      | 5.0                       | ●                        | ○               | -                     | ✓      | -                          | -                      | -              | -                      |
| Cotton (2)                          | 40 °C       | ❄ - 60 °C     | 1400                  | 8.0                        | 3:55             | ✓      | 6.0                       | ●                        | ○               | ✓                     | ✓      | 49                         | 1.400                  | 105            | 45                     |
| Synthetics (3)                      | 40 °C       | ❄ - 60 °C     | 1200                  | 4.0                        | 2:55             | ✓      | 4.0                       | ●                        | ○               | ✓                     | ✓      | 35                         | 0.800                  | 55             | 43                     |
| Wool                                | 40 °C       | ❄ - 40 °C     | 800                   | 2.0                        | **               | ✓      | 2.0                       | ●                        | ○               | -                     | ✓      | -                          | -                      | -              | -                      |
| Delicates                           | 30 °C       | ❄ - 30 °C     | 600 (****)            | 1.0                        | **               | ✓      | 1.0                       | ●                        | ○               | -                     | ✓      | -                          | -                      | -              | -                      |
| Anti Allergy                        | 60 °C       | 40 °C - 60 °C | 1400                  | 5.0                        | **               | ✓      | 5.0                       | ●                        | ○               | ✓                     | ✓      | -                          | -                      | -              | -                      |
| Anti Stain                          | 20 °C       | ❄ - 20 °C     | 1400                  | 8.0                        | **               | ✓      | 6.0                       | ●                        | ○               | -                     | ✓      | -                          | -                      | -              | -                      |
| Steam Refresh                       | -           | -             | -                     | 2.0                        | **               | -      | -                         | -                        | -               | -                     | -      | -                          | -                      | -              | -                      |
| Spin & Drain *                      | -           | -             | 1400                  | 8.0                        | **               | ✓      | 6.0                       | -                        | -               | -                     | -      | -                          | -                      | -              | -                      |
| Rinse & Spin                        | -           | -             | 1400                  | 8.0                        | **               | ✓      | 6.0                       | -                        | ○               | -                     | -      | -                          | -                      | -              | -                      |
| Wash 20 °C                          | 20 °C       | ❄ - 20 °C     | 1400                  | 8.0                        | 1:50             | -      | -                         | ●                        | ○               | -                     | ✓      | 49                         | 0.160                  | 90             | 22                     |
| Eco 40-60 (1) (Wash)                | 40 °C       | 40 °C         | 1351                  | 8.0                        | 3:38             | ✓      | 6.0                       | ●                        | ○               | ✓                     | ✓      | 53                         | 0.585                  | 61             | 30                     |
|                                     |             |               | 1351                  | 4.0                        | 2:48             | ✓      |                           | ●                        | ○               | ✓                     | ✓      | 53                         | 0.335                  | 45             | 26                     |
|                                     |             |               | 1351                  | 2.0                        | 2:20             | ✓      |                           | ●                        | ○               | ✓                     | ✓      | 53                         | 0.187                  | 35             | 23                     |
| Intense 60-90 °C                    | 60 °C       | ❄ - 90 °C     | 1400                  | 8.0                        | 2:45             | ✓      | 6.0                       | ●                        | ○               | ✓                     | ✓      | 49                         | 0.900                  | 90             | 55                     |
| Rapid Wash                          | 30 °C       | ❄ - 30 °C     | 1200 (****)           | 4.5                        | 0:30             | -      | -                         | ●                        | ○               | -                     | ✓      | 71                         | 0.200                  | 45             | 27                     |
| Wash & Dry XS Rapid                 | 30 °C       | 30 °C         | 1400                  | 1.0                        | **               | ✓      | 1.0                       | ●                        | ○               | -                     | ✓      | -                          | -                      | -              | -                      |
| ● Required dosage ○ Optional dosage |             |               |                       |                            |                  |        |                           |                          |                 |                       |        |                            |                        |                |                        |
| Eco 40-60 (4) (Wash & Dry)          | 40 °C       | 40 °C         | 1351                  | 6.0                        | 10:15            | ✓      | 6.0                       | ●                        | ○               | ✓                     | ✓      | 0                          | 3.174                  | 55             | 24                     |
|                                     |             |               | 1351                  | 3.0                        | 5:55             | ✓      | 3.0                       | ●                        | ○               | ✓                     | ✓      | 0                          | 1.560                  | 37             | 22                     |

The cycle duration indicated on the display or instruction manual is an estimate based on standard conditions. The actual duration may vary in relation to several factors, such as the temperature and pressure of the incoming water, ambient temperature, amount of detergent, load quantity and type, load balancing and any additional options selected. The values given for programmes other than the Eco 40-60 programme are indicative only.

**1) Eco 40-60 (Wash) - Test wash cycle in compliance with EU Ecodesign regulation 2019/2014.** The most efficient programme in terms of energy and water consumption for washing normally soiled cotton laundry.

**Note:** spin speed values shown on the display can slightly differs from the values stated in the table.

**4) Eco 40-60 (Wash & Dry) - Test wash and drying cycle in compliance with EU Ecodesign regulation 2019/2014.** To access "wash and dry" cycle select "Eco 40-60" wash programme and set "Drying level" to "Cupboard". The most efficient programme in terms of energy and water consumption for washing and drying normally soiled cotton laundry. At the end of cycle the garments can be immediately stored to the cupboard.

## For all testing institutes:

2) Long cotton cycle: set programme COTTON at temperature 40 °C.

3) Long synthetics cycle: set cycle SYNTHETICS at a temperature of 40 °C.

\* By selecting the cycle and excluding the spin cycle, the washer-dryer will drain only.


\*\* The duration of the wash cycles can be checked on the display.

\*\*\* After programme end and spinning with maximum selectable spin speed, in default programme setting.

\*\*\*\* The display will show the suggested spin speed as default value.

## PRODUCT DESCRIPTION

1. Top
2. Detergent dispenser drawer
3. Control panel
4. Handle
5. Porthole door
6. Drain pump (behind the plinth)
7. Plinth (removable)
8. Adjustable feet (2)

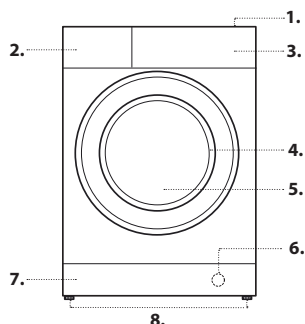

## DETERGENT DISPENSER DRAWER

## Compartment \*:

Do not insert detergent in this compartment.

## Compartment 1: Washing detergent (powder or liquid)

If liquid detergent is used, the removable plastic partition **A** (supplied) should be used for proper dosage.


If powder detergent is used, place the partition into slot **B**.

## Compartment 2: Additives (fabric softeners, etc.)

The fabric softener must not exceed the "MAX" level.

! Use powder detergent for white cotton garments, for pre-washing, and for washing at temperatures over 60 °C.

! Follow the instructions given on the detergent packaging.

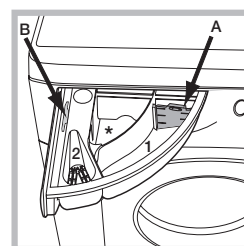

## WASH CYCLES

Follow the instructions on the symbols of the garment's wash care label. The value indicated in the symbol is the maximum recommended temperature for washing the garment.



### Wash & Dry Mixed

Use this cycle to wash and dry mixed garments (cotton and synthetics) in less than 4 hours. This cycle may be used to wash and dry loads of up to half of the machine drying capacity; we recommend the use of liquid detergent.

### Wash & Dry XL Bed & Bath

This cycle is suitable for washing and drying without interruption cotton bulky items, like bed linens and towels, with the possibility to fully load the machine; we recommend using liquid detergent.

### Cotton

Suitable for washing towels, underwear, table cloths, etc. made of resistant linen and cotton that are moderately to heavily soiled.

### Synthetics

Specific for synthetic items (e.g. polyester, polyacrylic, viscose, etc.). If the dirt is difficult to remove, the temperature can be increased up to 60° and powder detergent can be used too.

### Wool - Wool Care

The wool wash cycle of this machine has been approved by The Woolmark Company for the washing of machine washable wool products provided that the products are washed according to the instructions on the garment label and those issued by the manufacturer of this washing machine. The Woolmark symbol is a Certification mark in many countries. (M2227)



### Delicates

For washing very delicate garments. For best results, turn the garments inside out and use liquid detergent. If a time-based drying option is added, a particularly delicate drying cycle is performed at the end of the wash cycle, thanks to light handling and appropriate temperature control of the water jet. The recommended durations are:

1 kg of synthetic garments --> 165 min

1 kg of synthetic and cotton garments --> 180 min

1 kg of cotton garments --> 180 min

The degree of dryness depends on the load and fabric composition.

### Anti Allergy

Suitable for removing major allergens such as pollen, mites and cat or dog hair.

### Anti Stain

This program ensures stain removal at low temperatures, preserving fabrics and colours. It is suitable to heavily-soiled garments with resistant colours. When running the program, do not mix garments of different colours. We recommend the use of powder detergent.

### Steam Refresh

This programme refreshes garments by removing bad odours and relaxing the fibres and it is meant for dry, unsoiled items.

Insert dry items only (that are not dirty) and select programme "Steam Refresh". The garments will be damp once the cycle is completed, so we recommend hanging them to dry (2 kg, roughly 3 items).

The "Steam Refresh" programme makes ironing easier.

! Do not add softeners or detergents.

! Not recommended for wool or silk garments.

### Spin & Drain

Spins the load then empties the water. For resilient garments. If you exclude the spin cycle, the machine will drain only.

### Rinse & Spin

Rinses and then spins. For resilient garments.

### Wash 20°C

For washing lightly soiled cotton garments, at a temperature of 20 °C.

### Eco 40-60

For washing normally soiled cotton garments declared to be washable at 40 °C or 60 °C, together in the same cycle. This is the standard cotton programme and the most efficient in terms of water and energy consumption.

! The cycle runs only at 40°C as per regulation.

### Intense 60-90°C

For heavily soiled whites and resistant colours.

### Rapid Wash


For washing lightly soiled garments in a short time. Not suitable for wool, silk and garments to be washed by hand.

### Wash & Dry XS Rapid

This cycle is to wash and dry without interruption small garments or T-shirts in different fabrics and colours up to 1kg in 45'. To achieve optimum results, use liquid detergent.

## DISPLAY

The display is useful when programming the machine and provides a great deal of information.

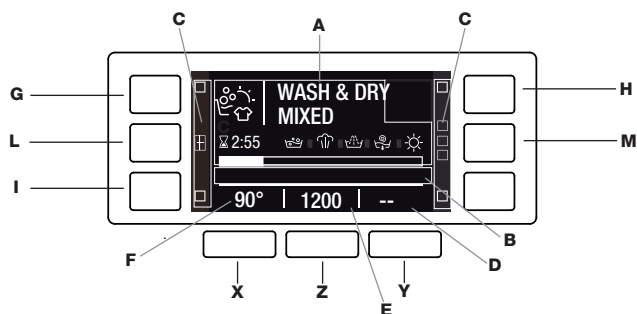

Area **A**: here will appear the icon and programme selected, the washing and drying phases and time remaining to the end of the cycle. Area **B**: shows the the two modes relative to the ACTIVE CARE option. Area **C**: shows the indicator lights relative to the available functions. Area **D**: displays the time remaining to the start of the selected cycle if the Delay Timer option was set.

Area **E**: will display the maximum available spin speed on the basis of the set cycle; if the cycle does not include the spin cycle setting, the dimly lit "—" symbol will appear in the area.

Area **F**: will show the temperature value that can be selected on the basis of the set cycle; if the cycle does not include setting of the temperature, the dimly lit "—" symbol will appear in the area.

**SELECT LANGUAGE**: the first time the machine is switched on, you will be asked to select the language and the display will automatically show the language selection menu.

To select the desired language press the **X** and **Y** buttons; to confirm the selection press the **Z** button.

To change the language switch off the machine and press buttons **G**, **H**, **I** simultaneously until an alarm is heard: the language-selection menu will be displayed again.

**DISPLAY BRIGHTNESS**: to change the display luminosity, which by default is set to the highest value, switch the machine off then simultaneously press buttons **G**, **L** and **M** until the buzzer sounds. Press buttons **X** and **Y** to choose the desired level of luminosity then confirm by pressing button **Z**.

! During the wash cycle or when the Delay Timer option has been enabled, if the user does not interact with the display for 1 minute the SCREEN SAVER activates. To return to the previous window, simply press any button.

## LOCKED DOOR INDICATOR

When lit, the symbol indicates that the door is locked. To prevent any damage, wait until the symbol turns off before attempting to open the door. To open the door while a cycle is in progress, press the START/PAUSE button ; if the symbol is off, the door can be opened.

## FIRST-TIME USE

Once the appliance has been installed, and before it is used for the first time, run a wash cycle with detergent and no laundry, by setting the "Auto Clean" cycle.

## DAILY USE

Prepare the laundry by following the suggestions appearing under the "TIPS AND SUGGESTIONS" section.

- Press the ON/OFF button ; "HOTPOINT" will appear on the display; the indicator light relative to the START/PAUSE button will flash slowly.

- Open the door. Load the laundry while making sure not to exceed the maximum load quantity indicated in the wash cycle table.

- Pull out the detergent dispenser drawer and pour the detergent into the relevant compartments, as described in the "DETERGENT DISPENSER DRAWER" section.

- Close the door.

- Use the WASH CYCLE selector knob to select the desired wash cycle: the cycle's name will appear on the display; the cycle will be associated with a specific temperature and spin speed which can be modified. The duration of the cycle will appear on the display.

- Modify the temperature and/or spin speed: the machine automatically selects the maximum temperature and spin speed set for the selected wash cycle; these values cannot therefore be increased. Pressing the button gradually reduces the temperature down to the cold wash setting (the "—" symbol will appear on the display). Pressing the button gradually reduces the spin speed until it is completely excluded (the "—" symbol will appear on the display). Pressing the buttons further restores the maximum allowed values for the selected cycle.

- Select the desired options.

### STARTING CYCLE

Press the START/PAUSE button.

The machine will lock the door ( symbol on) and the drum will start to rotate; the door will be unlocked ( symbol off) and then locked again ( symbol on) as preparation phase of each washing cycle. The "Clicking" noise is part of the door locking mechanism. Water will enter the drum and start the washing phase once the door is locked.

## PAUSING A CYCLE

To pause the wash cycle, press the START/PAUSE button again; the indicator light will flash. To start the wash cycle from the point at which it was interrupted, press the START/PAUSE button again.

## CHANGING A RUNNING WASH CYCLE

To change a wash cycle while it is in progress, pause the washing machine using the START/PAUSE button (the relative indicator light will flash), then select the desired cycle and press the START/PAUSE button again.

! To cancel a cycle that has already begun, press and hold the ON/OFF button. The cycle will be stopped and the machine will switch off.

## AT THE END OF THE WASH CYCLE

This will be indicated by the word "CYCLE END" on the display; when the symbol switches off, the door may be opened. Open the door and switch off the machine. If you do not press ON/OFF button, the washing machine will switch off automatically after about a 10 minutes. Close the water tap and unload the washing machine. Leave the door ajar to allow the drum to dry.

## OPTIONS

- If the selected function is incompatible with the set wash cycle, the relevant indicator light will appear dimly lit; the incompatibility will also be signalled by a buzzer (3 beeps) and the wording "This action is not allowed" will appear on the display.

- If the selected function is incompatible with another previously set function, the wording "This action is not allowed" will appear on the display and the function will not be enabled.



### Steam Hygiene

The washing performance is enhanced by the generation of steam at the end of the wash cycle that removes up to 99,9% of viruses and bacteria\*, without the use of sanitizing additives.

! The steam generated during the operation of the washer-dryer may cause the porthole door to become hazy.

\*Independently tested by Intertek on Rodent Protovirus type 1, a representative virus, and for bacteria by Allergy UK on Cotton 60°C program with Steam Hygiene option activated.



### Multi Rinse

This option allows for selecting the desired rinse type to protect sensitive skin. Press the button once to set level “**Extra +1**”, which allows for selecting an additional rinse to the standard cycle rinses and removing all traces of detergent. Press the button again to set level “**Extra +2**”, which allows for selecting two additional rinses to the standard cycle rinses; this cycle is recommended for very sensitive skin. When the button is pressed for the third time, the “**Extra +3**” level is set, which allows for selecting 3 additional rinses to the standard cycle rinses. When started with cycles at a temperature of 40°C, this option makes it possible to remove major allergens such as pollen and cat or dog hair. With cycles running at temperatures higher than 40°C, an excellent level of anti-allergy protection is achieved. Press the button again to return to the “**Normal Rinse**” mode. If the current mode cannot be set nor changed, the display will show “**This action is not allowed**”.



### Delay Timer

To set a delayed start for the selected cycle, press the corresponding button repeatedly until the desired delay period is reached. To remove the delayed start setting, press the button until “-- **h**” appears on the display.



### Temperature

Each wash cycle has a pre-defined temperature. To modify the temperature, press the °C button. The value will appear on the display.



### Spin

Each wash cycle has a pre-defined spin speed. To modify the spin speed, press the button. The value will appear on the display.



### Active Care

The washer dryer is equipped with the innovative technology “Active Care” which can be activated on 2 modes:

- When Active Care is on “**Wash**” mode, water and detergent are pre-mixed, thus immediately activating the detergent’s cleaning ingredients. This active emulsion is directly introduced into the washer dryer drum and penetrates the fibres more effectively to clean stubborn dirt at low temperatures, while fully preserving the colours and fabrics.

- When Active Care is on “**Wash+Dry**” mode, in addition to the benefit of the “Wash” mode, the Active Care technology sets the right drying temperature to ensure impeccable drying results.

! Please note that in “**Wash+Dry**” mode the drying phase is automatically activated and will start immediately after the washing phase without interruption.

The cycles compatible with Active Care are: Cotton, Synthetics, Anti

Allergy, Anti Stain and Intense 60-90°C

! The option modifies the cycle duration.



### Drying level

The “Drying level” button adds a drying phase that will start automatically at the end of the washing phase, without interruption. The machine will select the maximum drying level which is compatible with the chosen wash cycle. It is possible to change the drying setting by pressing the button and choosing the desired laundry **dryness level** or **drying time**:

☀ **Extra**: suitable for garments which need to be dried completely, such as bathrobes.



**Cupboard**: suitable for laundry which can be put back in a cupboard without being ironed.



**Hanger**: ideal for clothes which do not need to be dried fully.



**Iron**: suitable for clothes which will need ironing afterwards; the remaining dampness softens creases, making them easier to remove.

☀ **Drying time**: from **180** to **30** minutes.

! A cooling down period is always added to the end of each drying cycle.

If your laundry load to be washed and dried is bigger than the maximum stated drying capacity of the machine, perform only the washing.

Then unload some garments from the drum, until the maximum drying capacity is reached. At this point, follow the instructions provided for a “Dry Only” cycle.



### Dry only

The “Dry Only” button allows you to start a drying-only cycle.

Select the wash cycle compatible with the type of garments you wish to dry, then press the button to skip the washing phase and perform only the drying.

The drying level is automatically set at the maximum for the selected cycle. It is possible to change it by pressing the drying button. Press start. Compatible cycles listed in the “wash cycle table”

! A cooling down period is always added to the end of each drying cycle.



### KEY LOCK

To activate the control panel lock, press and hold the button for roughly 2 seconds. When the display visualises “KEY LOCK ON”, the control panel is locked (except for the ON/OFF button). This will prevent accidental modifications to wash cycles, especially when children are at home. To deactivate the control panel lock, press and hold the button for approximately 2 seconds.

## TIPS AND SUGGESTIONS

### Divide the laundry according to:

Type of fabric (cotton, mixed fibres, synthetics, wool, garments to be hand-washed). Colour (separate coloured garments from whites, wash new coloured garments separately). Delicates (small garments – such as nylon stockings – and items with hooks – such as bras: insert them in a fabric bag).

### Empty the pockets:

Objects such as coins or lighters can damage the washer-dryer and the drum. Check all pockets.

### Follow the dosage recommendation / additives

To optimise cleaning results, and avoid skin irritation from excess detergent residue. Also saving money, by avoiding wasting detergent.

### Use low temperature and longer duration

The most efficient programmes in terms of energy consumption are generally those that perform at lower temperatures and longer duration.

### Observe the load sizes

Load your washing machine up to the capacity indicated in the “Wash Cycle Table” table to save water and energy.

### Noise and remaining moisture content

They are influenced by the spinning speed: the higher the spinning speed in the spinning phase, the higher the noise and the lower the remaining moisture content.

## CARE AND MAINTENANCE

*Before performing cleaning and maintenance, switch the washer-dryer off and disconnect it from the mains power. Do not use flammable liquids to clean the washer-dryer. Clean and maintain your washer-dryer periodically (at least 4 times per year).*

### Cutting off the water and electricity supplies

Turn off the water tap after every wash cycle. This will limit wear on the hydraulic system inside the washer-dryer and help to prevent leaks. Unplug the washer-dryer when cleaning it and during all maintenance work.

### Cleaning the washer-dryer

The outer parts and rubber components of the appliance can be cleaned using a soft cloth soaked in lukewarm soapy water. Do not use solvents or abrasives. The washer-dryer has a “Auto Clean” cycle for its internal parts; it must be run without any load in the drum.

To help the wash cycle you may want to use either the detergent (i.e. a quantity 10% the quantity specified for lightly-soiled garments) or special additives to clean the washer-dryer. We recommend running a cleaning programme every 40 wash cycles.

To activate the cycle, press the button for 5 seconds then press START/PAUSE to start the cycle, which will last roughly 70 minutes.

### Cleaning the detergent dispenser drawer

Remove the dispenser drawer by lifting and pulling it outwards. Wash it under running water; this procedure should be effected regularly.

### Caring for the door and drum

Always leave the porthole door ajar in order to prevent unpleasant odours from forming.

### Cleaning the pump

The washer-dryer is fitted with a Auto Clean pump which does not require any maintenance. Small items (such as coins or buttons) may sometimes fall into the protective pre-chamber situated at the base of the pump.

! Make sure that the wash cycle has ended and unplug the appliance.

To access the pre-chamber:

1. remove the covering panel on the front side of the machine by inserting a screwdriver in the centre and sides of the panel and using it as a lever;
2. loosen the drainage pump cover by turning it anti-clockwise: it is normal for some water to leak out;
3. clean the inside thoroughly;
4. screw the cover back on;
5. put the panel back in place, making sure the hooks slot in place before pushing the panel onto the appliance.

### Checking the water inlet hose

Check the inlet hose at least once a year. If it is cracked or broken, it must be replaced: during wash cycles, the high pressure of the water could suddenly split the hose open.

! Never use hoses that have already been used.

## LOAD BALANCING SYSTEM

Before every spin cycle, to avoid excessive vibrations before every spin and to distribute the load in a uniform manner, the drum rotates continuously at a speed which is slightly greater than the washing rotation speed. If, after several attempts, the load is not balanced correctly, the machine spins at a reduced spin speed. If the load is excessively unbalanced, the washing machine performs the distribution process instead of spinning. To encourage improved load distribution and balance, we recommend small and large garments are mixed in the load.

## ACCESSORIES

Contact our Technical Assistance Service to check whether the following accessories are available for this washer-dryer model.

### Stacking kit

With this accessory you can secure the tumble dryer to the upper part of your washer-dryer to save space and facilitate loading and unloading of the tumble dryer.

## TRANSPORT AND HANDLING

Do not lift the washer-dryer by gripping it from the upper section.

Unplug the appliance and close the water tap. Check that the door and detergent dispenser drawer are tightly closed. Detach the filling hose from the water tap then detach the drain hose. Empty all the water remaining in the hoses and secure the latter so that they do not get damaged during transport. Apply the transport bolts back on. Repeat, in reverse order, the transport bolt removal procedure described in the “Installation instructions”.

**DEMO MODE:** to deactivate this function, switch the washing machine OFF. Then press and hold “START/PAUSE” button, within 5 seconds press also “ON/OFF” button and hold both buttons for 2 seconds.

## TROUBLESHOOTING


Your washing machine could occasionally fail to work. Before contacting the Technical Assistance Service, make sure that the problem cannot be easily solved using the following list.

| Anomalies                                                                                          | Possible causes / Solution                                                                                                                                                                                                                                                                                                                                                                                                  |
|----------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The washer-dryer does not start.</b>                                                            | The appliance is not plugged into the socket fully, or not enough to make contact.                                                                                                                                                                                                                                                                                                                                          |
|                                                                                                    | There is no power in the house.                                                                                                                                                                                                                                                                                                                                                                                             |
| <b>The wash cycle does not start.</b>                                                              | The washing machine door is not closed properly.                                                                                                                                                                                                                                                                                                                                                                            |
|                                                                                                    | The ON/OFF button has not been pressed.                                                                                                                                                                                                                                                                                                                                                                                     |
|                                                                                                    | The START/PAUSE button has not been pressed.                                                                                                                                                                                                                                                                                                                                                                                |
|                                                                                                    | The water tap has not been opened.                                                                                                                                                                                                                                                                                                                                                                                          |
|                                                                                                    | A delay has been set for the start time.                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>The washer-dryer does not fill with water (“NO WATER, turn tap on” appears on the display).</b> | The water inlet hose is not connected to the tap.                                                                                                                                                                                                                                                                                                                                                                           |
|                                                                                                    | The hose is bent.                                                                                                                                                                                                                                                                                                                                                                                                           |
|                                                                                                    | The water tap has not been opened.                                                                                                                                                                                                                                                                                                                                                                                          |
|                                                                                                    | There is no water supply in the house.                                                                                                                                                                                                                                                                                                                                                                                      |
|                                                                                                    | The pressure is too low.                                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>The washer-dryer continuously loads and unloads water.</b>                                      | The START/PAUSE button has not been pressed.                                                                                                                                                                                                                                                                                                                                                                                |
|                                                                                                    | The drain hose is not fitted between 65 and 100 cm from the floor.                                                                                                                                                                                                                                                                                                                                                          |
|                                                                                                    | The free end of the hose is immersed in water.                                                                                                                                                                                                                                                                                                                                                                              |
|                                                                                                    | The wall drainage system is not fitted with a breather pipe.                                                                                                                                                                                                                                                                                                                                                                |
|                                                                                                    | If the problem persists even after these checks, turn off the water tap, switch the appliance off and contact the Technical Assistance Service. If the home is on one of the upper floors of a building, there may be problems relating to back-siphonage, causing the washing machine to fill with water and drain continuously. Special anti-siphon valves are available in shops and help to prevent this inconvenience. |
| <b>The washer-dryer does not drain or spin.</b>                                                    | The cycle does not include drainage: with certain cycles it must be started manually.                                                                                                                                                                                                                                                                                                                                       |
|                                                                                                    | The drain hose is bent.                                                                                                                                                                                                                                                                                                                                                                                                     |
|                                                                                                    | The drainage duct is clogged.                                                                                                                                                                                                                                                                                                                                                                                               |
| <b>The washer-dryer vibrates a lot during the spin cycle.</b>                                      | The drum was not unlocked correctly during installation.                                                                                                                                                                                                                                                                                                                                                                    |
|                                                                                                    | The washing machine is not level.                                                                                                                                                                                                                                                                                                                                                                                           |
|                                                                                                    | The washing machine is tucked between furniture cabinets and the wall.                                                                                                                                                                                                                                                                                                                                                      |
| <b>The washer-dryer leaks.</b>                                                                     | The water inlet hose is not screwed on properly.                                                                                                                                                                                                                                                                                                                                                                            |
|                                                                                                    | The detergent dispenser drawer is obstructed.                                                                                                                                                                                                                                                                                                                                                                               |
|                                                                                                    | The drain hose is not properly attached.                                                                                                                                                                                                                                                                                                                                                                                    |
| <b>The machine is locked and the display flashes, indicating an error code (e.g. F-01, F-...).</b> | Switch off the machine and unplug it, wait for approximately 1 minute and then switch it back on again. If the problem persists, contact the Technical Assistance Service.                                                                                                                                                                                                                                                  |
| <b>There is too much foam.</b>                                                                     | The detergent is not suitable for machine washing (it should display the text “for washing machines” or “hand and machine wash”, or the like).                                                                                                                                                                                                                                                                              |
|                                                                                                    | Too much detergent was used.                                                                                                                                                                                                                                                                                                                                                                                                |
| <b>The washer-dryer does not dry.</b>                                                              | The appliance is not plugged into the socket, or not enough to make contact.                                                                                                                                                                                                                                                                                                                                                |
|                                                                                                    | There has been a power failure.                                                                                                                                                                                                                                                                                                                                                                                             |
|                                                                                                    | The appliance door is not shut properly.                                                                                                                                                                                                                                                                                                                                                                                    |
|                                                                                                    | A Delay Timer has been set.                                                                                                                                                                                                                                                                                                                                                                                                 |
|                                                                                                    | DRYING LEVEL is in the OFF position.                                                                                                                                                                                                                                                                                                                                                                                        |

### Regulatory documentation, standard documentation, ordering spare parts and other product information can be found:

- Using the QR code in your appliance
- By visiting our website **docs.hotpoint.eu** and **parts-selfservice.europeanappliances.com**
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product’s identification plate.
- For User’s Repair & Maintenance Information visit [www.hotpoint.eu](http://www.hotpoint.eu)

The model information can be retrieved using the QR-Code reported in the energy label. The label also includes the model identifier that can be used to consult the portal of the registry at <https://eprel.ec.europa.eu>

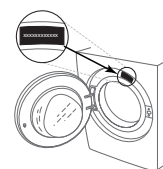

# CLEANING & MAINTENANCE

**For any cleaning and maintenance, switch off and unplug the washing machine.  
Do not use flammable fluids to clean the washing machine.**


## CLEANING THE OUTSIDE OF THE WASHING MACHINE

Use a soft damp cloth to clean the outer parts of the washing machine.


Do not use glass or general purpose cleaners, scouring powder or similar to clean the control panel – these substances might damage the printing.

## CHECKING THE WATER SUPPLY HOSE

Check the inlet hose regularly for brittleness and cracks. If damaged, replace it by a new hose available through our After-Sales Service or your specialist dealer. Depending on the hose type:

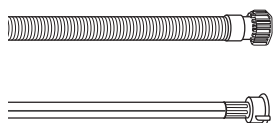


If the inlet hose has a transparent coating, periodically check if the colour intensifies locally. If yes, the hose may have a leak and should be replaced.

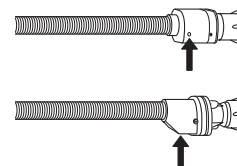


For water stop hoses: check the small safety valve inspection window (see arrow). If it is red, the water stop function was triggered, and the hose must be replaced by a new one. For unscrewing this hose, press the release button (if available) while unscrewing the hose.

## CLEANING THE MESH FILTERS IN THE WATER SUPPLY HOSE

 
1. Close water tap and unscrew the inlet hose.




2. Clean the mesh filter at the hose's end carefully with a fine brush.

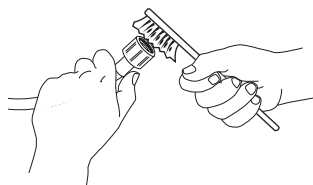

3. Now unscrew the inlet hose on the back of the washing machine by hand. Pull out the mesh filter from the valve on the back of the washing machine with pliers and carefully clean it.

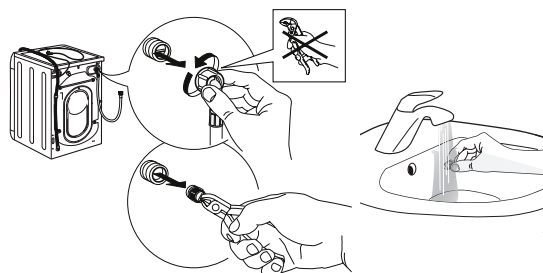

4. Insert the mesh filter again. Connect the inlet hose to water tap and washing machine again. Do not use a tool to connect the inlet hose. Open the water tap and check that all connections are tight.

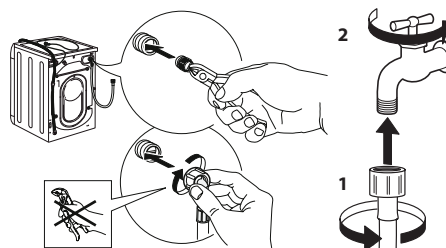

## CLEANING THE DETERGENT DISPENSER

Remove the dispenser by raising it and pulling it out (see figure).


Wash it under running water; this operation should be repeated frequently.




## CLEANING THE WATER FILTER / DRAINING RESIDUAL WATER

**Switch off and unplug the washing machine before cleaning the water filter or draining residual water. If you used a hot wash programme, wait until the water has cooled down before draining any water. Clean the water filter regularly every three months to prevent it from clogging and prevent the water from draining properly. If the water cannot drain, the display indicates that the water filter may be clogged.**


1. Remove the kick panel: Using a screwdriver, do that which is shown in the following figure.

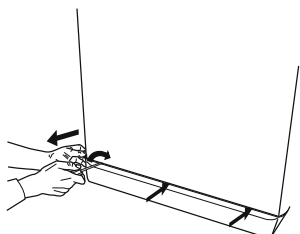

2. Container for the drained water: Place a low and wide container under the water filter in order to collect the residual water.

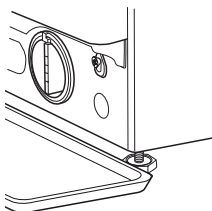


3. Drain the water: Slowly turn the filter counter-clockwise until all the water has come out. Allow the water to flow out without removing the filter. Once the container is full, close the water filter by turning it clockwise. Empty the container. Repeat the procedure until all the water has been drained.

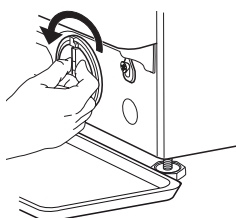


4. Remove filter: Lay a cotton cloth beneath the water filter, which can absorb a small amount of rest water. Then remove the water filter by turning it out anticlockwise.



5. Clean the water filter: remove residues in the filter and clean it under running water.

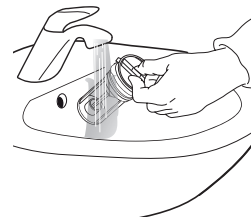

6. Insert the water filter and reinstall the plinth: Reinsert the water filter again by turning it in clockwise direction. Make sure to turn it in as far as it goes; the filter handle must be in vertical position. To test water tightness of the water filter, you can pour about 1 liter of water into the detergent dispenser. Then reinstall the plinth.

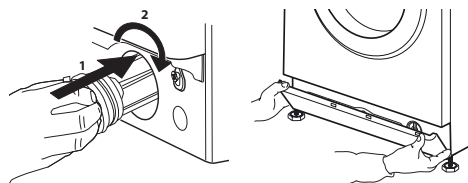

# TRANSPORT AND HANDLING

**Never lift the washing machine by holding it at the worktop.**

1. Pull out the mains plug, and close the water tap.
2. Make sure that door and detergent dispenser are properly closed.
3. Disconnect the inlet hose from the water tap, and remove the drain hose from your draining point. Remove all rest water from the hoses, and fix them so that they cannot get damaged during transport.

4. Refit the transport bolts. Follow the instructions for removing the transport bolts in the "Installation Guide" in reverse order.

**Important:** Do not transport the washing machine without having fixed the transport bolts.

## AFTER-SALES SERVICE

### BEFORE CALLING THE AFTER-SALES SERVICE


1. See if you can solve the problem by yourself with the help of the suggestions given in the **TROUBLESHOOTING**

### IF AFTER THE ABOVE CHECKS THE FAULT STILL OCCURS, GET IN TOUCH WITH THE NEAREST AFTER-SALES SERVICE

To receive assistance, call the number shown on the warranty booklet.

When contacting our Client After sales service, always specify:

- a brief description of the fault;
- the type and exact model of the appliance;

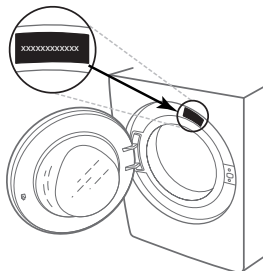

2. Switch the appliance off and back on again to see if the fault persists.

- the service number (number after the word Service on the rating plate).

**SERVICE** 0000 000 00000



- your full address;
- your telephone number.

If any repairs are required, please contact an authorised after-sales service (to guarantee that original spare parts will be used and repairs carried out correctly).