




THANK YOU FOR BUYING A WHIRLPOOL PRODUCT
 In order to receive a more complete assistance, please register your product on www.whirlpool.eu/register




Before using the appliance carefully read the Safety Instruction.

PLEASE SCAN THE QR CODE ON YOUR APPLIANCE IN ORDER TO REACH MORE INFORMATION

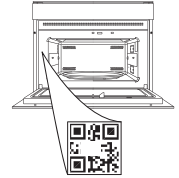


PRODUCT DESCRIPTION

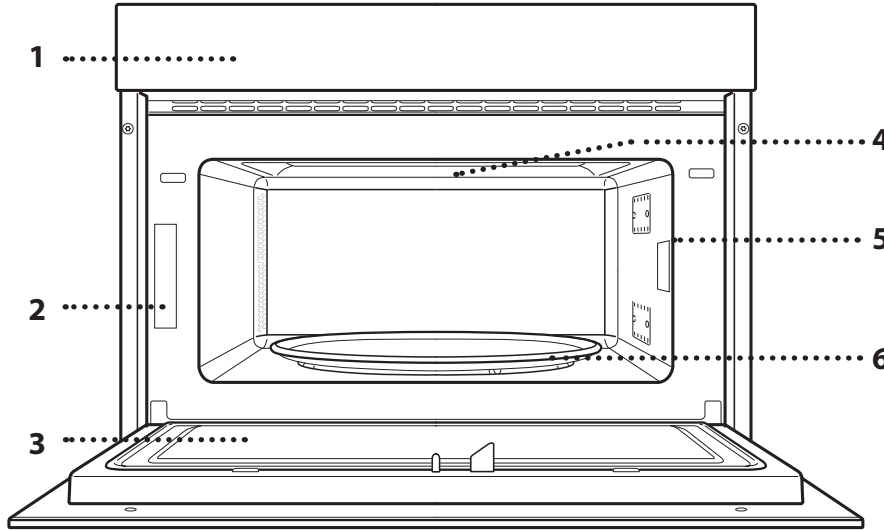

1. Control panel
2. Identification plate (do not remove)
3. Door
4. Upper heating element/grill
5. Light
6. Turntable

CONTROL PANEL DESCRIPTION

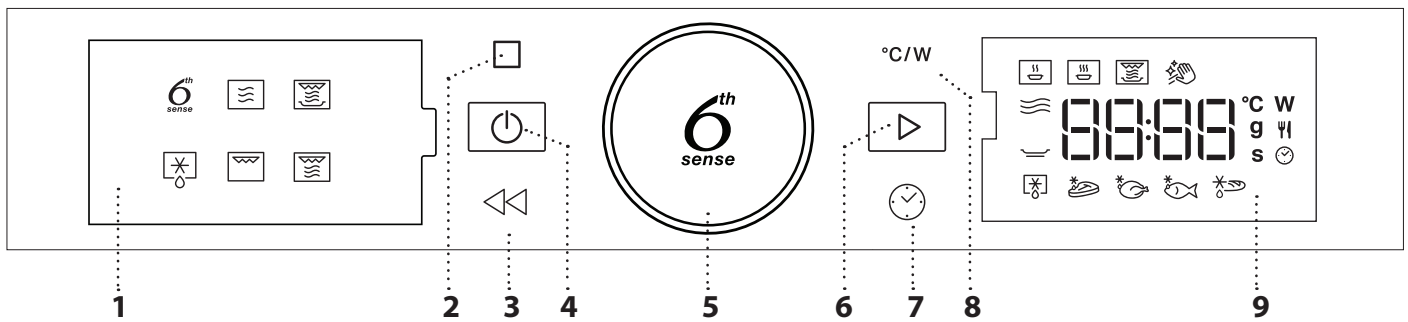

1. LEFT-HAND DISPLAY

2. PAUSE

To pause a cooking cycle.

3. BACK

For returning to the previous screen.

4. ON/OFF

For switching the oven on and off and for stopping an active function at any time.

5. ROTARY KNOB / 6th SENSE BUTTON

Turn this to navigate through the functions and adjust all of the cooking parameters. Press to select, set, access or confirm functions or parameters and eventually start the cooking program.

6. START

For starting functions and confirming settings.

7. TIME

For setting the time as well as setting or adjusting the cooking time.


8. POWER

To adjust the microwave power.

9. RIGHT-HAND DISPLAY

ACCESSORIES


TURNTABLE

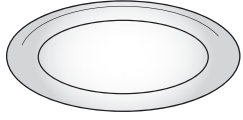

Placed on its support, the glass turntable can be used with all cooking methods.

The turntable must always be used as a base for other containers or accessories.


TURNTABLE SUPPORT

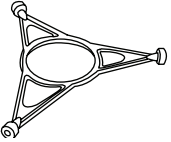

Only use the support for the glass turntable.

Do not rest other accessories on the support.

WIRE RACK

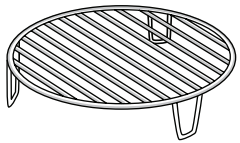


This allows you to place food closer to the grill, for perfectly browning your dish.

Place the wire rack on the turntable, making sure that it does not come

into contact with other surfaces.

The number and the type of accessories may vary depending on which model is purchased.

CRISP PLATE

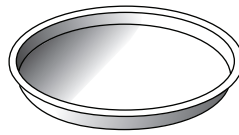


Only for use with the designated functions.

The Crisp plate must always be placed in the centre of the glass turntable and can be pre-heated

when empty, using the special function for this purpose only. Place the food directly on the Crisp plate.

 HANDLE FOR CRISP PLATE



Useful for removing the hot Crisp plate from the oven.

Other accessories that are not supplied can be purchased separately from the After-sales Service.

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use and resistant to oven temperatures.

Metallic containers for food or drink should never be used during microwave cooking.

Always ensure that foods and accessories do not come into contact with the inside walls of the oven.

Always ensure that the turntable is able to turn freely before starting the oven. Take care not to unseat the turntable whilst inserting or removing other accessories.

FUNCTIONS

6TH SENSE

These functions automatically select the best cooking method for all types of food.







REHEAT

For reheating ready-made food that is either frozen or at room temperature. The oven automatically calculates the settings required to achieve the best results in the shortest amount of time. Place food on a microwave-safe and heatproof dinner plate or dish.

| | FOOD | WEIGHT (g) |
|--|----------------|------------|
|  | PLATED MEAL | 250 - 500 |
|  | FROZEN LASAGNA | 250 - 500 |
|  | MILK/WATER | 100 - 500 |
|  | SOUP | 200 - 800 |




COOK

For cooking foods quickly and achieving optimal results. Use a heatproof container suitable for microwave use.

| | FOOD | WEIGHT (g) |
|--|--------------------|------------|
|  | ROAST CHICKEN | 800 - 1500 |
|  | POTATOES GRATIN | 200 - 1000 |
|  | STUFFED VEGETABLES | 200 - 800 |
|  | PORK RIBS | 200 - 800 |
|  | SCRAMBLED EGGS | 100 - 500 |
|  | POPCORN | 90 |

CRISP

For quickly reheating and cooking frozen foods and giving them a golden, crunchy top. Only use this function with the crisp plate provided. Turn the food when prompted.

| | FOOD | WEIGHT (g) |
|--|--------------------------|------------|
|  | PIZZA [FROZEN] | 200 - 800 |
|  | BURGER PATTIES | 200 - 600 |
|  | POTATOES FRIED [FROZEN] | 200 - 500 |
|  | CHICKEN NUGGETS [FROZEN] | 100 - 500 |
|  | FISH FINGERS [FROZEN] | 100 - 500 |

Required accessories: Crisp plate, handle for crisp plate

Hydro Self Clean

The action of the steam released during this

special cleaning cycle allows dirt and food residues to be removed with ease. Pour a cup of drinking water into a microwave proof container and activate the function.

MICROWAVE

For quickly cooking and reheating food or drinks.

| POWER (W) | RECOMMENDED FOR |
|-----------|---|
| 1000 | Quickly reheating drinks or other foods with a high water content. |
| 800 | Cooking vegetables. |
| 650 | Cooking meat and fish. |
| 500 | Cooking meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes. |
| 350 | Slow, gently cooking. Perfect for melting butter or chocolate. |
| 160 | Defrosting frozen foods or softening butter and cheese. |
| 90 | Softening ice cream. |

| ACTION | FOOD | POWER (W) | DURATION (min.) |
|---------|------------------------|-----------|-----------------|
| Reheat | 2 cups | 1000 | 1 - 2 |
| Reheat | Mashed potatoes (1 kg) | 1000 | 9 - 11 |
| Defrost | Minced Meat (500 g) | 160 | 13 - 14 |
| Cook | Sponge cake | 800 | 6 - 7 |
| Cook | Egg custard | 650 | 11 - 12 |
| Cook | Meat loaf | 800 | 18 - 20 |

CRISP

For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special Crisp plate.


| FOOD | DURATION (min.) |
|---------------|-----------------|
| Leavened cake | 7 - 10 |
| Hamburger | 8 - 10 * |

* Turn food halfway through cooking.

Required accessories: Crisp plate, handle for the Crisp plate

DEFROST

For quickly defrosting various different types of food simply by specifying their weight. Food should be placed directly on the glass turntable. Turn the food when prompted.

| | FOOD | WEIGHT (g) |
|---|---------------------|------------|
|  | TIMED DEFROST | - |
|  | MEAT | 100 - 2000 |
|  | POULTRY | 100 - 2500 |
|  | FISH | 100 - 1500 |
|  | CRISP BREAD DEFROST | 50 - 500 |



GRILL

For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special Crisp plate.

| FOOD | DURATION (min.) |
|---------------|-----------------|
| Leavened cake | 7 - 10 |
| Hamburger | 8 - 10 * |

* Turn food halfway through cooking.

Required accessories: Wire rack

FIRST TIME USE

. SETTING THE TIME

You will need to set the time when you switch on the oven for the first time.



The two digits for the hour will start flashing: Turn the rotary knob to set the hour and then press to confirm.



GRILL+MW

For quickly cooking and gratinating dishes, combining the microwave and grill functions.

| FOOD | POWER (W) | DURATION (min.) |
|-----------------|-----------|-----------------|
| Potatoes gratin | 650 | 20 - 22 |
| Roast chicken | 650 | 40 - 45 |

Recommended accessories: Wire rack



The two digits for the minutes will start flashing. Turn the rotary knob to set the minutes and press to confirm.

Please note: To change the time at a later point, press and hold for at least one second while the oven is off and repeat the steps above.

You may need to set the time again following lengthy power outages.

DAILY USE

1. SELECT A FUNCTION

When the oven is off, only the time is shown on the display. Press and hold to switch the oven on. Turn the rotary knob to view the main functions available on the left-hand display. Select one and press .



To select a sub-function (where available), select the main function and then press to confirm and go to the function menu.




Turn the rotary knob to select from amongst the subfunctions available on the right-hand display and then press to confirm.

2. SET A FUNCTION

. 6TH SENSE / DEFROST

FOOD CLASS

Once you have chosen one of the automatic functions, you will need to select a category for the food you are cooking.

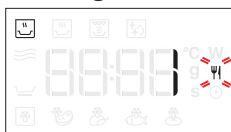

When the icon flashes, turn the rotary knob to select

the category you require and then press to confirm.

WEIGHT

To achieve the best results, the 6th Sense (and Jet Defrost) require you to enter the weight of the food, selecting from amongst the default settings: the oven will calculate the ideal length of time for the function to run for each category of food.



When the default setting appears on the display and the icon flashes, turn the rotary knob to set the weight and then press to confirm.

. MANUAL FUNCTIONS

After having selected the function you require, you can change its settings.

The display will show the settings that can be changed in sequence.

MICROWAVE POWER



When the icon flashes on the display, turn the rotary knob to adjust the power setting and then press to confirm and continue to alter the settings that follow (if possible).

Please note: Once the function has been activated, the power

can be changed by pressing C W to access the settings menu, then turning the rotary knob to change the setting.

DURATION



When the ⌚ icon flashes on the display, use the rotary knob to set the cooking time you require and then press ⏸ to confirm or press ▶ to confirm and start the function.

Note: During cooking, you can adjust the cooking time by turning the rotary knob; each time you press ▶ , the cooking time increases by 30 seconds.

3. ACTIVATE THE FUNCTION

Once you have applied the settings you require, press ▶ to activate the function.

Every time the ▶ button is pressed again, the cooking time will be increased by a further 30 seconds.

Please note: You can press ⏸ at any time to stop the function that is currently active.

. JET START

When the oven is switched off, it is possible to press ▶ to activate cooking with the microwave function set at full power (1000 W) for 30 seconds.

. SAFETY LOCK

This function is automatically activated to prevent the oven from being switched on accidentally.



Open and close the door, then press ▶ to start the function.

4. PAUSE

To pause an active function, for example to stir or turn the food, simply open the door.

To start it up again, close the door and press ▶ .

AUTOMATIC PAUSE

(TURN OR STIR FOOD)

Certain functions will pause to allow you to turn or stir the food.



Once the oven has paused cooking, open the door and carry out the action you are prompted to perform before closing the door again and pressing ▶ to continue with cooking.

5. COOKING END


An audible signal will sound and the display will indicate that cooking is complete.



To extend the cooking time without changing the settings, turn the rotary knob to set a new cooking time and press ▶ .

. KEY LOCK

To lock the keypad, press and hold ⏸ for at least 5 seconds.

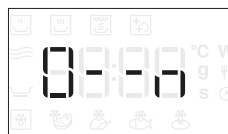

Do this again to unlock the keypad.

Please note: The key lock can also be activated while cooking is in progress. For safety reasons, the oven can be switched off at any time by pressing and holding ⏸ .

CLEANING

Make sure that the appliance has cooled down before carrying out any maintenance or cleaning.

Never use steam cleaning equipment.

Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.

INTERIOR AND EXTERIOR SURFACES

- Clean the surfaces with a damp microfibre cloth. If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Clean the glass in the door with a suitable liquid detergent.
- At regular intervals, or in case of spills, remove the turntable and its support to clean the bottom of the oven, removing all food residue.
- The grill does not need to be cleaned as the intense heat burns away any dirt. Use this function on a regular basis.

ACCESSORIES

All accessories are dishwasher safe with the exception of the Crisp plate.

The Crisp plate should be cleaned using water and a mild detergent. For stubborn dirt, rub gently with a cloth. Always leave the Crisp plate to cool down before cleaning.

TROUBLESHOOTING

| Problem | Possible cause | Solution |
|--|---|---|
| The oven is not working. | Power cut. Disconnection from the mains. | Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists. |
| The oven makes noises, even when it is switched off. | Cooling fan active. | Open the door or hold or wait until the cooling process has finished. |
| The display shows the letter "F" followed by a number. | Software fault. | Contact the Call Center and state the number following the letter "F". |

Policies, standard documentation and additional product information can be found by:

- Using the QR on your product
- Visiting our website docs.whirlpool.eu
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

