


Ⓜ For correct and safe installation of the appliance, please carefully read this manual and the other documentation provided (see section "Precautions and general advice").

Specifications, technical data, images and parts supplied may be subject to change without prior notice.

WATER CONNECTION

Disconnect the appliance from the mains power supply before starting operations.

- In any case, make sure to comply with the current local regulations regarding connection to the water system.
- The appliance is supplied with a water tube, 1.8 m long, already attached to the back of the product.
- The water tube complies with IEC 61770.
- Remove the shipping tape from the gray coiled water tubing on the rear of the appliance.
- Connect the transition connector (1) to the household water supply (2).
- Open the water tap and check for and eliminate any leaks.
- The appliance does not require adjustments or a water drain.

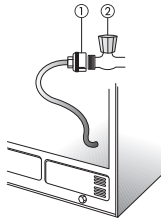


ELECTRICAL CONNECTION

Connect the appliance to the mains power supply. Electrical safety of the appliance can only be guaranteed if it is correctly connected to an efficient, approved earthing system.

MOUNTING FREEZER DOOR

Important: If your appliance has two water fill pipes (see figure), when mounting the door you must reconnect the two pipes to the matching ones at the bottom of the appliance, being careful to connect like colours with like:

- white-white: water
- blue-blue: ice.

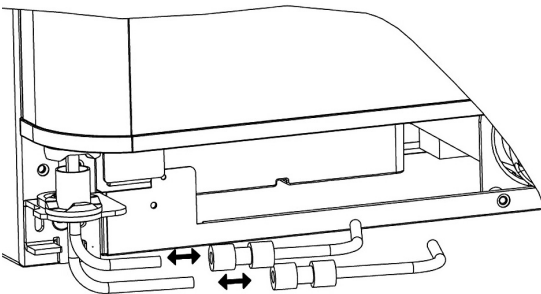


- Check for leaks after connecting the water fill pipes.
- Clear up any spills on the floor.

POSITIONING AND LEVELLING YOUR REFRIGERATOR

If the appliance seems unsteady or you want the doors to close more easily, adjust the appliance's tilt following the instructions below (depending on the model, as shown in the figures on the right).

The refrigerator has two front and two rear wheels at the base of the product on each side and two adjustable feet at the front (see figure A).

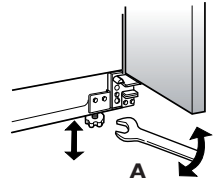


1. Check the installation location to be sure you have at least 1 cm clearance on all sides including the top.

2. Connect the appliance to the mains power supply.

3. Move the refrigerator into its final position.

4. Open both doors and remove the plinth to locate the feet and levelling bolts at the left and right of the refrigerator base (where present). The top bolt (1) will adjust the rear wheel (if provided), and the bottom bolt (2) will adjust the front wheel (see figure B).

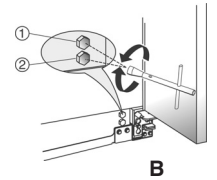

5. Use the wrench provided (if present) to adjust the levelling bolts. Turn clockwise to raise the appliance, or anticlockwise to lower it. It may take several turns of the levelling bolts and/or feet to adjust the tilt of the refrigerator.

6. After levelling the product, ensure that both feet touch the ground for safe use.

Note: do not unscrew the levelling bolts and feet too much as they could fall out.

Aligning the doors

If, after switching on the appliance and adjusting the refrigerator and freezer doors, the doors are misaligned, disconnect the appliance from the power supply and adjust both doors as indicated in the diagram at the end of this manual.

Any damage resulting from FAILURE TO FOLLOW THE INSTRUCTIONS during installation will not be covered by the warranty.

- REMOVING THE FREEZER DOOR (A)
- REMOVING THE REFRIGERATOR DOOR (B)
- MOUNTING THE FREEZER DOOR (C)
- MOUNTING THE REFRIGERATOR DOOR (D)
- HORIZONTAL ALIGNMENT OF FREEZER AND REFRIGERATOR DOORS (E)
- VERTICAL ALIGNMENT OF FREEZER AND REFRIGERATOR DOORS (F)
- INSTALLATION DIMENSIONS AND REQUIREMENTS (G)