





THANK YOU FOR BUYING A WHIRLPOOL PRODUCT
 In order to receive a more complete assistance, please register your product on www.whirlpool.eu/register

PLEASE SCAN THE QR CODE ON YOUR APPLIANCE IN ORDER TO REACH MORE INFORMATION

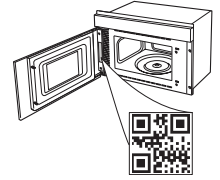


Before using the appliance carefully read the Safety Instruction.

PRODUCT DESCRIPTION

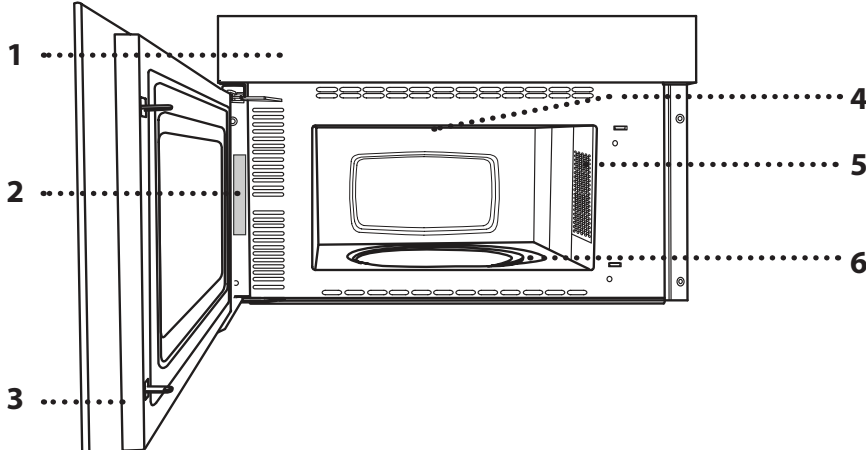

1. Control panel
2. Identification plate (do not remove)
3. Door
4. Grill
5. Light
6. Turntable

CONTROL PANEL DESCRIPTION

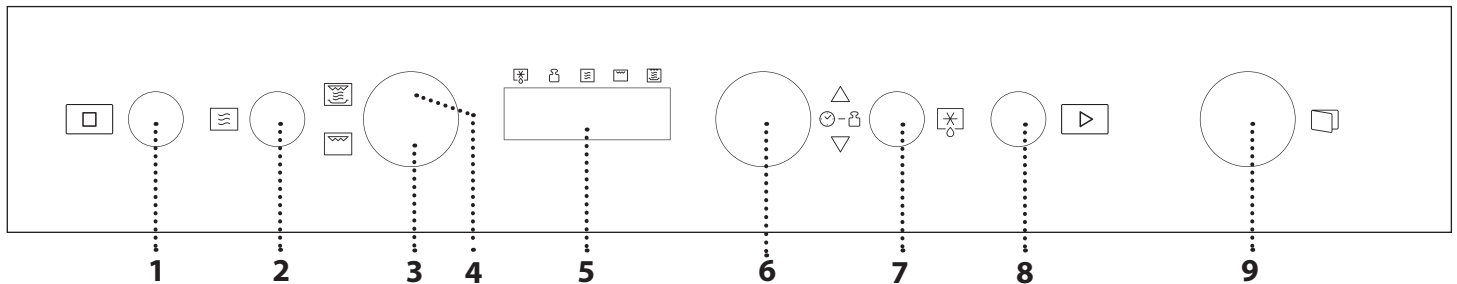

1. STOP

For stopping a function or an audible signal, cancelling the settings and switching off the oven.

2. MICROWAVE FUNCTION/POWER

For selecting the microwave function and setting the required power level.

3. GRILL FUNCTION

4. CRISP FUNCTION

5. DISPLAY

6. + / - BUTTONS

For adjusting the settings of a function (e.g. length, weight).

7. JET DEFROST FUNCTION


8. START

For starting a function.

9. DOOR OPENING BUTTON

ACCESSORIES


TURNTABLE

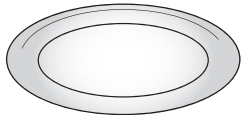

Placed on its support, the glass turntable can be used with all cooking methods.

The turntable must always be used as a base for other containers or accessories.

TURNTABLE SUPPORT

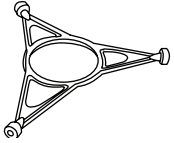

Only use the support for the glass turntable.


Do not rest other accessories on the support.

The number and the type of accessories may vary depending on which model is purchased.

There are a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use and resistant to oven temperatures.

Metallic containers for food or drink should never be used during microwave cooking.

CRISP PLATE

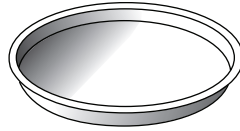


Only for use with the designated functions.

The Crisp plate must always be placed in the centre of the glass turntable and can be pre-heated

when empty, using the special function for this purpose only. Place the food directly on the Crisp plate.

 HANDLE FOR CRISP PLATE



Useful for removing the hot Crisp plate from the oven.

Other accessories that are not supplied can be purchased separately from the After-sales Service.

Always ensure that foods and accessories do not come into contact with the inside walls of the oven.

Always ensure that the turntable is able to turn freely before starting the oven. Take care not to unseat the turntable whilst inserting or removing other accessories.

FUNCTIONS



MICROWAVE

For quickly cooking and reheating food or drinks.

POWER (W)	RECOMMENDED FOR
750 W	Quickly reheating drinks or other foods with a high water content or meat and vegetables.
500 W	Cooking fish, meaty sauces, or sauces containing cheese or egg. Finishing off meat pies or pasta bakes.
350 W	Slow, gently cooking. Perfect for melting butter or chocolate.
160 W	Defrosting frozen food or softening butter and cheese.
0 W	When using the minuteminder only.



GRILL

For browning, grilling and gratins when used alone. We recommend turning the food during cooking. For best results, preheat the grill for 3-5 minutes. For quickly cooking and gratinating dishes, combines with microwaves.

• GRILL + MW

For quickly cooking entrées (even au gratin) using both microwaves and the grill. It is useful for cooking food like lasagne, fish and potato gratins.

POWER (W)	DURATION (min)	RECOMMENDED FOR
500	14 - 18	Lasagne (400 - 500 g)
500	10 - 14	Fish (600 g)
500	40 - 50	Chicken (whole; 1-1.2 kg)
350	15 - 18	Fish gratin (600 g)
0	-	Browning only



JET DEFROST

For quickly defrosting various different types of food simply by specifying their weight. Food should be placed directly onto the glass turntable. Turn the food when prompted. Food should be placed directly onto the glass turntable. Turn the food when prompted. A standing time after defrosting always improves the result.



CRISP

For perfectly browning a dish, both on the top and bottom of the food. This function must only be used with the special crisp plate. This function must only be used with the special Crisp-plate provided, which must be placed at the centre of the glass turntable. It is recommended to preheat the plate for 2-3 minutes before cooking any food items that do not require long cooking times, like pizza or desserts.


DURATION (min)	RECOMMENDED FOR
3 - 4	Cookies (8- 10 pieces)
7 - 8	Frozen pizza (350 g)
7 - 9	Sponge cake (500 g)
8 - 10	Fish fingers (8 pieces)
9 - 10	Pizza (350 g)
10 - 14	French fries (200 - 300g)
13 - 15	Quiche Lorraine (500 g)

DAILY USE

. SELECT A FUNCTION


Simply press the button for the function you require to select it.

. SET THE LENGTH

 After selecting the function you require, use Δ or ∇ to set the length for it to run.

The time can be changed during cooking by pressing Δ or ∇ or by increasing the length for 30 seconds each time by pressing \triangleright .


. SET THE POWER OF THE MICROWAVE

 Press \equiv as many times as required to select the power level for the microwave.

To use the microwave in combination with the grill, select the "Grill" function by pressing \boxtimes and then use \equiv to set the microwave power.

Please note: You can also change this setting during cooking by pressing \equiv .

. JET DEFROST

 Press \boxtimes , then use Δ or ∇ to set the weight of the food. During defrosting, the function will pause briefly to allow

you to turn the food. Once the operation is complete, close the door and press \triangleright .

. ACTIVATE THE FUNCTION

Once you have applied the settings you require, press \triangleright to activate the function.

Every time the \triangleright button is pressed again, the cooking time will be increased by a further 30 seconds.

You can press \square at any time to stop the function that is currently active.

. JET START

When the oven is switched off, press \triangleright to activate cooking with the microwave function set at full power (750 W) for 30 seconds.

. PAUSE

To pause an active function, for example to stir or turn the food, simply open the door.

The setting will be maintained for 10 minutes.

To start it up again, close the door and press \triangleright .


A beep will signal once or twice a minute for 10 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.

Please note: The oven will only hold the setting for 60 seconds if the door is opened and then closed after the cooking is finished.


. COOLING DOWN

When a function is finished, the oven may carry out a cooling procedure the oven switches off automatically.

. SAFETY LOCK

 This function is automatically activated to prevent the oven from being switched on accidentally. Open and close the door, then press \triangleright to start the function.

. SET THE TIME OF THE DAY

 Press \square until the two digits for the hour (on the left) starting flashing.

Use Δ or ∇ to set the correct hour and press \triangleright to confirm: The minutes will flash on the display. Use Δ or ∇ to set the minutes and press \triangleright to confirm.

Please note: You may need to set the time again following lengthy power outages.

. MINUTEMINDER

The display can be used as a timer. To activate the function and set the length of time you require, use Δ or ∇ . Press \equiv to set the power to 0 W, then press \triangleright to activate the countdown.

Please note: The timer does not activate any of the cooking cycles. To stop the timer at any time, press \square .

CLEANING

Make sure that the appliance has cooled down before carrying out any maintenance or cleaning.

Never use steam cleaning equipment.

Do not use wire wool, abrasive scourers or abrasive/corrosive cleaning agents, as these could damage the surfaces of the appliance.

INTERIOR AND EXTERIOR SURFACES

- Clean the surfaces with a damp microfibre cloth. If they are very dirty, add a few drops of pH-neutral detergent. Finish off with a dry cloth.
- Clean the glass in the door with a suitable liquid detergent.
- At regular intervals, or in case of spills, remove the turntable and its support to clean the bottom of the oven, removing all food residue.
- The grill does not need to be cleaned as the intense heat burns away any dirt. Use this function on a regular basis.

ACCESSORIES

All accessories are dishwasher safe.

The crisp plate should be cleaned using water and a mild detergent. For stubborn dirt, rub gently with a cloth. Always leave the crisp plate to cool down before cleaning.

TROUBLESHOOTING

Problem	Possible cause	Solution
The oven is not working.	Power cut. Disconnection from the mains.	Check for the presence of mains electrical power and whether the oven is connected to the electricity supply. Turn off the oven and restart it to see if the fault persists.
The display is showing "Err".	Software fault.	Contact the Call Center and state the letter or number that follows "Err".
The display shows unclear text and appears to be broken.	Another language set.	Contact the Call Center.

Policies, standard documentation and additional product information can be found by:

- Using the QR on your product
- Visiting our website docs.whirlpool.eu
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

