



Keeps food warm Keeps microwave oven clean

Dish cover for microwave \varnothing 26,5 cm

The solution to keep your microwave oven clean and your food warm

CHARACTERISTICS

The Wpro Dish Cover for microwave allows you to **contained food while reheating, avoiding food spilling inside the microwave and keeping it clean.** After reheating, it allows to **preserve your food warm and tender** for longer. Its **ergonomic shape** with **4 ventilation holes** above the handle were designed to **avoid the steam causing burning. Diameter 26,5cm**.

THE RECOMMENDATION OF WPRO

For microwave use only. Do not use with grill function. Dishwasher safe.

CODES

PLL003 484000008434 C00335164 8015250441420

LANGUAGES

UK / FR / NL / DE / IT / ES / PT / NO / DK / SE / FI

LOGISTIC INFORMATIONS

Bauknecht beko (i) Indesit

	LxHxW (cm)	Weight (Kg)	Qty
Product:	27x7x27	0.112	1
SubPack:	28x22x28	1.73	12
Pallet:	80x103x120	98	576

CONSUMER BENEFIT

- **Clean appliance give best results:** avoid food spilling inside the Microwave
- **Avoid burning:** thanks to its ergonomic shape with the 4 ventilation hole
- **Easy to use:** thanks to the practical handle, it's easy to cover and uncover dishes



Hotpoint

Whirlpool