


**Stop**  
Stop or reset any of the oven functions.

**Confirmation button / Knob**

**Digital display**

**Jet Start**

To start the Microwave function at maximum power for 30 seconds, just press the Jet Start button.  
If you have already selected a cooking function (e.g.: Grill), press Jet Start to start the selected function.  
Each additional pressure will increase the cooking time of 30 seconds.

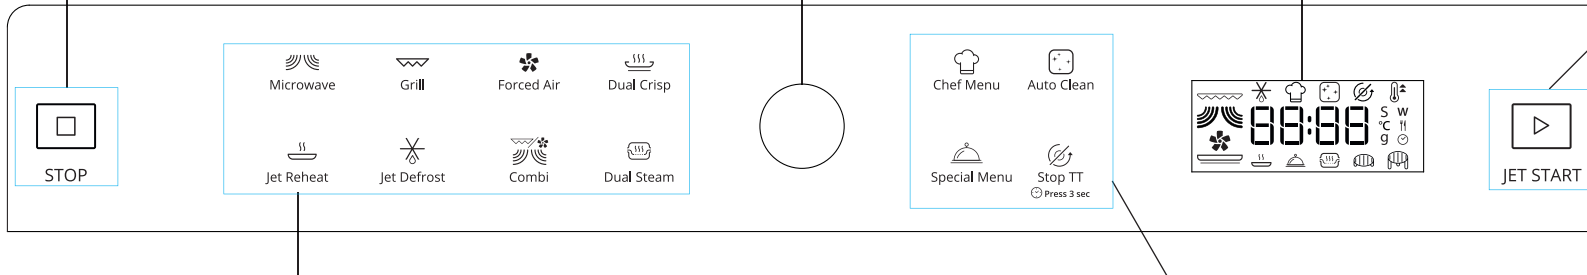

## MAIN FUNCTIONS

Touch the name of the function to select it. Use the Rotating Knob and the Confirmation button to set the cooking parameters.

Function	Icon	Suggested accessories / Food categories
Microwave		Microwave safe and oven proof dish
Grill		High rack
Forced Air		Low rack
Dual Crisp		Crisp plate Crisp handle
Jet Reheat		Microwave safe and oven proof dish
Jet Defrost		1*  2*  3*  4*  5*
<b>Combi</b> Combined functions:		
1. Combi ( Microwave + Grill )		High rack
2. Combi ( Microwave + Forced Air )		Low rack
Dual Steam		Dual steamer

## SPECIAL FUNCTIONS

Touch the name or the icon on the control panel to select the function. More info about the special functions are contained in the Instructions for Use.

Function	Icon	Notes
<b>Chef Menu</b>		To see the list of the 40 automatic recipes available on this product, go to the last page of this Quick Reference Guide. A complete description of each recipe is included in the Instructions For Use.
<b>Auto Clean</b>		This automatic cleaning cycle will help to clean the microwave oven cavity and to remove unpleasant odors. User manners and use tips are included in the Instructions For Use.
<b>Special Menu</b>		This special menu allows to make the dough rise, keep warm the food, soften and melt butter, chocolate, cheese, etc.
<b>Stop Turntable</b>		This function allows to use large and squared vessels that could not turn freely in the product. Available only with some cooking functions.

Discover all the original Whirlpool accessories!



Visit your local Whirlpool website.



80002744



## MICROWAVE

- Microwave function allows to quickly cook or reheat food and beverages.
- Press the Microwave button, then use the Knob and the Confirmation button to choose the power level according to the table.

POWER	SUGGESTED USE:
900 W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power.
750 W	Cooking of fish, meat, vegetables etc.
650 W	Cooking dishes, not possible to stir.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	Simmering stews, melting butter.
160 W	Defrosting.
90 W	Softening ice cream, butter and cheeses.



## JET REHEAT

- This function allows you to automatically reheat your dishes. The microwave will automatically calculate the needed microwave power level and time to get the best possible result in the shortest time. Use this function to reheat ready-made food either frozen, chilled or at room temperature.



## GRILL

- This function uses a powerful metal tube to grill food and bring food with perfect browning color. Press the Grill button, rotate the Knob to select the Power level according to below table, press the Confirmation button to confirm and rotate

	POWER LEVEL
1	Low
2	Medium
3	High



## FORCED AIR

- This function allows you to obtain oven-baked dishes. Use this function to cook meringues, pastry, cakes, soufflés, poultry and roast meats.
- The Forced air function is designed to cook food with preheat phase. Using both the fan and the grill to quickly preheat the oven before you start cooking, to achieve the best possible cooking results.
- Press the Forced Air button, and enter into the Preheat phase, adjust the temperature by rotating the Knob, when the desired temperature reached, a beep will signal and ask to add food. After adding the food, rotate the Knob to set the time, confirm and start the cooking cycle.



## DUAL CRISP

- This exclusive Whirlpool function allows for perfectly golden brown results both on the top and bottom surfaces of the food. Using both Microwave and Grill cooking, the Crisp Plate will rapidly reach the right temperature and begin to brown and crisp the food.

### Manual Dual Crisp function:

- Press the Dual Crisp button and confirm, rotate the Knob to set the cooking time, press the Jet Start button to start the cooking cycle.

### Dual Crisp Bread Defrost function:

- Press the Dual Crisp button and rotate the Knob to select the P2 Dual Crisp Bread Defrost function, press the Confirmation button to confirm. Rotate the Knob to adjust the weight and press the Jet Start button to start the cooking cycle.

### Dual Crisp Fry function:

- Press the Dual Crisp button and rotate the Knob to select the P3-P9 Dual Crisp Fry recipes, press the Confirmation button to confirm. Rotate the Knob to adjust the weight, and press the Jet Start button to start the cooking cycle.
- The following accessories must be used with the Crisp function:

### Accessories:



-Crisp Plate



-Crisp Handle



(Available when cook with Dual Crisp Fry recipe)  
-High Rack

## Dual Crisp Recipes Guide:

	METHOD	FOOD CATEGORY
P1	Dual Crisp	Manual Dual Crisp
P2	Dual Crisp	Dual Crisp Bread defrost
P3	Dual Crisp Fry	French fries
P4	Dual Crisp Fry	Chicken nuggets
P5	Dual Crisp Fry	Breaded fish
P6	Dual Crisp Fry	Chicken wings
P7	Dual Crisp Fry	Potato wedges
P8	Dual Crisp Fry	Falafel
P9	Dual Crisp Fry	Spicy Breaded Cod



## JET DEFROST

- Jet Defrost function allows to quickly defrost frozen food. Press the Defrost button, then use the Knob and Confirmation button to select your preferred choice above the ones shown in the table.

	FOOD CATEGORY
P1	Meat
P2	Chicken
P3	Fish
P4	Vegetables
P5	Bread

- In order to achieve the best possible results the product will ask you:
  - adjust the weight value of the food
  - to turn/stir the food when needed

 **COMBI ( MICROWAVE + GRILL )**

•This function combines Microwave and Grill heating, allowing you to cook and gratin in less time. Press the Combi button: the display will show the number "1" , corresponding to the Combi ( Microwave + Grill ) function. Press the Confirmation button, then select the power level according to the table below.

POWER LEVEL	SUGGESTED USE:
650 W	Vegetables
500 W	Lasagne
350 W	Poultry & Fish
160 W	Meat
90 W	Gratined Fruit

 **STOP TURNTABLE**

- Use this function when you need to use very large vessels that could not turn freely in the oven.
- The "Stop turntable" function works only with the following cooking functions:
  - Forced Air
  - Combi ( Microwave + Forced Air )
- This function also allows to access the Clock setting mode by pressing and holding this button for 3 seconds.

 **COMBI ( MICROWAVE + FORCED AIR )**

•This function combines Microwave and Forced Air cooking, allowing you to prepare oven-baked dishes in less time. Press the Combi button, then use the Rotating Knob and the Confirmation button to select the number "2" for Combi ( Microwave + Forced Air ) function. Choose proper temperature and press Confirmation button to confirm, then choose the power level according to the table.

POWER LEVEL	SUGGESTED USE:
350 W	Poultry, Jacket potatoes, Lasagne & Fish
160 W	Roast meat & Fruit cakes
90 W	Cakes & Pastry

 **AUTO CLEAN**

- This automatic cleaning cycle will help to clean the microwave oven cavity and to remove unpleasant odors.
- User manners and use tips are included in the Instructions For Use.

 **CHEF MENU**

- Chef Menu is a simple and intuitive guide, offering automatic recipes that guarantee perfect results every time.
- Use this menu to prepare the dishes listed in the last page of this Quick Guide. Press the Chef Menu button, then simply select a recipe and follow the instructions on the display: Menu will automatically adjust the cooking parameters to get the best results. A complete description of all the Menu recipes are included in the Instructions For Use.

 **SPECIAL MENU**

•The Special menu is a convenient button that contains different functions that support the cooking process. Allowing to make the dough rise, keep warm the food, soften and melt butter, chocolate, cheese, etc.

	METHOD	FOOD CATEGORY
P1	Dough rising	Dough rising
P2	Keep Warm	Keep Warm
P3	Soften	Butter
P4	Soften	Ice cream
P5	Soften	Cream Cheese
P6	Soften	Frozen Juice
P7	Melting	Butter
P8	Melting	Chocolate Chips
P9	Melting	Cheese
P10	Melting	Marshmallows

 **JET START**

- This function is used for quick reheating of food with a high water content such as clear soups, coffee or tea.
- Press Jet Start button to automatically start the Microwave function at maximum power (900W) for 30 seconds. Each additional pressure will increase the cooking time of 30 seconds. You can also increase or decrease the time by rotating the Knob after the function has started.

 **DUAL STEAM**

- This function allows you to obtain healthy and natural tasting dishes by cooking with steam. Use this function with the provided Dual Steamer to steam cook foods such as vegetables and fish. The particular Dual Steamer design allows to cook more the same food and allows to cook different food in good match.
- The Cooking time should be set manually, the microwave oven sensor will adjust the Microwave power automatically.
- The Dual Steamer recommended recipes are included in Instructions For Use.

		1-VEGETABLES
P1		Potatoes,baked
P2		Tomatoes,baked
P3		Carrots, steamed
P4		Broccoli, steamed
P5		Potatoes,steamed
P6		Frozen vegetables, steamed

		2-CHICKEN
P1		Chicken Fillets,fried
P2		Chicken Legs,fried
P3		Chicken Fillets,steamed

		3-MEAT
P1		beef,roasted
P2		Lamb,roast
P3		Entrecote,grilled
P4		Bacon,Fried


		4-FISH/SEA FOOD
P1		Fish Fillets,Steamed
P2		Frozen coated fillets,fried
P3		Shrimps,steamed
P4		Breaded Shrimps,Frozen
P5		Fish Cutlets,steamed
P6		Scallops,steamed

		5-PIZZA/ QUICHE
P1		Home made pizza
P2		Quiche Lorraine
P3		Pan Style Pizza,Frozen
P4		Thin pizza,Frozen
P5		Fresh pizza

		6-PASTA/ LASAGNA
P1		Fresh lasagna
P2		Frozen lasagna
P3		Pasta,steamed

		7-RICE/ CEREALS
P1		Rice, steamed
P2		Spelt, steamed
P3		Quinoa, steamed

		8-DESSERTS / PASTRIES
P1		Home Made Fruit Pie
P2		Scones
P3		Crisp cake
P4		Nuts, roast
P5		Fruit, steamed
P6		Sponge cake(light)
P7		Muffins
P8		Biscuits
P9		Meringues
P10		Yogurt

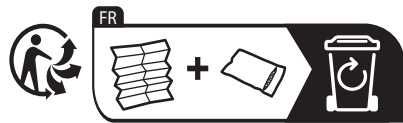

## ACCESSORIES

- Microwave and oven proof dish
- Crisp handle & Crisp plate
- Steamer (single layer steamer)
- Steamer (bottom and lid)
- Low rack
- High rack

A complete description of each of the Chef Menu recipes is included in the Instructions For Use.