

THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.

In order to receive a more complete assistance, please register your product on www.whirlpool.eu/register



Before using the appliance carefully read the Safety Instruction.


Before using the machine, it is imperative that the transport bolts are removed. For more detailed instructions on how to remove them, see the Installation Guide.

CONTROL PANEL

- 1 "ON/OFF" button
- 2 Programme selector
- 3 "Start/Pause" button
- 4 "Spin" button
- 5 "Start delay" button
- 6 "FreshCare+" button
- 7 "Temperature" button

DISPLAY INDICATORS

- Door locked
- FreshCare+ activated
- Start delay activated

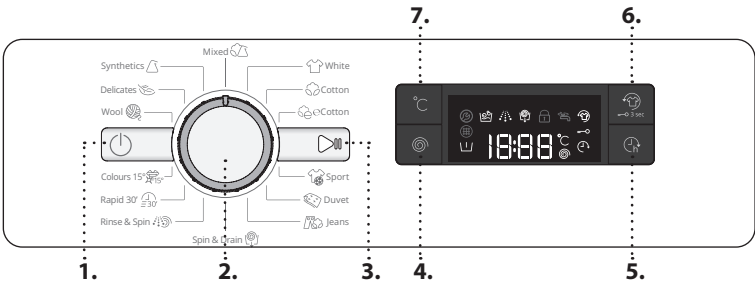

Key lock activated —○

Washing phase —○ —○ —○
Indicates washing phase of the cycle

Failure: Call Service —○
Refer to Troubleshooting section

Failure: Water filter clogged —○
Water cannot be drained; water filter might be blocked

Failure: No water —○
No or not sufficient inlet water.

In the event of any failure, refer to the "TROUBLESHOOTING" section

PROGRAMME CHART

Max load 7 Kg Power consumption in off-mode 0.5 W / in left-on mode 8.0 W							Detergents and additives			Recommended detergent		Residual dampness %	Energy consumption kWh	Total water lt
Programme		Temperatures		Max. spin speed (rpm)	Max load (kg)	Duration (Minutes)	Prewash	Main wash	Softener	Powder	Liquid			
		Default	Range											
	Mixed	40°C	❄ - 40°C	1000	3.5	**	—	●	○	—	✓	—	—	—
	White	60°C	❄ - 90°C	1000	7.0	**	● (90°)	●	○	✓	✓	—	—	—
	Cotton	40°C	❄ - 60°C	1000	7.0	220	—	●	○	✓	✓	62	0.98	75
	eCotton	60°C	❄ - 60°C	1000	7.0	275	—	●	○	✓	✓	62	0.89	49
	Sport	40°C	❄ - 40°C	600	3.5	**	—	●	○	—	✓	—	—	—
	Duvet	30°C	❄ - 30°C	1000	2.0	**	—	●	○	—	✓	—	—	—
	Jeans	40°C	❄ - 40°C	800	3.5	**	—	●	○	—	✓	—	—	—
	Spin & Drain	—	—	1000	7.0	**	—	—	—	—	—	—	—	—
	Rinse & Spin	—	—	1000	7.0	**	—	—	○	—	—	—	—	—
	Rapid 30'	30°C	❄ - 30°C	800	3.0	**	—	●	○	—	✓	—	—	—
	Colours 15°	15°C	15°C	1000	3.5	**	—	●	○	—	✓	—	—	—
	Wool	40°C	❄ - 40°C	800	1.5	**	—	●	○	—	✓	—	—	—
	Delicates	30°C	❄ - 30°C	—	1.0	**	—	●	○	—	✓	—	—	—
	Synthetics	40°C	❄ - 60°C	1000	4.0	195	—	●	○	✓	✓	33	0.75	72

● Dosing required ○ Dosing optional

e Cotton - Test wash cycles in compliance with regulations 1061/2010
These are the reference programs for the energy label. Set this wash cycle with a temperature of 60°C. They are the most efficient programmes in terms of energy and water consumption for washing normally soiled cotton laundry. The actual water temperature may differ from the declared one.

For all Test Institutes
Long wash cycle for cottons: set wash cycle **Cotton** with a temperature of 40°C.
Synthetic program along: set wash cycle Synthetics with a temperature of 40°C.


This data may differ in your home due to changing conditions in inlet water temperature, water pressure etc. Approximate programme duration values refer to the default setting of the programmes, without options.

* After programme end and spinning with maximum selectable spin speed, in default programme setting.

** **The duration of the programme is shown on the display.**
The washer adapts water, energy and programme duration to your wash load

PRODUCT DESCRIPTION

- 1. Worktop
- 2. Detergent dispenser
- 3. Control panel
- 4. Door handle
- 5. Door
- 6. Water filter - behind plinth
- 7. Plinth (removable)
- 8. Adjustable feet (4)

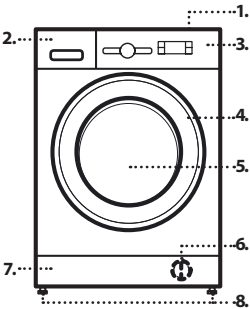

DETERGENT DISPENSER


Main wash compartment
Detergent for the main wash, stain remover or water softener. For a liquid detergent it is recommended to use removable plastic partition **A** (supplied) for a proper dosage. If powder detergent is used, place the partition into slot **B**.

Prewash compartment
Detergent for the prewash.

Softener compartment
Fabric softener. Liquid starch.

Pour in softener or starch solution only up to the "max" mark.

Release button
Press to remove tray for cleaning.

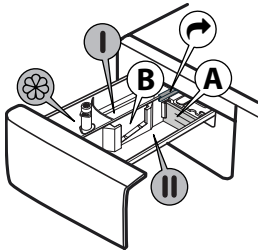

PROGRAMMES

For choosing the appropriate programme for your kind of laundry, always respect the instructions on the care labels of the laundry. The value given in the tub symbol is the maximum temperature possible for washing the garment.



Mixed

For washing lightly to normally soiled resilient garments in cotton, linen, synthetic fibres and mixed fibres.

White

For washing normally to heavily soiled towels, underwear, table and bed linen, etc in resilient cotton and linen. Only when the temperature is selected at 90°C the cycle is provided with a prewash phase before main washing phase. In this case it is recommended to add detergent both, in the prewash and main wash section.

Cotton

Normally to heavily soiled and robust cottons .

e Cotton

For washing normally soiled cotton garments. At 60°C, this is the standard cotton programme and the most efficient in terms of water and energy consumption.

Sport

For washing lightly soiled sports clothing (tracksuits, shorts, etc.). For best results, we recommend not exceeding the maximum load indicated in the, "PROGRAMME CHART". We recommend using liquid detergent , and adding the amount suitable for half-load.

Duvet

Designed for washing eiderdown padded items such as double or single duvets, cushions and anoraks. It is recommended to load such padded items in the drum with the edges folded inwards and not to exceed ¾ of the drum's volume. For optimal washing, we recommend using a liquid detergent.

Jeans

Turn garments inside-out before washing and use a liquid detergent.

Spin & Drain

Spins the load then empties the water. For resilient garments. If you exclude the spin cycle, the machine will drain only

Rinse & Spin

Rinses and then spins. For resilient garments.

Rapid 30'

For washing lightly soiled garments quickly. This cycle lasts only 30 minutes, saving time and energy.

Colours 15°

This cycle helps protect colours by washing in cold water (15°C) and uses less energy to heat the water while still offering satisfactory wash results. Suitable for lightly soiled, unstained garments. This cycle offers wash results comparable to 40°C mixed at just 15°C

Wool

All wool garments can be washed using programme, "Wool" even those carrying the "hand-wash only" label. For best results, use special detergents and **do not exceed max kg declaration of laundry.**

Delicates

For washing particularly delicate garments. Preferably turn garments inside out before washing.

Synthetics

For washing soiled garments made from synthetic fibres (such as polyester, polyacrylic, viscose, etc.) or cotton/synthetic blends.

FIRST TIME USE

To remove any manufacturing debris select the "Cotton"  programme at a temperature of 60°C. Pour a small quantity of detergent powder into the main wash  compartment of the detergent dispenser (maximum 1/3 of the quantity the detergent manufacturer recommends for lightly soiled laundry). Start the programme **without adding any laundry.**

DAILY USE

Prepare your laundry according to the recommendations in the "HINTS AND TIPS" section. Load the laundry, close the door, open the water tap and press the "ON/OFF"  button to switch the washing machine on, the "Start/Pause"  button flashes. Turn the programme selector to the desired programme and select any option if needed. The temperature and spin speed can be changed by pressing the "Temperature"  button or the "Spin"  button. Pull out the detergent dispenser and add the detergent (and additives/softener) now. Observe the dosing recommendations on the detergent pack. Then close the detergent.

STARTING CYCLE

Press the "Start/Pause"  button.

The machine will lock the door ( symbol on) and the drum will start to rotate; the door will be unlocked ( symbol OFF) and then locked again ( symbol on) as preparation phase of each washing cycle. The "Clicking" noise is part of the door locking mechanism. Water will enter the drum and start the washing phase once the door is locked.

PAUSE A RUNNING PROGRAMME

To pause the wash cycle, press the "Start/Pause" ; the indicator light will go off and the remaining time on display flash. To start the wash cycle from the point at which it was interrupted press the button again.

OPEN THE DOOR, IF REQUIRED

After starting a programme, the "Door locked"  indicator lights up to show that the door can not be opened. As long as a wash programme is running, the door remains locked. To open the door while a programme is in progress, press the "Start/Pause"  to pause the programme. Provided the water level and/or temperature is/are not too high, the "Door locked"  indicator light goes off and you can open the door. For example to add or remove laundry. Press the "Start/Pause"  button again to continue the programme.

PROGRAMME END

The "Door locked"  indicator light goes off and the display shows "End". To switch off the washing machine after programme ends press the "ON/OFF"  button, the lights goes off. If you do not press "ON/OFF"  button, the washing machine will switch off automatically after about a half of an hour. Close the water tap, open the door and unload the washing machine. Leave the door ajar to allow the drum to dry.

OPTIONS

! If the selected option is incompatible with the programme set, the incompatibility will be signalled by a buzzer (3 beeps) and the corresponding indicator light will flash.

! If the selected option is incompatible with another previously set option, only the most recent selection will remain active.

Start delay

To set the selected programme to start at a later time, press the button to set the desired delay time. Symbol  lights on the display when this function is enabled. To cancel the delayed start, press the button again until the value, "0" is shown on the display.

FreshCare+

This option enhances washing performance by generating steam to inhibit the proliferation of the main bad odour sources inside the machine. After steam phase, the washing machine will perform gentle tumbling through slow rotations of the drum. FreshCare+ option starts after the cycle ends for a maximum duration of 6h and you can interrupt it at any time by pressing any button on control panel or turning the knob. Wait around 5 minutes before door can be opened.

Temperature

Every programme has a predefined temperature. If you want to change the temperature, press the "Temperature"  button. The value appears on the display.

Spin

Every programme has a predefined spin speed. If you want to change the spin speed, press the "Spin"  button. The value appears on the display.

Demo mode

This appliance is equipped with Demo mode function. For more information see the USER MANUAL/ Demo Mode.

KEY LOCK

To lock the control panel, press and hold the "Key lock"  button for approximately 3 seconds. When the display visualises a key symbol , the control panel is locked (with the exception of the "ON/OFF"  button). This prevents unintentional changes to programmes, especially with children near the machine. To unlock the control panel, press and hold the "Key lock"  button for approximately 3 seconds again.

BLEACHING

If you wish to bleach the laundry, load the washing machine and set the "Rinse & Spin" programme .

Start the machine and wait for it to complete the first water filling cycle (roughly 2 minutes). Put the machine in pause mode by pressing the "Start/Pause"  button, open the detergent drawer and pour the bleach (observe the recommended doses indicated on the package) into the main wash compartment where the partition was previously mounted. Restart the cycle by pressing the "Start/Pause"  button.

If desired, it is possible to add fabric softener into the appropriate compartment of the detergent drawer.

HINTS AND TIPS

Sort your laundry according to

Type of fabric/care label (cotton, mixed fibres, synthetics, wool, handwash items). Colour (separate coloured and white items, wash new coloured items separately). Delicates (wash small items – like nylon stockings – and items with hooks – like bras – in a cloth bag or pillow case with zip).

Empty all pockets

Objects like coins or lighters can damage your laundry as well as the drum.

CLEANING & MAINTENANCE

For any cleaning and maintenance, switch off and unplug the washing machine. Do not use flammable fluids to clean the washing machine.

Cleaning the outside of the washing machine

Use a soft damp cloth to clean the outer parts of the washing machine. Do not use glass or general purpose cleaners, scouring powder or similar to clean the control panel – these substances might damage the printing.

Checking the water supply hose

Check the inlet hose regularly for brittleness and cracks. If damaged, replace it by a new hose available through our After-Sales Service or your specialist dealer. Depending on the hose type: If the inlet hose has a transparent coating, periodically check if the colour intensifies locally. If yes, the hose may have a leak and should be replaced.

Cleaning the mesh filters in the water supply hose

Close the tap and loosen the inlet hose on the tap. Clean the internal mesh filter and screw the water inlet hose back onto the tap. Now unscrew the inlet hose on the rear of the washing machine. Pull off the mesh filter from the washing machine connection with universal pliers and clean it. Refit the mesh filter and screw the inlet hose on again. Turn on the tap and ensure that the connections are completely water-tight.

Cleaning the water filter / draining residual water

If you used a hot wash programme, wait until the water has cooled down before draining any water. Clean the water filter regularly, to avoid that the water cannot drain after the wash due to obstruction of the filter. If the water cannot drain, the display indicates that the water filter may be clogged.

Remove the plinth by using the screwdriver: push downwards one side of the plinth with your hand, then push the screwdriver into the gap between plinth and front panel and pry open the plinth. Place a broad, flat container beneath the water filter, to collect the drain water. Slowly turn the filter counterclockwise until water flows out. Let the water flow out, without removing the filter. When the container is full, close the water filter by turning it in clockwise. Empty the container. Repeat this procedure until all the water has drained. Lay a cotton cloth beneath the water filter, which can absorb a small amount of rest water. Then remove the water filter by turning it out anti clockwise. Clean the water filter: remove residues in the filter and clean it under running water. Insert the water filter and reinstall the plinth: Reinsert the water filter again by turning it in clockwise direction. Make sure to turn it in as far as it goes; the filter handle must be in vertical position. To test water tightness of the water filter, you can pour about 1 liter of water into the detergent dispenser. Then reinstall the plinth.

ACCESSORIES

Contact our After-Sales Service to check if the following accessories are available for your washing machine model.

Stacking kit shelf

By which your dryer can be fixed on top of your washing machine to save space and to facilitate loading and unloading your dryer in the higher position.

TRANSPORT AND HANDLING

Never lift the washing machine by holding it at the worktop.

Pull out the mains plug, and close the water tap. Make sure that door and detergent dispenser are properly closed. Disconnect the inlet hose from the water tap, and remove the drain hose from your draining point. Remove all rest water from the hoses, and fix them so that they cannot get damaged during transport. Refit the transport bolts. Follow the instructions for removing the transport bolts in the INSTALLATION GUIDE in reverse order.

TROUBLESHOOTING


The washing machine may sometimes not work properly for certain reasons. Before calling the After-sales service, it is recommended to check to see if the problem can be easily resolved using the following list.

Anomalies:	Possible causes / Solution:
The washing machine does not turn on.	- The plug is not inserted into the electrical outlet, or not enough to make contact. - There has been a power failure. - The door is not fully closed.
The wash cycle does not start.	- The "ON/OFF"  button has not been pressed. - The "Start/Pause"  button has not been pressed. - The water tap is not open. - A "Start delay"  has been set.
The washing machine does not fill with water (the message "h2o" is shown on the display). "Beep" sound every 5 seconds.	- The water intake hose is not connected to the tap. - The hose is bent. - The water tap is not open. - The mains water supply has been shut off. - There is not enough pressure.
The washing machine loads and drains water continuously.	- The "Start/Pause"  button has not been pressed. - The drain hose has not been installed at 65 to 100 cm from the ground. - The end of the drain hose is immersed in water. - The drain connector on the wall does not have an air vent. - If the problem persists after having performed these checks, close the water tap, shut off the washing machine, and call the After-sales service. If the dwelling is located on one of the uppermost floors of a building, a siphon effect can sometimes occur, thus causing the washing machine to load and drain water continuously. Special anti-siphon valves are available on the market to prevent these types of problems.
The washing machine does not drain or does not spin.	- The programme does not include the draining function: with certain programmes it must be activated manually. - The drain hose is bent. - The drain line is obstructed.
The washing machine vibrates excessively during the spin cycle.	- At the time of installation, the drum was not properly unblocked. - The washing machine is not level. - The washing machine is squeezed between furniture and the wall.
The washing machine leaks water.	- The water intake hose has not been tightened properly. - The detergent dispenser is clogged. - The drain hose has not been properly fastened.
The machine is locked and the display flashes, indicating an error code (e.g. F-01, F-..).	- Shut off the machine, disconnect the plug from the outlet, and wait about 1 minute before turning it back on. - If the problem persists, call the After-sales service.
Too much foam is formed.	- The detergent is not compatible with the washing machine (it must bear the wording "for washing machines", "for hand washing and washing machines", or something similar). - The dosage was excessive.
Door is locked, with or without failure indication, and the programme does not run.	- Door is locked in case of power breakdown. Programme will continue automatically as soon as the mains is available again. - Washing machine is in a standstill. Programme will continue automatically after the origin of the standstill does not persist anymore.



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website - docs.whirlpool.eu
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

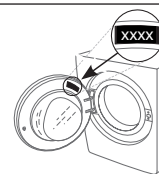

نشرك على شركائنا أحد منتجات شركة Whirlpool. للحصول على مساعدة كاملة، يرجى تسجيل جهازك على الموقع www.whirlpool.eu/register




قبل استخدام الجهاز، احرص على قراءة إرشادات الأمان بعناية. قبل استخدام الغسالة، يلزم خلع براغي النقل. لمزيد من التعليمات التفصيلية عن كيفية خلعهم، انظر دليل التركيب.



لوحة التحكم

- زر "التشغيل/الإيقاف"
 - مفتاح اختيار البرنامج
 - زر "بدء التشغيل/الإيقاف المؤقت"
 - زر "العصر"
 - زر "تأخير بدء التشغيل"
 - زر "FreshCare"
 - زر "درجة الحرارة"
- المؤشرات بوحدة العرض
الباب مغلق
وظيفة FreshCare + مفعلة
تأخير بدء التشغيل مفعّل

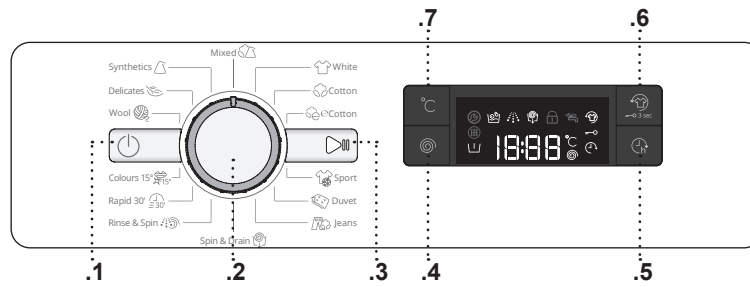

فعل المفاتيح مفعّل
إشارة إلى مرحلة الغسيل بالدورة
خطأ: اتصال بالخدمة
راجع جزء التغلب على الأعطال
خطأ: انسداد فلتر الماء
لا يمكن تصريف الماء، قد يكون فلتر الماء مسدوداً
خطأ: لا يوجد ماء
الماء الداخل غير كافٍ أو غير موجود.
في حالة حدوث أية اختلالات، يرجى الرجوع إلى جزء "التغلب على الأعطال"

مخطط البرامج

مقدار الماء الإجمالي بالتر	استهلاك الطاقة بالكيلوواط	المتبقية %	مواد التنظيف الموصى بها		المنظفات والإضافات			الكمية القصوى 7 كجم				استهلاك الطاقة في وضع الإيقاف هو 0.5 واط/في وضع الترك مشغلا هو 8.0 واط	
			مسحوق	سائل	مُنعم الملابس	غسل رئيسي	غسل أولي	المدة (دقائق)	كمية الغسيل القصوى (كجم)	عدد لفات العصر (لفة/دقيقة)	درجات الحرارة		البرنامج
											الحد الافتراضي	النطاق	
—	—	—	✓	—	○	●	—	**	3.5	1000	40 °م	40 °م - 40 °م	مختلط
—	—	—	✓	✓	○	●	● (90°)	**	7.0	1000	60 °م	90 °م - 90 °م	ملابس بيضاء
75	0.98	62	✓	✓	○	●	—	220	7.0	1000	40 °م	60 °م - 60 °م	أقطن
49	0.89	62	✓	✓	○	●	—	275	7.0	1000	60 °م	60 °م - 60 °م	أقطن e
—	—	—	✓	—	○	●	—	**	3.5	600	40 °م	40 °م - 40 °م	رياضية
—	—	—	✓	—	○	●	—	**	2.0	1000	30 °م	30 °م - 30 °م	ألحفة
—	—	—	✓	—	○	●	—	**	3.5	800	40 °م	40 °م - 40 °م	جينز
—	—	—	—	—	—	—	—	**	7.0	1000	—	—	عصر وتصريف
—	—	—	—	—	○	—	—	**	7.0	1000	—	—	شطف وعصر
—	—	—	✓	—	○	●	—	**	3.0	800	30 °م	30 °م - 30 °م	سريع 30'
—	—	—	✓	—	○	●	—	**	3.5	1000	15 °م	15 °م - 15 °م	Colours 15°
—	—	—	✓	—	○	●	—	**	1.5	800	40 °م	40 °م - 40 °م	أصواف
—	—	—	✓	—	○	●	—	**	1.0	—	30 °م	30 °م - 30 °م	حساس
72	0.75	33	✓	✓	○	●	—	195	4.0	1000	40 °م	60 °م - 60 °م	ألياف صناعية

● المعايير ضرورية ○ المعايير اختيارية


وضغط الماء وخلافه. تشير أزمنة البرامج التقريبية إلى وضع الضبط الأساسي للبرامج، دون اختيار وظائف اختيارية. * بعد انتهاء البرنامج والعصر باستخدام أقصى عدد للوقت العصر يمكن اختياره، في إعداد البرنامج الافتراضي. تظهر مدة البرنامج على وحدة العرض. تقوم الغسالة تقوم بمواءمة الماء والطاقة ومدة البرنامج مع كمية الغسيل لديك.

برنامج أقطن - دورات غسل مختبرة طبقاً للوائح المواصفة 1061/2010 وهي بمثابة برامج مرجعية لملصق الطاقة. اضبط درجة حرارة دورات الغسل هذه على 60°م. وتعد هذه البرامج هي الأكثر كفاءة فيما يتعلق باستهلاك الطاقة والماء عند غسل الملابس القطنية ذات الاتساخات العادية. وقد تختلف درجة الحرارة الفعلية عن الدرجة المعلن عنها في الجدول.

يسري على جميع معاهد الاختبار دورة غسل طويلة للأقطن: اضبط دورة غسل برنامج أقطن على درجة حرارة 40°م. برنامج الألياف الصناعية طوال الوقت: اضبط دورة غسل برنامج الألياف الصناعية على درجة حرارة 40°م. قد تختلف هذه البيانات عما هو عليه الحال في منزلك نظراً لتغير الظروف المتعلقة بدرجة حرارة الماء المسحوب

شرح المنتج

- سطح العمل
- درج مادة الغسل
- لوحة التحكم
- مقبض الباب
- الباب
- فلتر الماء - خلف القاعدة
- قاعدة (قابلية للخلع)
- أرجل قابلة للضبط (4)

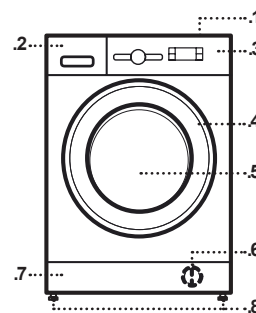

درج مادة الغسل

حجيرة الغسل الرئيسي

حجيرة للغسل الرئيسي، مزبل البقع أو منع الماء. بالنسبة للمنظفات السائلة ننصح باستخدام الدرج البلاستيكي المقابل للخلع A (مورد) لضمان المعايير الصحيحة. وفي حالة استخدام مسحوق تنظيف، أدخل الدرج في الفتحة B.

حجيرة الغسل الأولي


مادة الغسل الخاصة بالغسل الأولي.

حجيرة المنعم

منعم الملابس. نشأ سائل. قم بصب المنعم أو محلول النشا حتى علامة «الحد الأقصى» فقط.

زر التحرير

اضغط لإزالة الدرج لتنظيفه.

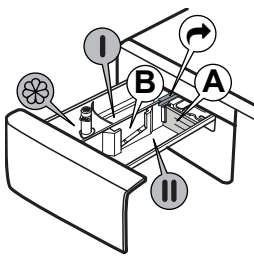

لاختيار البرنامج المناسب لنوع الغسيل، احرص دائما على اتباع التعليمات الموضحة على تيكيتات الغاية الموجودة على الملابس. القيمة المبينة على رمز الحوض تعبر عن درجة الحرارة القصوى لغسل قطعة الملابس.

ملابس بيضاء  لغسل الملابس الداخلية ومفارش المائدة والأسرة وغيرها ذات الاستساخات العادية حتى الشديدة والمصنوعة من القطن أو الكتان. يتم تزويد الدورة بمرحلة غسل أولي قبل مرحلة الغسل الأساسي فقط في حالة ضبط درجة الحرارة على 90°. وفي هذه الحالة نوصي بإضافة مادة التنظيف في كلا الدورتين، الغسل الأولي والغسل الأساسي.

أفطن
لغسل الملابس القطنية ذات الاتساخات العادية. برنامج قياسي للملابس القطنية عند درجة حرارة 60°م وأكثرها كفاءة فيما يتعلق باستهلاك الماء والطاقة.

ألففة  برنامج مصمم لغسل القطع المبطنة بالريش مثل الألففة ثنائية أو أحادية الطبقة، الوسادات والمعاطف. ننصح بوضع الملابس المبطنة في الحلة بحيث تكون أطرافها مطوية للداخل ولا تتعدى مقدار 3/4 من مساحة الحلة. ونوصيك باستخدام المنظفات السائلة للحصول على نتائج غسل مثالية.

عصر وتصريف يقوم بعصر كمية الغسيل وتصريف الماء بعد ذلك. للملابس المرنة. سوف يقوم الجهاز بالتصريف فقط إذا قمت باستبعاد دورة العصر

سريع 30'  لغسل الملابس ذات الاتساخات الخفيفة بسرعة. تستمر هذه الدورة لمدة 30 دقيقة، وتتسم بتوفير الوقت والطاقة.

Colours 15°  تساهم هذه الدورة في حماية الملابس الملونة عند الغسل في الماء البارد (15°م) وتستخدم أقل مقدار من الطاقة لتسخين الماء في ظل تحقيق نتائج غسل مرضية. للملابس المتسخة بعض الشيء وغير المشتملة على بقع. وتحقق هذه الدورة نتائج غسل مماثلة لدورة غسل كمية مختلطة بدرجة 40°م عند 15°م فقط.

أصواف  باستخدام برنامج "أصواف" يمكن غسل جميع الملابس الصوفية حتى التي تحمل التيكيت "غسل يدوي فقط". وللحصول على أفضل النتائج، استخدم مواد التنظيف المخصصة ولا تتعدى كمية الغسيل القصوى المحددة بالكيلو الجرام والموضحة في الجدول.

حساس لغسل الملابس شديدة الحساسية. من الأفضل قلب الملابس قبل غسلها.

ألياف صناعية  لغسل الملابس المتسخة المصنوعة من الألياف الصناعية (مثل البوليستر أو البولي أكريليك أو الفيسكوز، الخ) أو الأقمشة القطنية/الصناعية المختلطة.

للتخلص من أية شوائب ناتجة عن التصنيع، اختر برنامج "أقطان" في درجة حرارة 60 °م. ضع كمية صغيرة من مسحوق الغسل في حبيرة الغسل الرئيسية | بدرجة مادة الغسل (بعد أقصى 1/3 الكمية الموصى بها من قبل الجهة الصانعة لمادة الغسل للغسيل المتسخ بدرجة خفيفة). ابدأ تشغيل البرنامج دون إضافة غسيل.

قم بتحضير الغسيل وفقاً للتوصيات الواردة في جزء "إرشادات ونصائح". ضع الغسيل وأغلق الباب ثم افتح صنبور الماء واضغط على زر "التشغيل/الإيقاف" ① لتشغيل الغسالة، فيومض الزر "بدء التشغيل/الإيقاف المؤقت" ②. أدر مفتاح اختيار البرنامج إلى البرنامج المرغوب واختر الوظيفة الاختيارية المطلوبة. يمكن تغيير درجة الحرارة وعدد لغات العصر بالضغط على زر "درجة الحرارة" ③. أوزر "المصير" ④. اسحب درج مادة الغسل وأضف مادة الغسل إليه (والإضافات/المنعم) عندئذ. تراع المعايير الموصى بها على عبوة مادة الغسل. بعد ذلك ألق درج مادة الغسل.

بدء الدورة
 اضغط على زر «بدء/إيقاف مؤقت»  مؤقت.
 ستغلق الغسالة الباب (الرمز ) مضىء) وستبدأ الحلة في الدوران؛ وسيفتح الباب (الرمز )
 (مطفأ) ثم يغلق مرة أخرى (الرمز ) مضىء) كمرحلة تحضير لكل دورة غسيل. وصوت
 «الطفقطة» جزء من البية قفل الباب. سيبدأ الماء إلى الحلة وتبدأ الباب. سيبدأ الماء إلى الحلة
 وتبدأ مرحلة الغسل بمجرد قفل الباب.

اضغط على الزر "بدء التشغيل/الإيقاف المؤقت" لإيقاف دورة الغسل مؤقتاً، ستستطع لمبة المبين ويومض الوقت المتبقي على وحدة العرض. أعد الضغط على الزر لاستئناف تشغيل دورة الغسل من اللحظة التي توقف عندها.

بعد بدء تشغيل برنامج، يضني مبین "تأمين قفل الباب" للإشارة إلى عدم إمكانية فتح الباب. ويوبيقى الباب مؤمنا القفل طوال مدة تشغيل البرنامج. لفتح الباب أثناء تشغيل برنامج ما، اضغط على زر "بدء التشغيل/الإيقاف المؤقت" لإيقاف البرنامج مؤقتا. إذا لم يكن مستوى الماء و/ أو درجة الحرارة مرتفع للغاية، تنطفئ لمبة مبین "تأمين قفل الباب" ويمكن فتح الباب عندئذ. لإضافة أو إخراج غسيل على سبيل المثال. اضغط على زر "بدء التشغيل/الإيقاف المؤقت" مجددا لمواصلة البرنامج.

ينطفئ مبین "تأمين قفل الباب" ويظهر في وحدة العرض البيان "End". لإيقاف الغسالة بعد انتهاء البرنامج ضغط على الزر وستنطفئ المبة. إذا لم تضغط على الزر "التشغيل/الإيقاف" سوف تتوقف الغسالة أوتوماتيكيا بعد مضي نصف ساعة تقريبا. أغلق صنبور الماء، افتح الباب وأخرج الغسيل من الغسالة. اترك الباب مفتوحا بشكل جزئي، للسماح بتجفيف الحلة.

!! إذا لم تتوافق الوظيفة الاختيارية المحددة مع البرنامج المضبوط، سيتم الإشارة إلى عدم التوافق من خلال صوت إنذار (3 صافرات) وستومض لعبة المبین المعنیه.

!! إذا لم تتوافق الوظيفة الاختيارية المحددة مع وظيفة اختيارية محددة مسبقاً، فسيبقى أكثر الاختيارات فعالاً.

تأخير بدء التشغيل (J_h) اضبط البرنامج المختار للبدء في وقت لاحق، اضغط على الزر لضبط زمن التأخير المرغوب. يضبط الرمز (J_h) على وحدة العرض عند تفعيل هذه الوظيفة. لإلغاء بدء التشغيل اللاحق، اضغط على الزر مرة أخرى إلى أن تظهر القيمة "0" على وحدة العرض.

وظيفة +FreshCare  تساهم هذه الوظيفة الاختيارية في تعزيز قدرة الغسل من خلال توليد البخار لمنع انتشار مصادر الروائح الكريهة المتواجدة داخل الجبان. وبعد انتهاء مرحلة البخار، تقوم الغسالة بإجراء مرحلة تقليب خفيف عبر تدوير الحلة عدة لفات خفيفة. وتبدأ الوظيفة الاختيارية +FreshCare بعد انتهاء الدورة وتستمر لأقصى مدة تبلغ ست ساعات ويمكنك إيقافها في أي وقت واضغط على أي زر في لوحة التحكم أو من خلال إدارة المفتاح. وانتظر لمدة 5 دقائق قبل فتح الباب.

درجة الحرارة $^{\circ}\text{C}$ يشتمل كل برنامج على درجة حرارة محددة مسبقاً. عند الرغبة في تغيير درجة الحرارة، اضغط على الزر "درجة الحرارة" $^{\circ}\text{C}$. وستظهر القيمة في وحدة العرض.

عصر

ضع قطعة قماش قطنية أسفل فلتر الماء حتى يمكنها امتصاص كمية صغيرة من الماء المتبقى. ثم اخلع فلتر الماء من خلال إدارته عكس اتجاه حركة عقارب الساعة. قم بتنظيف فلتر الماء: قم بإزالة بقايا الماء في الفلتر وقم بتنظيفه بماء الصنبور. قم بتركيب فلتر الماء وأعد تركيب القاعدة: أعد تركيب فلتر الماء مرة أخرى من خلال إدارته في اتجاه حركة عقارب الساعة. تأكد من إدارته حتى النهاية، يجب أن يكون مقبض الفلتر في وضع رأسي. لاختبار إحكام فلتر الماء ضد تسريب الماء، يمكنك صب لتر واحد من الماء في درج مواد الغسل. أعد تركيب القاعدة.

الملحقات

اتصل بخدمة ما بعد البيع لدينا للتحقق من توافر الكماليات لطرز الغسالة الذي لديك.

رف طقم الرص

يمكن من خلاله تثبيت مجففك على السطح العلوي لغسالتك لتوفير المكان وتسهيل وضع وإخراج الغسيل من مجففك في الوضع الأعلى.

النقل والمناولة

لا تقم أبدا برفع الغسالة من خلال إمساكها من منصة العمل.

انزع القابض الكهربائي، وأغلق صنبور الماء. تأكد من غلق الباب ودرج مواد الغسل بشكل صحيح. افصل خرطوم السحب من صنبور الماء، واخلع خرطوم التصريف من نقطة التصريف. قم بإزالة الماء المتبقي بالكامل من الخراطيم، وقم بتثبيتها بحيث لا تتضرر أثناء النقل. أعد تركيب براغي النقل. اتبع تعليمات فك براغي النقل الواردة في دليل التركيب بترتيب عكسي للخطوات.

التبييض

عند الرغبة في تبييض الغسيل، ضع الغسيل في الملابس واضبط على البرنامج "شطف وعصر" .

ابدا تشغيل الجهاز ثم انتظر حتى تكتمل الدورة الأولى لمء الماء (حوالي دقيقتين). أوقف الجهاز مؤقتًا بالضغط على الزر "بدء التشغيل/الإيقاف المؤقت" ، ثم افتح درج مادة الغسل وأضف مادة التبييض (مع مراعاة الجرعات الموصى بها والموضحة على العبوة) في حجرة الغسل الرئيسي المركب بها الدرج مسبقًا. أعد تشغيل الدورة بالضغط على الزر "بدء التشغيل/الإيقاف المؤقت" .

عند الرغبة يمكنك إضافة منعم الملابس في الحجرة المناسبة بدرج مادة الغسل.

إرشادات ونصائح

قم بفرز الغسيل تبعاً للاتي

نوع القماش/تكتيت العناية (القطن، ألياف مختلطة، الألياف الصناعية، صوف، الملابس التي يتم غسلها يدويًا). اللون (قم بفصل الملابس الملونة والبيضاء، اغسل الملابس الملونة الجديدة بشكل منفصل). المنسوجات الحساسة (قم بغسل قطع الملابس الصغيرة – مثل جوارب النايلون – والملابس ذات الخطافات – مثل حمالات الصدر – في كيس قماشى أو كيس وسادة مغلق بسحاب).

قم بتفريغ جميع الجيوب

أشياء مثل العملات المعدنية والولاعات قد تسبب أضرار لغسالتك بالإضافة للحلة.

التنظيف والصيانة

قم بإيقاف الغسالة وافصلها عن الكهرباء قبل الشروع في إجراء أعمال تنظيف أو صيانة. لا تستخدم السوائل القابلة للاشتعال لتنظيف الغسالة.

تنظيف الغسالة من الخارج

استخدم قطعة قماش مبللة قليلا لتنظيف الأجزاء الخارجية للغسالة. لا تستخدم منظفات الاستخدام العامة أو مسحوقا خشنا أو ما شابه لتنظيف لوحة التحكم – فهذه المواد يمكن أن تلحق الضرر بالطلاء.

فحص خرطوم إمداد الماء

افحص خرطوم إمداد الماء بصفة منتظمة بحثا عن الهشاشة أو التشققات. وفي حالة وجود ضرر، فاستبدله بخرطوم جديد لدى مركز خدمة ما بعد البيع أو لدى الوكيل المتخصص. حسب نوع الخرطوم: إذا كان خرطوم السحب يحتوي على طلاء شفاف، فافحصه من وقت لآخر لمعرفة ما إذا كانت كثافة اللون تزيد في مواضع معينة. إذا كان الأمر كذلك، فربما يكون هناك تسريب في الخرطوم ويجب تغييره

تنظيف الفلاتر الشبكية في خرطوم إمداد الماء

أغلق صنبور الماء وقم بحل خرطوم السحب من الصنبور. قم بتنظيف الفلتر الشبكي الداخلي ثم اربط خرطوم سحب الماء بالصنبور مرة أخرى. والآن، قم بفك خرطوم السحب من ظهر الغسالة. افصل الفلتر الشبكي من وصلة الغسالة باستخدام زردية عامة ثم قم بتنظيف الفلتر. أعد تركيب الفلتر الشبكي ثم اربط خرطوم السحب بالغسالة مرة أخرى. افتح صنبور الماء وتأكد أن جميع الوصلات محكمة تماما ضد تسريب الماء.

تنظيف فلتر الماء / تصريف الماء المتبقى

إذا استخدمت برنامج غسل ساخنا، فانتظر حتى يبرد الماء قبل

تصريفه. قم بتنظيف الفلتر بصفة منتظمة، وتجنب حدوث إعاقة

لتصريف الماء بعد الغسل بسبب انسداد الفلتر. إذا تعذر تصريف الماء،


توضح وحدة عرض أن فلتر الماء قد يكون مسدودا.

اخلع القاعدة باستخدام مفك: اضغط أحد جانبي القاعدة لأسفل بيدك ثم أدخل المفك في الفتحة الموجودة بين القاعدة واللوحه الأمامية ثم افتح القاعدة. ضع وعاء مقلطح وواسع أسفل فلتر الماء لجمع ماء الصرف. أدر الفلتر ببطء عكس اتجاه حركة عقارب الساعة إلى أن يفرغ الماء بالكامل. اترك الماء يتدفق للخارج دون إزالة الفلتر. عند امتلاء الوعاء، أغلق فلتر الماء من خلال إدارته في اتجاه حركة عقارب الساعة. قم بتفريغ الوعاء. كرر هذه العملية إلى أن يتم تصريف الماء بالكامل.

التغلب على الأعطال

قد لا تعمل الغسالة في بعض الأحيان بشكل صحيح لعدة أسباب. وقبل الاتصال بمركز خدمة ما بعد البيع، نوصي بالتحقق ما إذا كان من السهل معالجة العطل أم لا من خلال استخدام القائمة التالية.

الاختلالات:	الأسباب المحتملة / الحلول:
الغسالة لا تقوم بالتشغيل.	- لم يتم إدخال القابس في المقبس الكهربائي، أو غير متصل بالقدر الكافي. - حدث عطل كهربائي. - الباب غير مغلق بأكمله.
دورة الغسل لا تبدأ.	- لم يتم الضغط على زر "التشغيل/الإيقاف" (1). - لم يتم الضغط على زر "بدء التشغيل/الإيقاف المؤقت" (2). - صنبور الماء غير مفتوح. - تم ضبط "تأجيل بدء التشغيل" (3).
الغسالة لا تقوم بملء الماء (يظهر البيان "h2o" على وحدة العرض). تصدر "صافرة" كل خمس ثوان.	- خرطوم سحب الماء غير متصل بالصنبور. - الخرطوم مثني. - صنبور الماء غير مفتوح. - تم إيقاف مصدر الإمداد بالماء. - لا يوجد ضغط كافٍ.
الغسالة تقوم بتعبئة وتصريف الماء باستمرار.	- لم يتم الضغط على زر "بدء التشغيل/الإيقاف المؤقت" (2). - لم يتم تركيب خرطوم التصريف على بُعد يتراوح من 65 سم إلى 100 سم من الأرض. - طرف خرطوم التصريف مغمر بالماء. - وصلة التصريف المثبتة بالحائط ليس بها فتحة تهوية. - إذا استمرت المشكلة في الظهور بعد القيام بهذه الفحوصات، أغلق صنبور الماء، أوقف الغسالة واتصل بمركز خدمة ما بعد البيع. إذا كنت تسكن في أعلى طابق بالمبنى، فقد يكون للسحب تأثيرا يجعل الغسالة تقوم بتعبئة وتصريف الماء باستمرار. ويتوفر بالأسواق الصمامات الخاصة المانعة للسحب لمنع وقوع مثل هذا النوع من الأعطال.
الغسالة لا تقوم بتصريف الماء أو لا تقوم بالعصر.	- البرنامج لا يشتمل على وظيفة التصريف: مع برامج محددة يجب تفعيل يدويًا. - خرطوم التصريف مثني. - ماسورة التصريف مسدودة.
الغسالة تهتز بشدة أثناء دورة العصر.	- أثناء التركيب، لم يتم تحرير قفل الحلة بشكل صحيح. - الغسالة ليست مستوية. - الغسالة محصورة بين الأثاث والحائط.
يتسرب الماء من الغسالة.	- لم يتم إحكام ربط خرطوم سحب الماء بشكل صحيح. - درج مادة الغسل مسدود. - لم يتم ربط خرطوم التصريف بشكل صحيح.
الجهاز مؤمن القفل وتومض وحدة العرض، مشيرة إلى كود الخطأ (على سبيل المثال F-01، F-..).	- أوقف الجهاز، افصل القابس عن المقبس، وانتظر لمدة دقيقة قبل إعادة تشغيله. - إذا استمر العطل، اتصل بمركز خدمة ما بعد البيع.
تتكون الرغايو بكميات كبيرة للغاية.	- مادة الغسل غير متناسبة مع الغسالة (يجب أن تحمل التعبيرات "مناسب للغسالات"، "مناسب للغسل اليدوي أو الغسالات الأوتوماتيك"، أو ما شابه). - الكمية زائدة عن الحد.
الباب مؤمن القفل، مع أو بدون بيان العطل، والبرنامج لا يقوم بالتشغيل.	- تم تأمين قفل الباب في حالة انقطاع الكهرباء. يستمر البرنامج أوتوماتيكيا بمجرد عودة التيار الكهربائي. - الغسالة في وضع الإيقاف. يستمر البرنامج أوتوماتيكيا بعد زوال سبب التوقف.

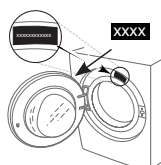

يمكنك تنزيل تعليمات الأمان ودليل المستخدم وكتيب المنتج وبيانات الطاقة من خلال:

زيارة موقعنا - docs.whirlpool.eu

- استخدام كود الاستجابة السريع QR
- وكحل بديل، اتصل بمركز خدمة ما بعد البيع (انظر رقم الهاتف الوارد في كتيب الضمان). يرجى عند الاتصال بخدمة ما بعد البيع ذكر الأكواد المذكورة على لوحة تمييز المنتج.



Whirlpool

400011641981